


SCAG[®]

POWER EQUIPMENT

MODEL STT

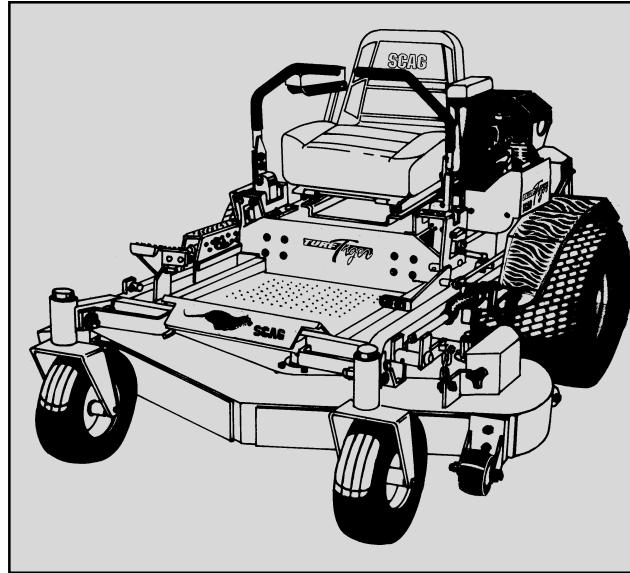

THIS MANUAL CONTAINS THE OPERATING INSTRUCTIONS AND SAFETY INFORMATION FOR YOUR SCAG MOWER. READING THIS MANUAL CAN PROVIDE YOU WITH ASSISTANCE IN MAINTENANCE AND ADJUSTMENT PROCEDURES TO KEEP YOUR MOWER PERFORMING TO MAXIMUM EFFICIENCY. THE SPECIFIC MODELS THAT THIS BOOK COVERS ARE CONTAINED ON THE INSIDE COVER. BEFORE OPERATING YOUR MACHINE, PLEASE READ ALL THE INFORMATION ENCLOSED.

OPERATOR'S MANUAL



WARNING:

FAILURE TO FOLLOW SAFE OPERATING PRACTICES MAY RESULT IN SERIOUS INJURY.

- * Keep all shields in place, especially the grass discharge chute.
- * Before performing any maintenance or service, stop the machine and remove the spark plug wire and ignition key.
- * If a mechanism becomes clogged, stop the engine before cleaning.
- * Keep hands, feet and clothing away from power-driven parts.
- * Read this manual completely as well as other manuals that came with your mower.
- * Keep others off the tractor (only one person at a time)

REMEMBER - YOUR MOWER IS ONLY AS SAFE AS THE OPERATOR!

Hazard control and accident prevention are dependent upon the awareness, concern, prudence, and proper training of the personnel involved in the operation, transport, maintenance, and storage of the equipment.

This manual covers the operating instructions
and illustrated parts list for:

STT52A-23CH with a serial number of 6670001 to 6679999
STT61A-23CH with a serial number of 6680001 to 6689999
STT52A-23KA with a serial number of 7200001 to 7209999
STT61A-23KA with a serial number of 7210001 to 7219999
STT52A-25CH with a serial number of 6700001 to 6709999
STT61A-25CH with a serial number of 6710001 to 6719999
STT52A-22KA with a serial number of 6740001 to 6749999
STT61A-22KA with a serial number of 6750001 to 6759999
STT61A-27KA with a serial number of 6760001 to 6769999
STT 72A-27KA with a serial number of 7140001 to 7149999

Always use the entire serial number listed on the serial number tag when referring to this product.



TABLE OF CONTENTS

SUBJECT	PAGE
Section 1 - General Information	
1.1 Introduction	1
1.2 Directional Reference	1
1.3 Servicing the Engine and Drive Train Components	1
1.3 Symbols	2-3
Section 2 - Safety Information	
2.1 Introduction	4
2.2 Signal Words	4
2.3 Considerations Before Operation	4
2.4 Operation Considerations	5
2.5 Maintenance Considerations	6
2.6 Safety and Instructional Decals	7
Section 3 - Specifications	8-9
Section 4 - Operating Instructions	
4.1 Controls and Instrument Identification	10
4.2 Safety Interlock System	11
4.3 Initial Run-In Procedures	11
4.4 Starting the Engine	12
4.5 Ground Travel and Steering	12
4.6 Engaging the Deck Drive	13
4.7 Hillside Operation	14
4.8 Parking the Mower	14
4.9 After Operation	14
4.10 Removing Clogged Material	15
4.11 Moving Mower with Engine Stopped	15
4.12 Recommendations for Mowing	15
4.13 Adjusting Cutting Height	16
Section 5 - Troubleshooting Cutting Conditions.....	17-19

TABLE OF CONTENTS (CONT'D)

SUBJECT	PAGE
Section 6 - Adjustments	
6.1 Parking Brake Adjustment	20
6.2 Travel Adjustments	20
6.3 Throttle Control and Choke Adjustments	22
6.4 Belt Adjustment	22
6.5 Belt Alignment	22
6.6 Cutter Deck Adjustments	23
Section 7 - Maintenance	
7.1 Maintenance Chart	25
7.2 Lubrication Fitting Points	26
7.3 Hydraulic System	27
7.4 Engine Oil	29
7.5 Engine Fuel System	30
7.6 Engine Air Cleaner	30
7.7 Battery	31
7.8 Drive Belts	32
7.9 Cutter Blades	32
7.10 Tires	33
7.11 Cutter Deck Gearbox	34
7.12 Kawasaki Cooling System	34
7.13 Body, Deck, Hopper and Upholstery	35
Section 8 - Replacement Parts	
STT52A, STT61A Cutter Deck	36-37
STT72A Cutter Deck	38-39
Cutter Deck Controls	40-41
Sheet Metal Components	42-43
Deck Drive Components	44-45
Engine and Attaching Parts (Kohler)	46-47
Engine and Attaching Parts (22HP Kawasaki)	48-49
Engine and Attaching Parts (23HP & 27HP Kawasaki)	50-51
Brake and Steering Components	52-53
Fuel and Hydraulic System for Kohler & Kawasaki w/52" & 61" Cutter Decks	54-55
Fuel and Hydraulic System for 27HP Kawasaki w/72" Cutter Deck	56-57
Electrical System (Kohler)	58-59
Electrical System (22HP Kawasaki)	60-61
Electrical System (23HP & 27HP Kawasaki)	62-63
Hydraulic Pump	64-65
Replacement Decals	66-67
Electrical Schematic (Kohler)	68
Electrical Schematic (22HP Kawasaki)	69
Electrical Schematic (23HP & 27HP Kawasaki)	70

GENERAL INFORMATION

1.1 INTRODUCTION

Your mower was built to the highest standards in the industry. However, the prolonged life and maximum efficiency of your mower depends on you following the operating, maintenance and adjustment instructions in this manual.

If additional information or service is needed, contact your Scag Power Equipment Dealer.

We encourage you to contact your dealer for repairs. All Scag dealers are informed of the latest methods to service this equipment and provide prompt and efficient service in the field or at their service shop. They carry a full line of Scag service parts.

USE OF OTHER THAN ORIGINAL SCAG REPLACEMENT PARTS WILL VOID THE WARRANTY.

When ordering parts, always give the model and serial number of your tractor. The serial number plate is located where shown in Figure 1-1.

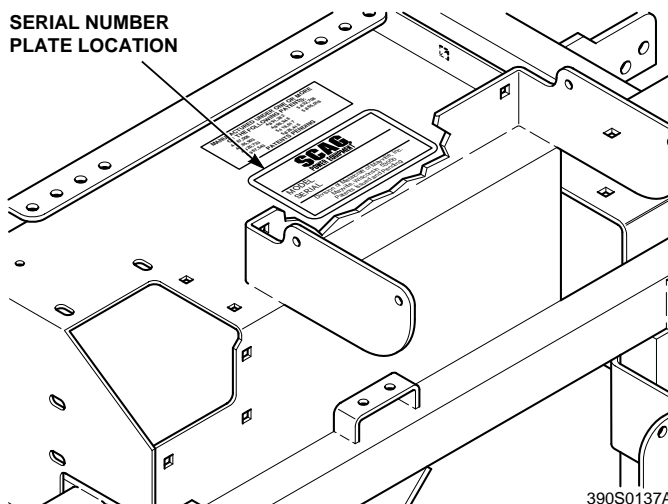


Figure 1-1 Tractor Serial Number Plate Location

For pictorial clarity, some illustrations and figures in this manual may show shields, guards or plates open or removed. Under no circumstances should your mower be operated without these devices in place.


All information is based upon product information available at the time of approval for printing. Scag Power Equipment reserves the right to make changes at any time without notice and without incurring any obligation.










1.2 DIRECTION REFERENCE











The “Right” and “Left”, “Front” and “Rear” of the machine are referenced from the operator’s right and left when seated in the normal operating position and facing the forward travel direction.

1.3 SERVICING THE ENGINE AND DRIVE TRAIN COMPONENTS

The detail servicing and repair of the engine, hydraulic pumps and gearboxes are not covered in this manual; only routine maintenance and general service instructions are provided. For service of these components during the limited warranty period, it is important to contact your Scag dealer or find a local authorized servicing agent of the component manufacturer. Any unauthorized work done on these components during the warranty period may void your warranty.

ISO Symbols		CE Mark
-------------	---	---------

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Choke		Transmission
	Parking Brake	 <small>48071S</small>	Spinning Blade
	On/Start		Spring Tension on Idler
	Off/Stop		Oil
			Falling Hazard

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Fast		Slow
	Continuously Variable - Linear		Cutting Element - Basic symbol
	Pinch Point		Cutting Element - Engage
	Hourmeter/Elapsed Operating Hours		Cutting Element - Disengage
	Thown Object Hazard Keep Bystanders Away		Read Operator's Oanual

SAFETY INFORMATION

2.1 INTRODUCTION

Your mower is only as safe as the operator. Carelessness or operator error may result in serious bodily injury or death. Hazard control and accident prevention are dependent upon the awareness, concern, prudence, and proper training of the personnel involved in the operation, transport, maintenance and storage of the equipment. Make sure every operator is properly trained and thoroughly familiar with all of the controls before operating the mower.

READ THIS OPERATOR’S MANUAL BEFORE ATTEMPTING TO START YOUR MOWER.

A replacement manual is available from your authorized Scag Service Dealer or by contacting Scag Power Equipment, Service Department at P.O. Box 152, Mayville, WI 53050. Please indicate the complete model and serial number of your Scag product when requesting replacement manuals.

2.2 SIGNAL WORDS



This symbol means “**Attention! Become Alert! Your Safety is Involved!**” The symbol is used with the following signal words to attract your attention to safety messages found on the decals on the machine and throughout this manual. The message that follows the symbol contains important information about safety. To avoid injury and possible death, carefully read the message! Be sure to fully understand the causes of possible injury or death.

Signal Word:

It is a distinctive word found on the safety decals on the machine and throughout this manual that alerts the viewer to the existence and relative degree of the hazard.

DANGER:

The signal word “DANGER” denotes that an extremely hazardous situation exists on or near the machine that could result in high probability of death or irreparable injury if proper precautions are not taken.

WARNING:

The signal word “WARNING” denotes that a hazard exists on or near the machine that can result in injury or death if proper precautions are not taken.

CAUTION:

The signal word “CAUTION” is a reminder of safety practices on or near the machine that could result in personal injury if proper precautions are not taken.

Your safety and the safety of others depends significantly upon your knowledge and understanding of all correct operating practices and procedures of this machine.

2.3 BEFORE OPERATION CONSIDERATIONS

1. **NEVER** allow children to operate this riding mower. Do not allow adults to operate this machine without proper instructions.
2. **DO NOT** mow when children and/or others are present.
3. Clear the area to be mowed of objects that could be picked up and thrown by the cutter blades.
4. **DO NOT** carry passengers.
5. **DO NOT** operate the machine under the influence of alcohol or drugs.
6. If the operator(s) or mechanic(s) cannot read English it is the owner's responsibility to explain this material to them.

Section 2

2.3 BEFORE OPERATION CONSIDERATIONS (CONT'D)

7. **DO NOT** wear loose fitting clothing that could get tangled in moving parts. Do not operate the machine wearing shorts; always wear adequate protective clothing including long pants. Wearing safety glasses, safety shoes and a helmet is advisable and is required by some local ordinances and insurance regulations.
8. Operator hearing protection is recommended, particularly for continuous operation of the mower. Wear suitable hearing protection. Prolonged exposure to loud noise can cause hearing impairment or loss.
9. Keep the machine and attachments in good operating condition. Keep all shields and safety devices in place. If a shield, safety device or decal is defective or damaged, repair or replace it before operating the machine.

WARNING:

This machine is equipped with an interlock system intended to protect the operator and others from injury. This is accomplished by preventing the engine from starting unless the deck drive is disengaged, the parking brake is on, the steering control levers are in the neutral position and the operator is in the seat. The system shuts off the engine if the operator leaves the seat with the deck drive engaged and/or the steering control levers are not in the neutral position and the parking brake is not engaged. Never operate equipment with the interlock system disconnected or malfunctioning.

10. Be sure the interlock switches are functioning correctly.
11. Fuel is flammable; handle it with care. Fill the fuel tank outdoors. Never fill it indoors. Use a funnel or spout to prevent spillage. Clean up any spillage before starting the engine.

12. **DO NOT** add fuel to a running or hot engine. Allow the engine to cool for several minutes before adding fuel.
13. Keep flammable objects (cigarettes, matches, etc.), open flames and sparks away from the fuel tank and fuel container.
14. Equipment must comply with the latest requirements per SAE J137 and/or ANSI/ASAE S279 when driven on public roads.

-NOTE-

If the mower is driven on public roads, it must comply with state and local ordinances as well as SAE J137 and/or ANSI / ASAE S279 requirements. Contact your local authorities for regulations and equipment requirements.

15. **DO NOT** operate without the side discharge chute installed and in the down position.
16. Check the blade mounting bolts at frequent intervals for proper tightness.
17. Make sure all hydraulic fluid connections are tight and all hydraulic hoses and lines are in good condition before starting the machine.

2.4 OPERATION CONSIDERATIONS

1. Know the function of all controls and how to stop quickly.
2. Reduce speed and exercise extreme caution on slopes and in sharp turns to prevent tipping or loss of control. Be especially cautious when changing directions on slopes.

WARNING:

DO NOT operate on steep slopes. To check a slope, attempt to back up it (with the cutter deck down). If the machine can back up the slope without the wheels slipping, reduce speed and use extreme caution. ALWAYS FOLLOW OSHA APPROVED OPERATION.

2.4 OPERATION CONSIDERATIONS (CONT'D)

3. To prevent tipping or loss of control, do not start or stop suddenly. Always avoid unnecessary turns and travel at reduced speed.
4. When using any attachment, never direct the discharge of material toward bystanders or allow anyone near the machine while in operation.
5. Before attempting to start the engine, with the operator in the seat, disengage power to the cutter deck, place the steering control levers in the neutral position and engage the parking brake.
6. If the mower discharge ever plugs, shut off the engine, remove the ignition key, and wait for all movement to stop before removing the obstruction. Do not use your hand to dislodge the clogged discharge chute. Use a stick or other device to remove clogged material.
7. Be alert for holes, rocks, roots and other hidden hazards in the terrain. Keep away from any dropoff. Beware of overhead obstructions (low limbs, etc.), underground obstacles (sprinklers, pipes, tree roots, etc.). Cautiously enter a new area. Be alert for hidden hazards.
8. Disengage power to cutter deck before backing up. Do not mow in reverse unless absolutely necessary and then only after observation of the entire area behind the mower.
9. **DO NOT** turn sharply. Use care when backing up.
10. Disengage power to cutter deck before crossing roads, walks or gravel drives.
11. Mow only in daylight or good artificial light.
12. Take all possible precautions when leaving the machine unattended, such as disengaging the mower, lowering the attachments, setting the parking brake, stopping the engine, and removing the key.

13. Disengage power to the attachments when transporting or when not in use.
14. The machine and attachments should be stopped and inspected for damage after striking a foreign object, and damage should be repaired before restarting and operating the machine.
15. **DO NOT** touch the engine or the muffler while the engine is running or immediately after stopping. These areas may be hot enough to cause a burn.
16. **DO NOT** run the engine inside a building or a confined area without proper ventilation. Exhaust fumes are hazardous and could cause death.

2.5 MAINTENANCE CONSIDERATIONS

1. Never make adjustments to the machine with the engine running unless specifically instructed to do so. If the engine is running, keep hands, feet, and clothing away from moving parts.
2. Remove the key from the ignition switch to prevent accidental starting of the engine when servicing or adjusting the machine.
3. Keep all nuts, bolts and screws tight, to ensure the machine is in safe working condition. Check blade mounting bolts frequently to be sure they are tight.
4. Do not change the engine governor settings or overspeed the engine. See the engine operator's manual for information on engine settings.
5. To reduce fire hazard, keep the engine free of grass, leaves, excessive grease, oil and dirt.



WARNING:



Hydraulic fluid is under high pressure. Keep body and hands away from pinholes or nozzles that eject hydraulic fluid under high pressure. If you need service on your hydraulic system, please see your authorized Scag dealer. If hydraulic fluid is injected into the skin, it must be surgically removed within a few hours by a doctor or gangrene may result.

Section 2

2.6 SAFETY AND INSTRUCTIONAL DECALS



481568

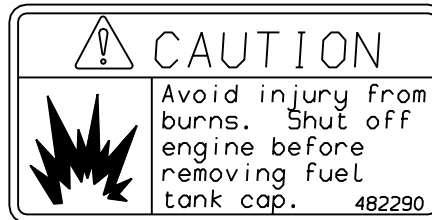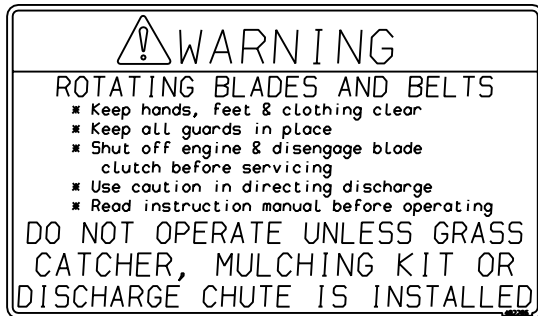


IMPORTANT ADJUSTMENT PROCEDURES

READ OPERATOR'S MANUAL FOR MORE DETAILS

Check tire pressure-
(Drive tires - 12 psi,
Caster tires - 25 psi)

NEUTRAL ADJUSTMENT

Loosen jam nuts

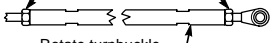

Rotate turnbuckle

With an operator in the seat, engine running, control levers in neutral and the parking brake disengaged - adjust control linkage. Loosen jam nuts. If wheel rotates forward, adjust turnbuckle CCW. If wheel rotates rearward, adjust turnbuckle CW. Adjust until drive wheel stops turning. Tighten jam nuts. Repeat for opposite side.

TRACKING ADJUSTMENT

If the machine pulls to the right, adjust LH control linkage CCW to slow left wheel. If the machine pulls to the left, adjust RH control linkage CCW to slow right wheel. Readjust neutral if necessary.

Gearbox lubricant:
SAE 80W90 gear oil

FREE WHEEL OPERATION

To move machine without running the engine, rotate both dump valve levers located at the LH side of the pumps CCW 1/2 turn to "freewheel" positions. Return levers to original position to operate the mower.

HYDRAULIC TANK FLUID LEVEL

Check hydraulic fluid level daily while fluid is cool. Fluid level should be 3-1/4" below top of filler neck. Fill with SAE 20W50 motor oil only.


IMPORTANT!:

Do not overfill. Room for hot fluid expansion must be allowed or resulting expansion may cause leaks in the system.

481588

START / DRIVE PROCEDURE

- ENGAGE PARKING BRAKE
- DISENGAGE MOWER DECK DRIVE
- MOVE CONTROL HANDLES TO NEUTRAL LOCK POSITION
- START ENGINE
- RELEASE PARKING BRAKE
- SELECT FORWARD OR REVERSE SPEED WITH HYDRO CONTROL HANDLES



BEFORE OPERATING

Read operator's manual
Make sure guards, shields & safety devices are in place & working
Clear area of children, bystanders & debris
Train operator

482287

390S0150A

SPECIFICATIONS

3.1 ENGINE

General Type	Heavy Duty Industrial/Commercial Gasoline
Brand	Kohler, 23HP (Spec. #PS-76523) 25HP (Spec. #PS-68645) Kawasaki, 22HP (Spec. #FD661D-AS0201) Kawasaki, 23HP (Spec. #FD671D-AS01) Kawasaki, 27HP (Spec. #FD750D-AS04)
Model.....	Kohler Command, Kaw. FD661D, Kaw. FD671D, Kaw. FD750D
Horsepower	23 HP at 3600 RPM (Model STT52&52A-23CH, STT61&61A-23CH) 25 HP at 3600 RPM (Model STT52&52A-25CH, STT61&61A-25CH) 22 HP at 3600 RPM (Model STT52A-22KA, STT61A-22KA) 23 HP at 3600 RPM (Model STT52A-23KA, STT61A-23KA) 27 HP at 3600 RPM (Model STT61A-27KA, STT72A-27KA)
Type	4 Cycle Gasoline, Twin Cylinder, Horizontal Shaft
Displacement	23HP Kohler 674 cc., 25HP Kohler 725cc. 22HP Kaw. 617cc., 23HP Kaw. 671cc., 27HP Kaw. 745cc.
Cylinders	2 with Cast Iron Sleeves
Governor	Mechanical Type with Variable Speed Control Set At 3600 RPM
Idle Speed	1400 RPM
Kohler Fuel Pump Group	Mechanical Type Fuel Pump with In-Line Fuel Filter, Fixed Jet Carburetor with Smart-Choke™ and Fuel Shutdown Solenoid
Kawasaki Fuel Pump Group	Electric Fuel Pump with In-Line Fuel Filter, Fixed Jet Downdraft Carburetor.
Fuel	Non-Leaded Gasoline with a Minimum Octane Rating of 87
Oil Pump Group	Positive Displacement Gerotor™ Oil Pump with Remote Oil Filter
Starter	Electric Starting with Solenoid Shift Starter
Belts:	Kevlar cord. Self-adjusting, Self-tightening
Deck Drive Belt	Scag Part Number - 481460
Pump Drive Belt	Scag Part Number - 482171
Kawasaki Fan Belt	Part Number - Mitsubishi 59011-2056 (Avail. Through Kawasaki)

3.2 ELECTRICAL

Battery	12 Volt
Charging System	Alternator
Charging Output	12 Volt, 15 Amp
System Polarity	Negative Ground
Starter	12 Volt Electric Ring Gear Type, Key and Solenoid Operated
Interlock Switches	Seat, Neutral Control, Mower Engagement (BBC), Parking Brake
Instrument Panel	Ammeter, Hourmeter, Key Switch, Throttle Lever, Manual Choke, BBC Switch, Fuses and Safety Start module, Temp. gauge (KA)
Fuses	Two (2) 20 Amp

3.3 TRACTOR

Drive System	Hydraulic Drive with Two Variable Displacement Pumps and Two Cast-iron High Torque Motors
Hydrostatic Pumps	Two Hydro-Gear™ BDP 10L Pumps with Dump Valves for movement without running the engine
Drive Wheel Motors	Two Ross Model MB 15 cu. inch Cast-iron High Torque Motors
Steering/Travel Control	Twin Lever Fingertip Steering Control with Individual Control to Each Wheel with Gas Spring Dampers
Parking Brake	Lever Actuated Linkage to Brakes on Both Drive Wheel Axles
Wheels:	
(2) Front Caster	13 X 5.00 Four-Ply
(2) Drive	23 X 10.5 X 12 Four-Ply Pneumatic Tubeless, Radius Edge, 52" 24X12.0X12 Four-Ply Pneumatic Tubeless, Radius Edge, 61"
Fuel Tank	10-Gallon Seamless Polyethylene Tank with Fuel Gauge Fill Cap
Tire Pressure:	
Front Caster	25 PSI
Drive	12 PSI
Seat	Padded, Thick Cushion with tall back rest

Section 3

3.3 TRACTOR (CONT'D)

Travel Speed:	
Forward	0-10 MPH
Reverse	0-5 MPH

-NOTE-

The machine will travel at 10mph for transport purposes. For best cutting performance the forward travel speed should be adjusted depending upon the cutting conditions.

3.4 CUTTER DECK

Type:	Floating, Adjustable, Anti-scalping, Hybrid Design Combines Out-front and Belly-mount Designs
Construction:	10-gauge steel reinforced with 7-gauge (3/16") Support Plate. 7-gauge (3/16") deck skirt.
True Cutting Width:	52" (132.0 cm), 61" (155.0 cm)
Cutting Height Adjustment:	Foot Operated Lever Adjustment from Operator's Seat, 1.00" to 6.00" in 1/2" increments
Cutter Blades:197 Thick, Milled Edge, Wear Resistant Marbain™ SMT 52A: Three (3) 18" blades SMT 61A: Three (3) 21" blades
Blade Engagement:	Electric Blade Engagement Clutch with Control Panel Switch Connected to the Cutter Deck Gearbox through a Drive Shaft.
Discharge Opening:	Extra Wide 11.5" Discharge Opening with Spring Loaded Discharge Chute
Discharge Chute.....	Black, Polypropylene (Plastic), Flexible
Caster Wheels:	13x5.00 Four-Ply
Spindles:	Heavy-duty 1-1/8" Top Dimension Spindle Shaft, Cast Housing, Taper Roller Bearing, Low Maintenance with Top Access Grease Fitting and Grease Overfill Relief Poppet
Spindle Pulleys:	Cast-iron with Easily Removed Taper Hubs
Cutter Deck Belts:	B-section with Kevlar Cord. Self-adjusting, Self-tightening
SMT52	Scag Part Number - 482281
SMT61	Scag Part Number - 481558
Electric Clutch Type	Ogura Electric Clutch
Drive Shaft	Quick-disconnect Shaft With Two High Speed U-Joints

3.6 HYDRAULIC SYSTEM

Hydraulic Oil Filter	10 Micron Spin-on Element Type
Hydraulic Reservoir	Nylon; 6 Quart Capacity

3.7 WEIGHTS AND DIMENSIONS

	SMT52A	SMT61A	SMT72A
Length	78"	81.75"	79.0"
Tracking Width	51"	51"	56.0"
Overall Width	62"	72"	83.5"
Overall Height	30"	30"	46.0"
Operating Weight	1160#	1200#	1310#

3.8 PRODUCTIVITY

The following chart will aid you in determining how many acres your Scag mower will cut per day.

The chart is an estimate based on 8 hours per day cutting time at 4 MPH with an allowance for overlap and turns.

Cutting Width:	36"	48"	52"	61"	72"
Acres Per Day:	9.5	12.5	13.5	16	19

OPERATING INSTRUCTIONS

CAUTION:

Do not attempt to operate this mower unless you have read this manual. Learn the location and purpose of all controls and instruments before you operate this mower.

4.1 CONTROLS AND INSTRUMENT IDENTIFICATION

Before operating the mower, familiarize yourself with all mower and engine controls. Knowing the location, function and operation of these controls is important for safe and efficient operation of the mower.

- 1. Ignition Switch (Figure 4-1).** The ignition switch is used to start the engine and has three positions; OFF, ON, and START.
- 2. Mower Deck Switch (Figure 4-1).** Used to engage and disengage the mower drive system. Pulling up on the switch will engage the deck drive. Pushing down on the switch will disengage the deck drive.
- 3. Engine Choke Control (Figure 4-1).** Used to start a cold engine.
- 4. Engine Throttle Control (Figure 4-1).** Used to control the engine speed. Pushing the lever forward increases engine speed. Pulling the lever back decreases engine speed. Full back position is the IDLE position. Full forward is the cutting position.

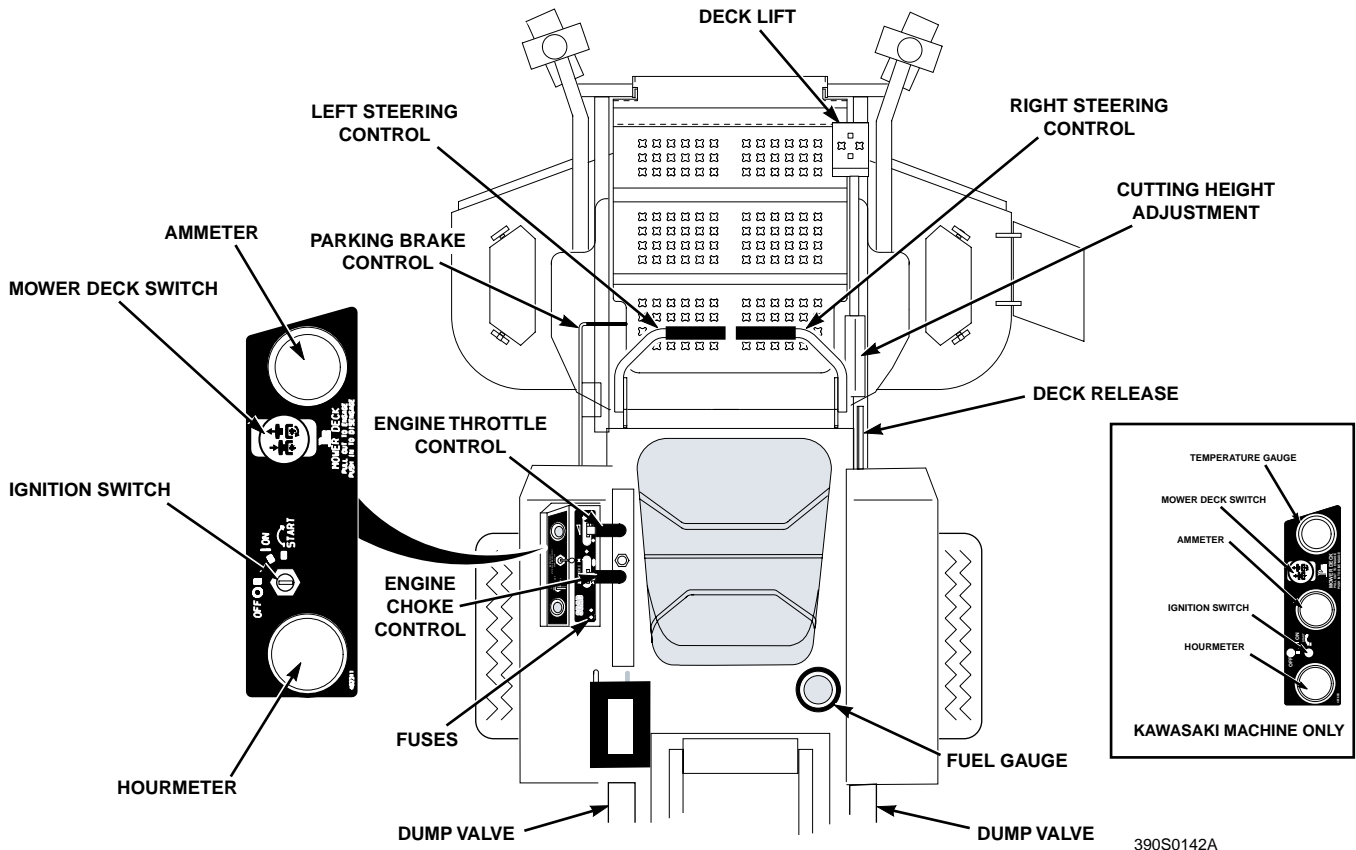


Figure 4-1 Controls and Instruments

Section 4

5. **Ammeter (Figure 4-1).** Indicates the condition of the charging system. When the engine is running the needle should be toward the positive end of the meter. If the needle is toward the negative end of the meter, this indicates a discharge condition and the machine should be taken in for service.
6. **Hourmeter (Figure 4-1).** Indicates the number of hours the engine has been operated. It operates whenever the ignition key switch is in the ON position. It can be used to keep track of maintenance intervals and the amount of time required to perform various tasks.
7. **Fuse Holders (Figure 4-1).** Two 20-amp fuses protect the mower's electrical system. To replace fuses, pull fuse out of the socket and install a new fuse.
8. **Left Steering Control (Figure 4-1).** Used to control the mower's left wheel when traveling forward or reverse.
9. **Right Steering Control (Figure 4-1).** Used to control the mower's right wheel when traveling forward or reverse.
10. **Parking Brake Control (Figure 4-1).** Used to engage and disengage the parking brakes. Pull the lever back to engage the parking brakes. Push the lever forward to disengage the parking brakes.
11. **Fuel Tank Gauge (Figure 4-1).** Indicates the amount of fuel in the fuel tank.
12. **Dump Valve Control Levers (Figure 4-2).** Located on the hydraulic pumps, used to "free-wheel" the mower. Rotating the levers clockwise until they stop allows the unit to move under hydraulic power. The levers must be in this position during operation of the mower. Rotating the levers counter-clockwise allows the mower to be moved by hand (free-wheeling).
13. **Deck Lift Foot Lever (Figure 4-1).** Used to raise and lower the cutter deck.
14. **Cutting Height Adjustment (Figure 4-1).** Used to set the cutter deck at the desired cutting height.

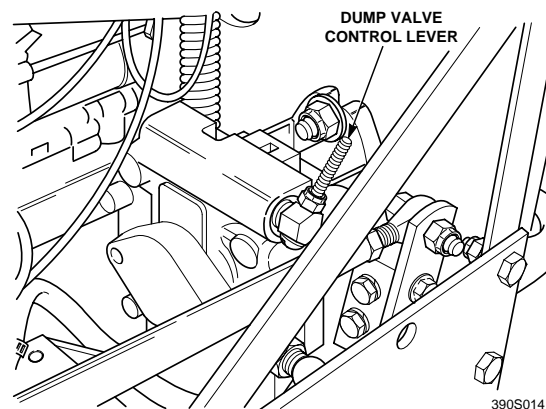


Figure 4-2 Dump Valve Control

15. **Deck Release Lever (Figure 4-1).** Used to lock the cutter deck in the transport position. Push the foot pedal forward and lift up on the release lever to release the cutter deck for normal mowing.
16. **Temperature Gauge (Figure 4-1).** Indicates the operating temperature of the engine. *Used on mowers with the Kawasaki liquid cooled engine only.*

4.2 SAFETY INTERLOCK SYSTEM

The mower is equipped with a safety interlock system that prevents the engine from starting unless the deck drive is disengaged, the parking brake is engaged, the steering control levers are in the neutral position and the operator is in the seat. The interlock system shuts off the engine if the operator leaves the seat with the steering control levers not in the neutral position and/or the cutter blades engaged and the parking brake not engaged.

WARNING:

Never operate the mower with the interlock system disconnected or malfunctioning. Do not disengage or bypass any switch; injury to yourself and others or property damage could result.

4.3 INITIAL RUN-IN PROCEDURES (First Day of Use or Approximately 10 Hours)

1. Check all belts for proper alignment and wear at 2, 4 and 8 hours.

2. Change the engine oil and oil filter after the first 5 hours of operation. (See Section 7.4.)
3. Check hydraulic oil level in reservoir. (See Section 7.3.)
4. Check for loose hardware. Tighten as needed.
5. Check interlock system for proper operation. (See Section 4.2.)
6. Check tire pressure. Adjust pressure if necessary. (See Section 7.10.)

4.4 STARTING THE ENGINE



CAUTION:

DO NOT USE STARTING FLUIDS. Use of starting fluids in the air intake system may be potentially explosive or cause a “runaway” engine condition that could result in engine damage and/or personal injury.

1. Be sure the fuel shutoff valve, located behind the operator's seat, is completely open. (See section 7.5.)
2. Sit in the operator's seat and place the steering control levers in the neutral position.
3. Engage the parking brake.
4. If the engine is cold, choke the engine as needed.
5. Move the engine throttle control to about half engine speed.
6. Turn the ignition key to the START position and release the key as soon as the engine starts. Do not hold the key in the START position for more than 15 seconds at a time. Allow at least 60 seconds between each cranking attempt to prevent overheating of the starter motor. Prolonged cranking can damage the starter motor and shorten battery life.
7. Allow engine to warm before operating the mower.

4.5 GROUND TRAVEL AND STEERING

-IMPORTANT-

If you are not familiar with the operation of a machine with lever steering and/or hydrostatic transmissions, the steering and ground speed operations should be learned and practiced in an open area, away from buildings, fences, or obstructions. Practice until you are comfortable with the handling of the machine before attempting to mow. Learn the operation on flat ground before operating on slopes.

-IMPORTANT-

Start practicing with a slow engine speed and slow forward travel.

Learn to feather the steering controls to obtain a smooth operating action.

Practice operating the mower until you are comfortable with the controls before proceeding to mow.

Forward Travel

To travel forward with the mower, disengage the parking brake and slowly push the steering control levers forward an equal distance. The further the steering control levers are pushed forward the greater the forward speed will be. To increase the speed, push the steering control levers further forward and to decrease the speed, pull the steering control levers back.

To stop the forward travel, pull the steering control levers back to the neutral position.

To steer the mower left while traveling forward, pull the left steering lever back. The further the lever is pulled back, the quicker the mower will turn left.

To steer the mower right while traveling forward, pull the right steering control lever back. The further the lever is pulled back, the quicker the mower will turn right.

Section 4

-NOTE-

Smooth operation of the steering levers will produce smooth mower operation. While learning the operation of the steering controls, keep the travel speed low.

-IMPORTANT-

Do not travel forward over a curb. The mower will hang up on the curb. Raise the deck and travel backwards over the curb at a 45 degree angle. (see section 4.13 for cutter deck raising instructions)

Reverse Travel



CAUTION:
Disengage power to the mower before backing up. Do not mow in reverse unless absolutely necessary and then only after observation of the entire area behind the mower.



CAUTION:
Before backing up, observe behind the mower for persons and obstructions. Clear the area before backing up. Possible injury or property damage could occur.

To travel in reverse, pull both handles back. Keep the travel speed low while traveling in reverse.

-NOTE-

The mower will not travel straight in reverse. Slight adjustments must be made using the steering controls.

To steer left while traveling in reverse, allow the left steering control lever to move forward. The further the control is allowed to move forward, the quicker the mower will turn left.

To steer right while traveling in reverse, allow the right

steering control lever to move forward. The further the control is allowed to move forward, the quicker the mower will turn right.

To stop the reverse travel, allow the steering control levers to return to the neutral position. If the mower is to be parked, engage the parking brake.

4.6 ENGAGING THE DECK DRIVE (CUTTER BLADES)

1. Set the throttle at about 3/4 speed. Do not attempt to engage the deck drive at high speed as this shortens the electric clutch life — use only moderate engine speed when engaging the deck drive.
2. Engage the deck drive by pulling up on the yellow switch, located on the instrument panel, (Figure 4-3) to the engage position.

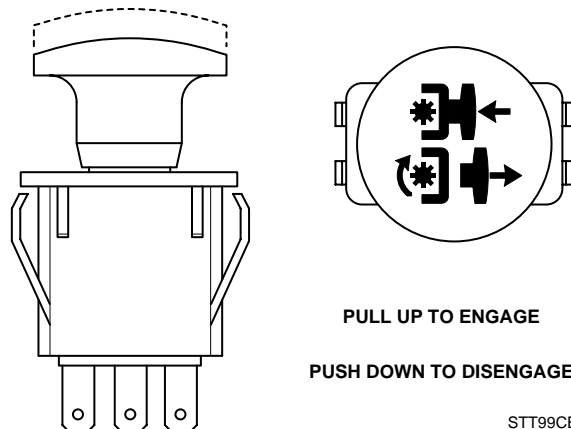


Figure 4-3 Cutter Engage Switch

-NOTE-

A squealing noise may be heard when engaging or disengaging the deck drive. It is caused by the electric clutch plates meshing as the mower comes up to speed.

3. To disengage the deck drive, push the switch in to the disengage position.
4. Always operate the engine at full throttle to properly maintain cutting speed. If the engine starts to lug down, reduce the forward speed and allow the engine to operate at maximum RPM.

4.7 HILLSIDE OPERATION

 **WARNING:**

DO NOT operate on steep slopes. To check a slope, attempt to back up it (with the cutter deck down). If the machine can back up the slope without the wheels slipping, reduce speed and use extreme caution. ALWAYS FOLLOW OSHA APPROVED OPERATION.

1. The mower has been designed for good traction and stability under normal mowing conditions. However, caution must be used when traveling on slopes, especially when the grass is wet. Wet grass reduces traction and steering control.
2. To prevent tipping or loss of control, do not start or stop suddenly, avoid unnecessary turns and travel at reduced speed.
3. Keep tires properly inflated.

4.8 PARKING THE MOWER

1. Place the steering control levers in the neutral position.
2. Disengage the cutter blades
3. Slow the engine to idle speed.
4. Engage the parking brake.
5. Turn the ignition key to the OFF position and remove the key.

4.9 AFTER OPERATION

1. Wash the entire mower after each use. Do not use high pressure spray or direct the spray onto electrical components.

-IMPORTANT-

Do not wash a hot or running engine. Cold water will damage the engine. Use compressed air to clean the engine if it is hot.

2. Keep the entire mower clean to inhibit serious heat damage to the engine or hydraulic oil circuit.
3. Check the drive belts for proper alignment and any signs of wear. Correct and adjust if necessary.

 **DANGER:**

To avoid injury from burns, allow the mower to cool before removing the fuel tank cap and refueling.

4. After the mower has cooled down, fill the fuel tank with fresh, clean fuel at the end of every day of operation.
5. Check the tire pressure. Adjust pressure if necessary.

Section 4

4.10 REMOVING CLOGGED MATERIAL



DANGER:

ROTATING BLADES

NEVER PUT YOUR HANDS INTO THE DISCHARGE CHUTE FOR ANY REASON! Shut off the engine and remove the key and only then use a stick or similar object to remove material if clogging has occurred.

1. If the discharge chute becomes clogged, shut off the engine and remove the ignition key. Using a stick or similar item, dislodge the clogged material. Then resume normal mowing.

4.11 MOVING MOWER WITH ENGINE STOPPED

To “free-wheel” or move the mower around without the engine running, place the dump valve levers in the FREE-WHEEL position (Figure 4-2). Disengage the parking brake and move the mower by hand. The dump valve levers must be returned to the DRIVE position to drive the mower.

4.12 RECOMMENDATIONS FOR MOWING

1. Do not mow with dull blades. A dull blade will tear grass, resulting in poor lawn appearance and require extra power.
2. The discharge chute must not be removed and must be kept in the lowest position to deflect grass clippings and thrown objects downward. Direct the side discharge away from sidewalks or streets to minimize cleanup of clippings. When mowing close to obstacles, direct the discharge away from the obstacles to reduce the chance of property damage by thrown objects.
3. Cut grass when it is dry and not too tall. Do not cut grass too short (cut off 1/3 or less of existing grass for best appearance). Mow frequently.
4. Keep mower and discharge chute clean.

5. When mowing wet or tall grass, mow the grass twice. Raise the mower to the highest setting for the first pass and then make a second pass to the desired height.
6. Use a slow travel speed for trimming purposes.
7. Operate the engine at full throttle for best cutting. Mowing with a lower RPM causes the mower to tear the grass. The engine is designed to be operated at full speed.
8. Use the alternate stripe pattern for best lawn appearance. Vary the direction of the stripe each time the grass is mowed to avoid wear patterns in the grass.


4.13 ADJUSTING CUTTING HEIGHT

The mower deck can be adjusted from a height of 1-inch to 6 inches at 1/2-inch intervals. To adjust the cutting height:

WARNING:


Do not adjust the cutting height with the mower blades rotating. Disengage the power to the cutter blades and then adjust cutting height.

1. Disengage the power to the cutter blades.
2. Push the cutting height adjustment foot pedal all the way forward using your right foot until it locks in place. (Figure 4-6).
3. Insert the lanyard pin into the cutting height index at the desired cutting height. Push forward on the deck lift foot lever, hold in place and lift up on the deck release lever, (Figure 4-7). Slowly release the foot pedal. A deck height decal is located on the cutting height index as an aid in adjusting the deck to the desired height. (Figure 4-6).

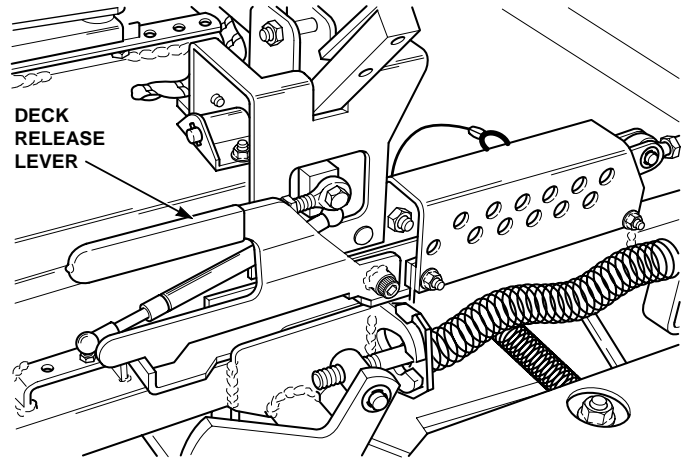

390S0151




Figure 4-7 Deck Release Lever

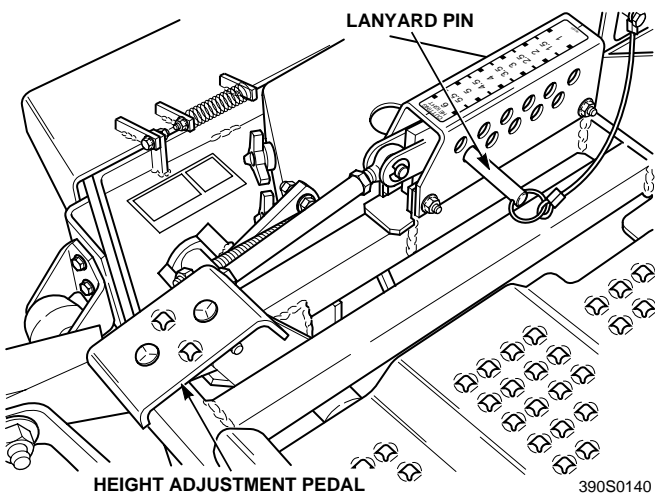




390S0140

Figure 4-6 Adjusting Cutting Height




TROUBLESHOOTING CUTTING CONDITIONS

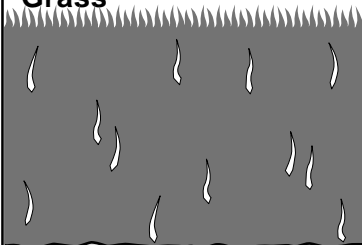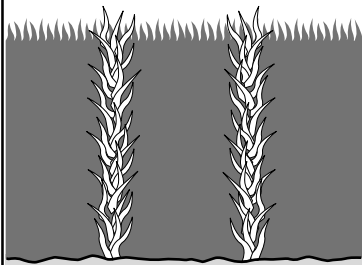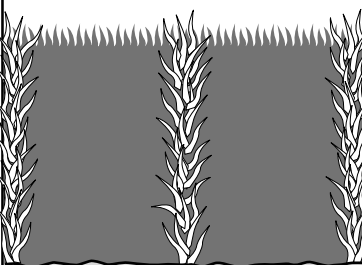CONDITION	CAUSE	CURE
<p>Stringers - Occasional Blades of Uncut Grass</p>  <p>Width of Deck</p> <p>SGB020</p>	Low engine RPM	Run engine at full RPM
	Ground speed too fast	Slow speed to adjust for conditions
	Wet grass	Cut grass after it has dried out
	Dull blades, incorrect sharpening	Sharpen blades
	Deck plugged, grass accumulation	Clean underside of deck
<p>Streaking - Strips of Uncut Grass in Cutting Path</p>  <p>Width of Deck</p> <p>SGB018</p>	Dull, worn blades	Sharpen blades
	Incorrect blade sharpening	Sharpen blades
	Low engine RPM	Run engine at full RPM
	Belt slipping	Adjust belt tension
	Deck plugged, grass accumulation	Clean underside of deck
	Ground speed too fast	Slow speed to adjust for conditions
	Wet grass	Cut grass after it has dried out
	Bent blades	Replace blades
<p>Streaking - Strips of Uncut Grass Between Cutting Paths</p>  <p>Width of Deck Width of Deck</p> <p>SGB019</p>	Not enough overlapping between rows	Increase the overlap of each pass

TROUBLESHOOTING (CONT'D)

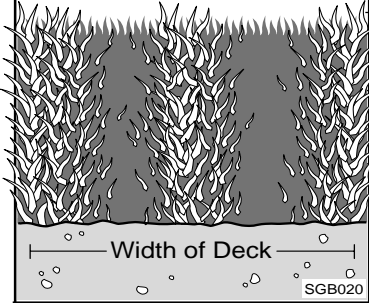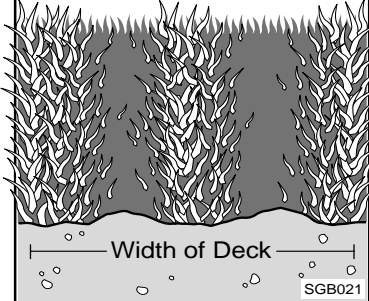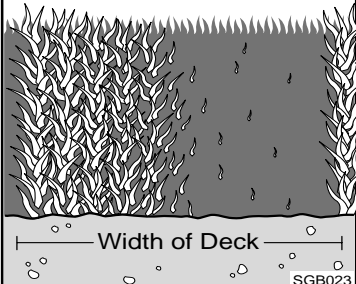CONDITION	CAUSE	CURE
<p>Uneven Cut on Flat Ground - Wavy High-Low Appearance, Scalloped Cut, or Rough Contour</p>  <p>Width of Deck SGB020</p>	Lift worn from blade	Replace blade
	Blade upside down	Mount with cutting edge toward ground
	Deck plugged, grass accumulation	Clean underside of deck
	Too much blade angle (deck pitch)	Adjust pitch and level
	Deck mounted improperly	See your authorized SCAG dealer
	Bent spindle area	See your authorized SCAG dealer
	Dull blade	Sharpen blade
<p>Uneven Cut on Uneven Ground - Wavy Appearance, High-Low Scalloped Cut, or Rough Contour</p>  <p>Width of Deck SGB021</p>	Uneven ground	May need to reduce ground speed, raise cutting height, and/or change direction of cut
<p>Sloping Ridge Across Width of Cutting Path</p>  <p>Width of Deck SGB023</p>	Tire pressures not equal	Check and adjust tire pressure
	Wheels uneven	Check and adjust tire pressure
	Deck mounted incorrectly	See your authorized SCAG dealer
	Deck not level side-to-side	Check for level and correct

TROUBLESHOOTING (CONT'D)

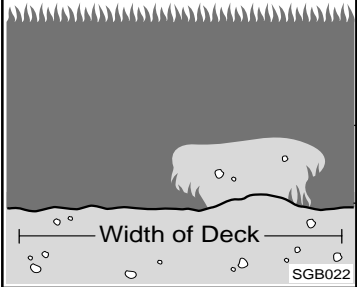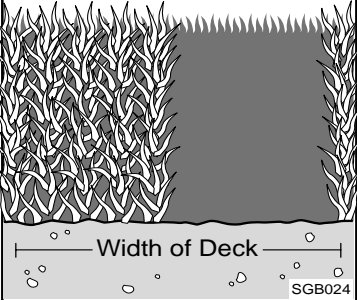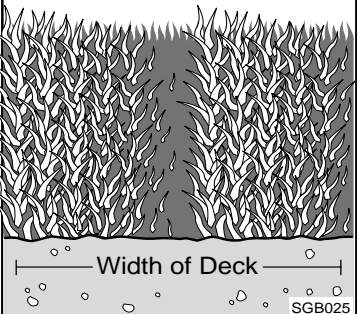CONDITION	CAUSE	CURE
<p>Scalping - Blades Hitting Dirt or Cutting Very Close to the Ground</p>  <p style="text-align: right; font-size: small;">SGB022</p>	Low tire pressures	Check and adjust pressures
	Ground speed too fast	Slow speed to adjust for conditions
	Cutting too low	May need to reduce ground speed, raise cutting height, change direction of cut, and/or change pitch and level
	Rough terrain	May need to reduce ground speed, raise cutting height, and/or change direction of cut
	Ground speed too fast	Slow speed to adjust for conditions
<p>Step Cut - Ridge in Center of Cutting path</p>  <p style="text-align: right; font-size: small;">SGB024</p>	Blades not mounted evenly	Adjust pitch and level
	Bent blade	Replace blade
	Internal spindle failure	See your authorized SCAG dealer
	Mounting of spindle incorrect	See your authorized SCAG dealer
<p>Slope Cut - Sloping Ridges Across Width of Cutting Path</p>  <p style="text-align: right; font-size: small;">SGB025</p>	Bent spindle mounting area	See your authorized SCAG dealer
	Internal spindle failure	See your authorized SCAG dealer
	Bent deck housing	See your authorized SCAG dealer

ADJUSTMENTS

6.1 PARKING BRAKE ADJUSTMENT

WARNING:

Do not operate the mower if the parking brake is not operable. Possible severe injury could result.

The parking brake linkage should be adjusted whenever the parking brake lever is placed in the “ENGAGE” position and the parking brake will allow the mower to move. If the following procedures do not allow you to engage the parking brake properly, contact your Scag dealer for further brake adjustments.

1. Position a floor jack under the rear of the machine. Raise the machine and support it to prevent it from falling. Block the caster wheels to prevent the machine from moving. Remove the drive wheels.
2. With the brake lever in the disengaged position, check the distance between the top of the frame tube and the bottom of the brake handle. The distance should be 2" to 2-1/4" (See Figure 6-1).
3. If the distance is not at the specified measurement, adjust by loosening the jam nuts at both ends of the brake control rod and turning the rod until the proper distance is achieved. (See Figure 6-1). Tighten the jam nuts.
4. With the brake in the engaged position, check the distance between the lower nut on the brake actuator rod and the brake actuator lever on the LH side of the machine. The distance should be 1/8" (See Figure 6-2).
5. If the distance is not at the specified measurement, loosen the jam nut at the clevis on the top of the brake actuator rod (See Figure 6-2).
6. Turn the bolt at the bottom of the brake actuator lever until the 1/8" measurement is achieved and tighten the jam nut at the clevis on the brake actuator rod. (See Figure 6-2).

7. Repeat steps 4-6 on the RH side of the machine.
8. Replace the drive wheels and test the brake.

-NOTE-

If this procedure does not achieve proper brake adjustment, please contact your authorized Scag dealer.

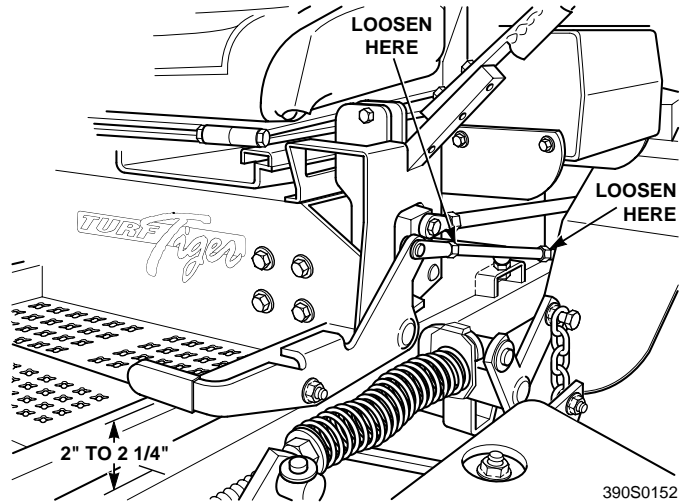


Figure 6-1. Brake Adjustment

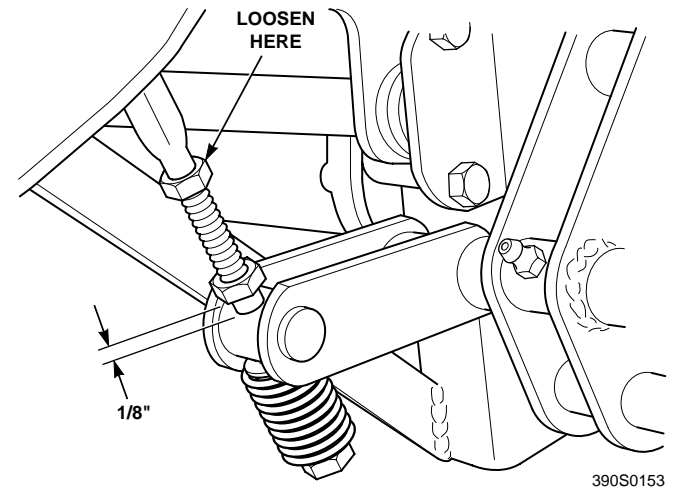


Figure 6-2. Brake Rod Adjustment

6.2 TRAVEL ADJUSTMENTS

Neutral or tracking adjustments will need to be made if:

- A. The steering control levers are in the neutral position and the machine creeps forward or backward. (Neutral Adjustment, See Page 21).

Section 6

- B. The steering control levers are in the full forward position and the mower pulls to one side or the other when traveling in a forward direction. (Tracking Adjustment, See Page 22).

Neutral Adjustment

1. Be sure the dump valve levers are in the run position and the steering control levers are in the neutral lock position.
2. With an operator in the seat, start the engine and disengage the parking brake.
3. Run the engine at full operating speed and check if the machine creeps forward or backwards.
4. Adjust the RH wheel by loosening the jam nuts on the steering control rod and turning the rod until the drive wheel turns in the forward direction. Turn the rod back until the drive wheel stops moving. Turn the rod an additional 1/2 turn. (See Figure 6-3).
5. Tighten the jam nuts and repeat for the LH wheel. (See Figure 6-4).
6. Actuate the steering control levers forward and reverse several times and return them to the neutral position.
7. Check that the drive wheels remained in neutral and readjust if necessary.
8. Check that the steering control levers hit the stop before the pumps reach full stroke. Adjust as needed.

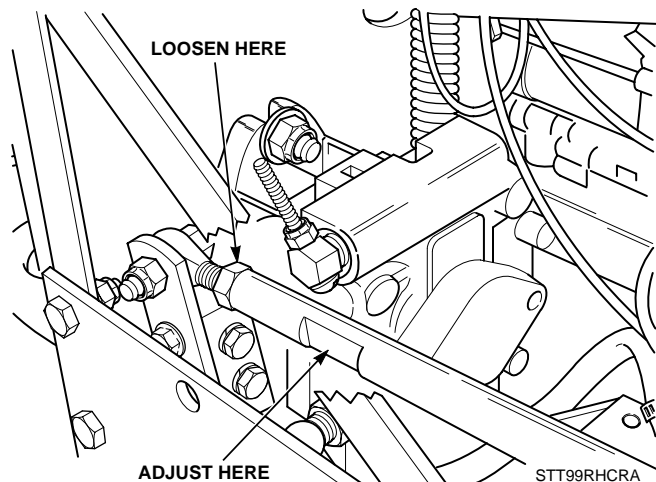
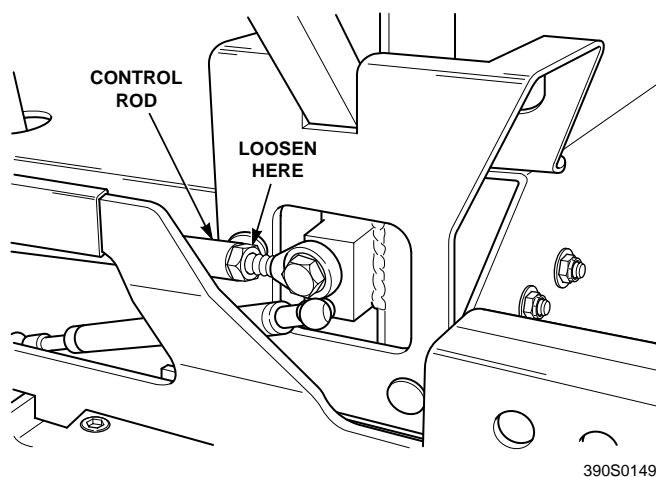


Figure 6-3. RH Steering Control Rod Adjustment

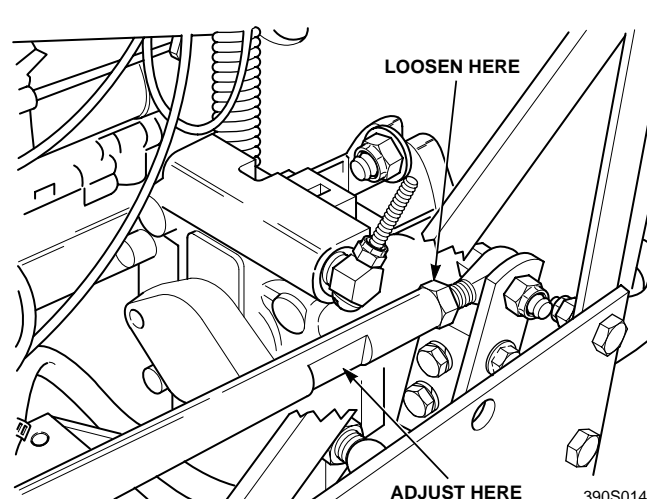
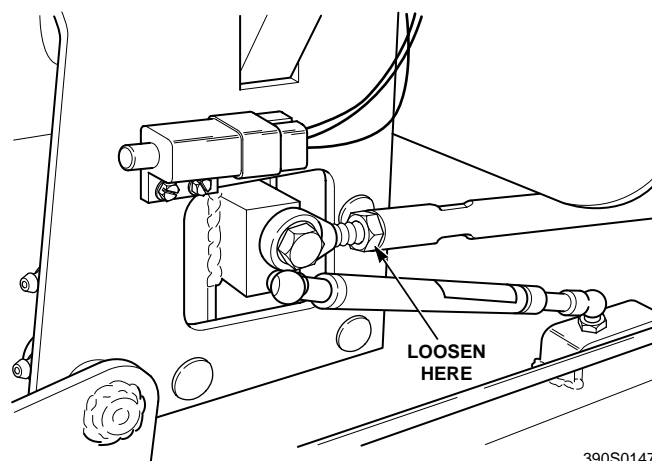


Figure 6-4. LH Steering Control Rod Adjustment

Tracking Adjustment

CAUTION:

Stop the engine and remove the key from the ignition before making any adjustments. Wait for all moving parts to come to a complete stop before beginning work.

CAUTION:

The engine and drive unit can get hot during operation causing burn injuries. Allow engine and drive components to cool before making any adjustments.

-NOTE-

Before proceeding with this adjustment, be sure that the caster wheels turn freely and that the tire pressure in the drive wheels is correct. If the tire pressure is not correct, the machine will pull to the side with the lower pressure.

1. If at full speed the mower pulls right, it is an indication that the left wheel is turning faster than the right wheel. To adjust this condition, proceed as follows:
 - A. Stop the machine and place the steering control levers in the neutral position. Loosen the lock nuts securing the ball joints at each end of the LH steering control rod. Rotate the control rod to lengthen the rod and tighten the lock nuts. This will cause the control rod to stroke the LH pump less, slowing down the LH wheel. (See Figure 6-4)

-NOTE-

If after making the adjustment as outlined in step 1A, the machine creeps forward or backward, the neutral adjustment must be made as described on page 21.

2. If at full speed the mower pulls left, it is an indication that the right wheel is turning faster than the left wheel. To adjust this condition, proceed as follows:

- A. Stop the machine and place the steering control levers in the neutral position. Loosen the lock nuts securing the ball joints at each end of the RH steering control rod. Rotate the control rod to lengthen the rod and tighten the lock nuts. This will cause the control rod to stroke the RH pump less, slowing down the RH wheel. (See Figure 6-3)

-NOTE-

If after making the adjustment as outlined in step 2A, the machine creeps forward or backward, the neutral adjustment must be made as described on page 21.

6.3 THROTTLE CONTROL AND CHOKE ADJUSTMENTS

These adjustments must be performed by your Scag dealer to ensure proper and efficient running of the engine. Should either need adjustment, contact your authorized Scag service center.

6.4 BELT ADJUSTMENT

WARNING:

Before removing any guards, shut the engine off and remove the ignition key.

All drive belts and cutter deck belts are spring loaded and self-tensioning. The belts should be checked periodically for proper alignment and wear.

6.5 BELT ALIGNMENT

Belt alignment is important for proper performance of your Scag mower. If you experience frequent belt wear or breakage, see your authorized Scag service center for belt adjustment.

Section 6

6.6 CUTTER DECK ADJUSTMENTS

Cutter deck level, pitch and height are set at the factory. However, if these adjustments should ever need to be made, the following procedures will aid in obtaining the proper cutter deck adjustment.

-NOTE-

Before proceeding with the cutter deck adjustments, be sure that all tires are properly inflated.

Cutter Deck Level

The cutter deck should be level from side-to-side for proper cutting performance. To check for level, be sure that the mower is on a flat, level surface, the tires are properly inflated and the cutter deck is set at the most common cutting height that you will use. On the RH side of the machine, check the distance from the bottom of the cutter deck to the floor. Next check the distance from the bottom of the cutter deck to the floor on the LH side of the machine. Both measurements should be the same. If the two measurements are different, the cutter deck level must be adjusted as follows:

1. On the front LH side of the cutter deck locate the cutter deck adjusting bolt. (See Figure 6.5)

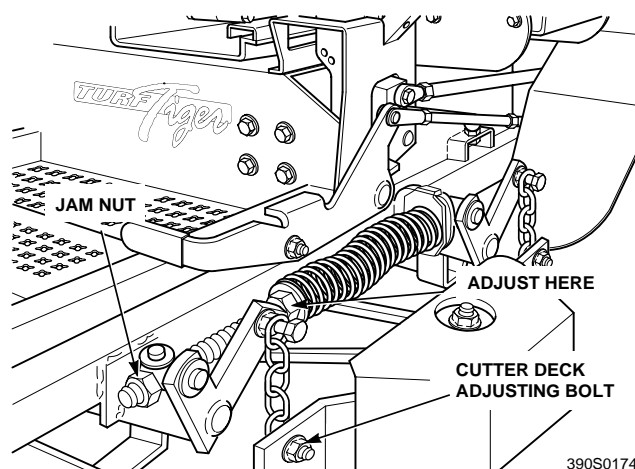


Figure 6-5. Cutter Deck Adjustment

2. Loosen the serrated flange hex nut and move the bolt up or down in the slot to adjust the cutter deck until the distance from the bottom of the cutter deck to the floor is the same as the measurement on the RH side of the machine.

3. Tighten the serrated hex nut to secure the cutter deck in the proper position.

Cutter Deck Pitch

The pitch of the cutter deck should be 1/4" down toward the front of the cutter deck for proper cutting performance. To check for proper deck pitch, be sure that the mower is on a flat, level surface and the tires are properly inflated.

Check the distance from the bottom of the cutter deck to the floor at the rear RH side of the cutter deck directly behind the cutter deck hanging chains. Next check the distance from the bottom of the cutter deck to the floor at the front RH side of the cutter deck directly in front of the cutter deck hanging chains. The measurement at the front of the cutter deck should be 1/4" lower than the measurement at the rear of the deck. Make these measurements at the LH side of the cutter deck also. If the measurement at the front of the deck is not 1/4" lower, the cutter deck pitch must be adjusted as follows:

1. Loosen the jam nuts on both adjusting rods. (See Figure 6.5)
2. Using a wrench on the spring compression nut (See Figure 6.5) turn the adjusting rods until the 1/4" forward pitch is obtained on both the RH and the LH side of the cutter deck. Tighten both jam nuts.

-NOTE-

To prevent the cutter deck from teetering, all four cutter deck hanging chains must have tension on them. If all four chains do not have tension on them and the deck teeters, you must readjust the cutter deck as outlined in the procedures above.

Cutter Deck Height

The cutter deck height adjustment is made to ensure that the cutter deck is cutting at the height indicated on the cutting height index gauge. To check for proper deck height, be sure that the mower is on a flat, level surface and the tires are properly inflated.

1. Place the cutter deck in the transport position. Loosen the jam nuts on both ends of the deck height control rod. (See Figure 6.6)

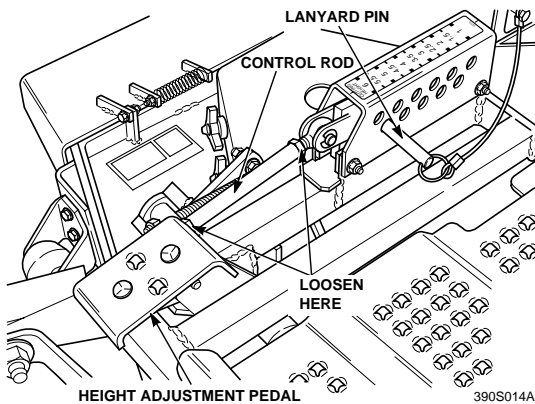


Figure 6-6. Cutter Deck Height Adjustment

2. Turn the control rod (See Figure 6.6) until there is a 1/4" space between the rear deck stop and the top of the cutter deck. (See Figure 6.7). Tighten the jam nuts on the control rod.

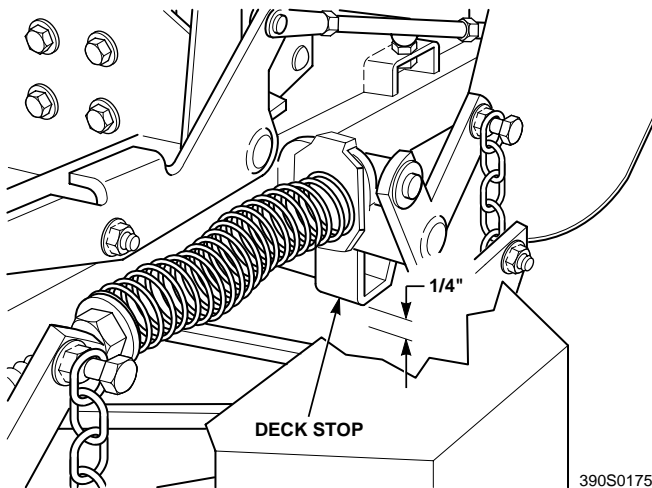


Figure 6-7. Cutter Deck Stop

3. Check the cutter deck cutting height by placing the lanyard pin in the 3" position on the cutting height index. Release the deck from the transport position and allow the deck to move to the 3" cutting height position.
4. Check the measurement from the floor to the cutter blade tip. If the measurement is not at 3", an adjustment can be made using the deck height control rod. (See Figure 6.6)

-NOTE-

If an adjustment had to be made, be sure that the cutter deck can easily be locked into the transport position.

MAINTENANCE

7.1 MAINTENANCE CHART - RECOMMENDED SERVICE INTERVALS

Break-In (First 10)	HOURS					Procedure	Comments
	8	40	100	200	500		
X						Check all hardware for tightness	
X						Check hydraulic oil level	See paragraph 7.3
X						Check all belts for proper alignment	See paragraph 7.8
X (First 5)						Change engine oil and filter	See paragraph 7.4
X						Check hydraulic hoses for leaks	Use extreme caution when checking the hydraulic hoses See paragraph 2.5
X						Check coolant level (Kawasaki only)	See paragraph 7.12
	X					Check engine oil level	See paragraph 7.4
	X					*Clean mower	See paragraph 7.13
	X					Check condition of blades	See paragraph 7.9
	X					Apply grease to fittings	See paragraph 7.2
	X					Check tire pressure	See paragraph 7.10
	X					Check coolant level (Kawasaki only)	See paragraph 7.12
		X				Check battery electrolyte level, clean battery posts and cables	See paragraph 7.7
		X				Check belts for proper alignment	See paragraph 7.8
			X			Apply grease to fittings	See paragraph 7.2
			X			Change engine oil	See paragraph 7.4
			X			*Clean air cleaner element	See paragraph 7.6
			X			Check lubricant in cutter deck gearbox	See paragraph 7.11

* Perform these maintenance procedures more frequently under extreme dusty or dirty conditions

MAINTENANCE CHART - RECOMMENDED SERVICE INTERVALS (CONT'D)

Break-In (First 10)	HOURS					Procedure	Comments
	8	40	100	200	500		
				X		Apply grease to fittings	See paragraph 7.2
				X		Check hardware for tightness	
				X		Change engine oil filter	See paragraph 7.4
				X		Check hydraulic oil level	See paragraph 7.3
					X	Replace engine fuel filter	See paragraph 7.5
					X	Drain hydraulic system and replace hydraulic oil	See paragraph 7.3 Use SAE 20W50 Motor Oil
					X	Replace hydraulic oil filter	See paragraph 7.3
					X	Replace cutter deck gearbox lubricant	See paragraph 7.11
					X	Change coolant (Kawasaki only)	See paragraph 7.12

7.2 LUBRICATION - GREASE FITTING LUBRICATION CHART (SEE FIGURE 7-1, PAGE 27)

LOCATION	LUBRICATION INTERVAL	LUBRICANT	NO. OF PLACES
1 Caster Wheel Pivot *	500 Hours/Yearly	Chassis Grease	2
2 Caster Wheel Bearings	100 Hours/Bi-Weekly	Chassis Grease	2
3 Brake Actuator	200 Hours/Monthly	Chassis Grease	2
4 Cutter Deck Bellcranks	100 Hours/Bi-Weekly	Chassis Grease	4
5 Cutter Deck Pusharms	100 Hours/Bi-Weekly	Chassis Grease	2
6 PTO Spindle	40 Hours/Weekly	+Lithium MP White Grease 2125	1
7 Cutter Deck Spindle	40 Hours/Weekly	+Lithium MP White Grease 2125	3
8 Brake Handle	200 Hours/Monthly	Chassis Grease	1
9 Cutter Deck Drive Shaft	100 Hours/Bi-Weekly	Chassis Grease	3


* **PROCEDURE:** Remove grease cap, part number 481559. Remove plug, part number 482028-01, and install standard grease zerk (p/n 48114-06). Apply grease to the fitting until new grease appears at the top of the caster extension. Remove the grease zerk and reinstall the plug. Reinstall the grease cap. Special tool, part number 47007, is recommended for use in the installation of the grease cap.

+ Compatible Greases:
 Mobilix #2 found at Mobil Service Stations
 Ronex MP found at Exxon Service Stations
 Super Lube MEP #2 & Super Stay-M #2 found at Conoco Stations
 Shell Alvania #2 found at Shell Service Stations
 Lidok EP #2 found at industrial shops

GREASE FITTING LUBRICATION

LUBRICANT / INTERVAL

- LITHIUM MP WHITE GREASE 2125
(40 HOURS / WEEKLY)
- CHASSIS GREASE
(100 HOURS / BI-MONTHLY)
- ⬡ CHASSIS GREASE
(200 HOURS / MONTHLY)
- △ CHASSIS GREASE
(500 HOURS / YEARLY)

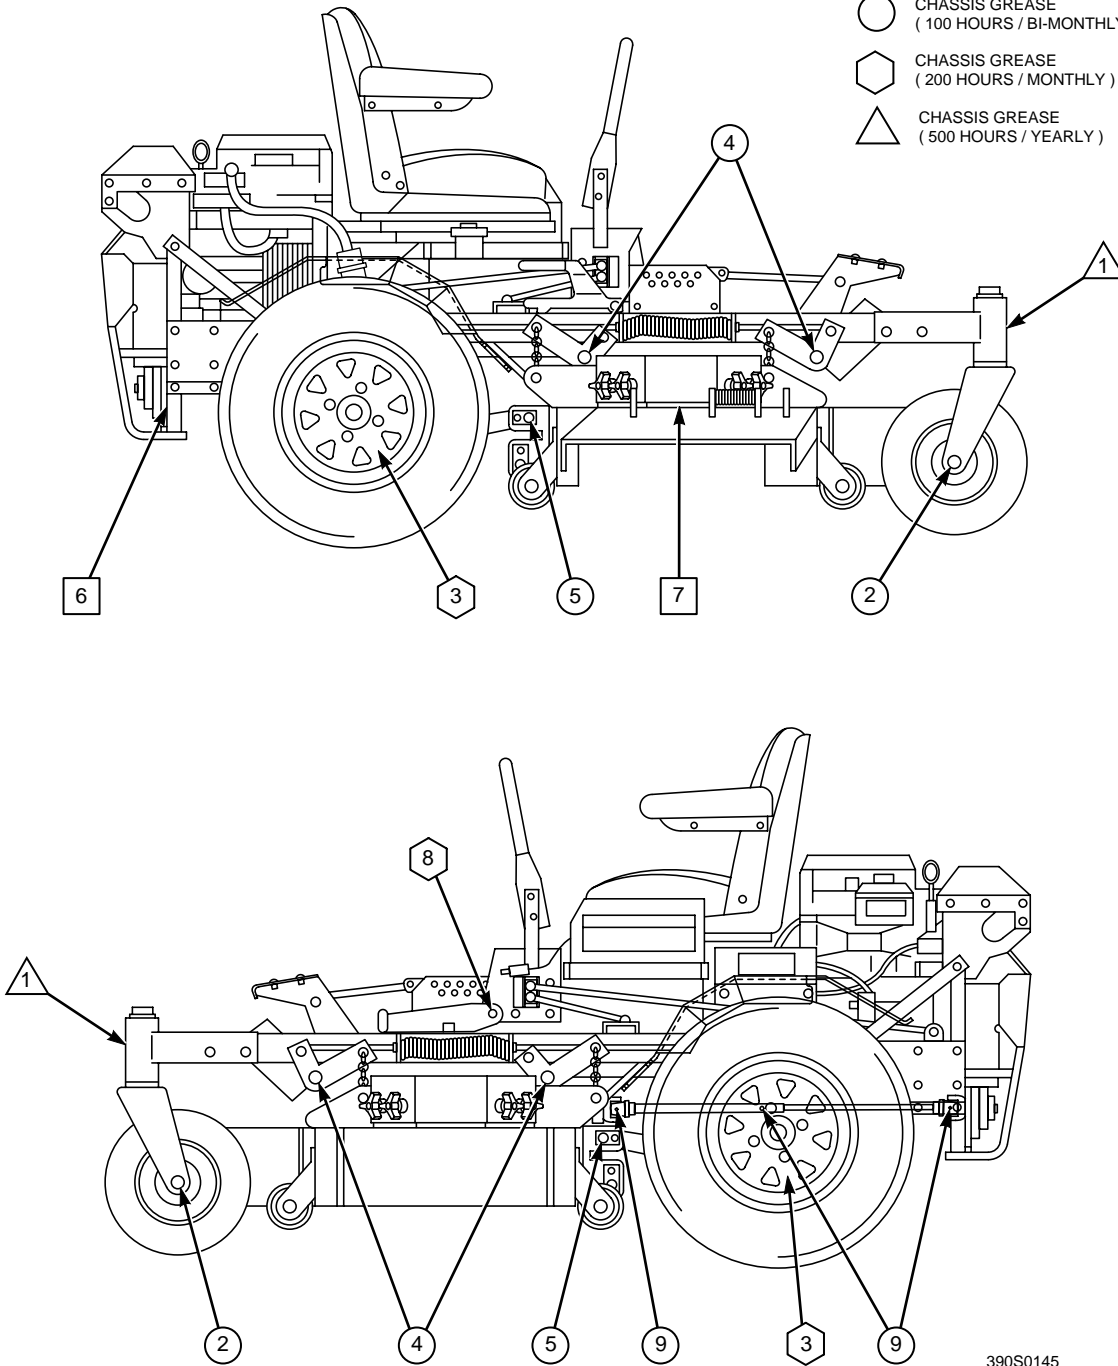

390S0145

Figure 7.1 Lubrication Fitting Points

7.3 HYDRAULIC SYSTEM

A. Checking Hydraulic Oil Level

The hydraulic oil level should be checked after the first 10 hours of operation. Thereafter, check the oil after every 200 hours of machine operation or monthly, whichever occurs first.

-IMPORTANT-

If the oil level is consistently low, check for leaks and correct immediately.

1. Wipe dirt and contaminants from around the reservoir cap. Remove the cap from the hydraulic oil reservoir.
2. Visually check the level of hydraulic oil. Hydraulic oil must be at least 3-1/4" inches from top of the filler neck. If the level cannot be determined visually, use a clean tape measure to check the level. If the fluid is low, add 20W50 motor oil. DO NOT overfill; (overfilling the oil reservoir may cause oil seepage).
3. Clean the fill cap and install it onto the reservoir.

B. Changing Hydraulic Oil

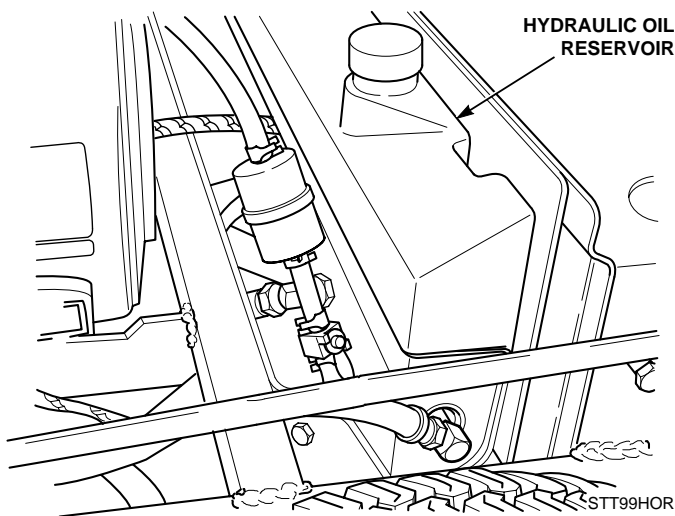


Figure 7-2 Hydraulic Oil Reservoir

The hydraulic oil should be changed after every 500 hours or annually, whichever occurs first. The oil should also be changed if the color of the fluid has become black or milky. A black color and/or a rancid odor usually indicates possible overheating of the oil, and a milky color usually indicates water in the hydraulic oil.

-NOTE-

The hydraulic oil should be changed if you notice the presence of water or a rancid odor to the hydraulic oil.

1. Park the mower on a level surface and stop the engine.
2. Place a suitable container under the hydraulic oil reservoir. Remove the fill cap from the reservoir. Remove the drain plug from the bottom of the reservoir. (See Figure 7-2). Allow the fluid to drain into the container and properly discard it.
3. Re-install the drain plug into the reservoir and be sure it is tight.

-NOTE-

Before refilling the hydraulic oil reservoir the hydraulic oil filter should be changed as outlined in section C on the next page.

4. Fill the reservoir to 3-1/4" inches from the top of the filler neck with 20W50 motor oil.
5. Replace the reservoir fill cap. Start the engine and drive forward and backward for two minutes. Check the oil level in the reservoir. If necessary, add oil to the reservoir.

Section 7

C. Changing Hydraulic Oil Filter Element

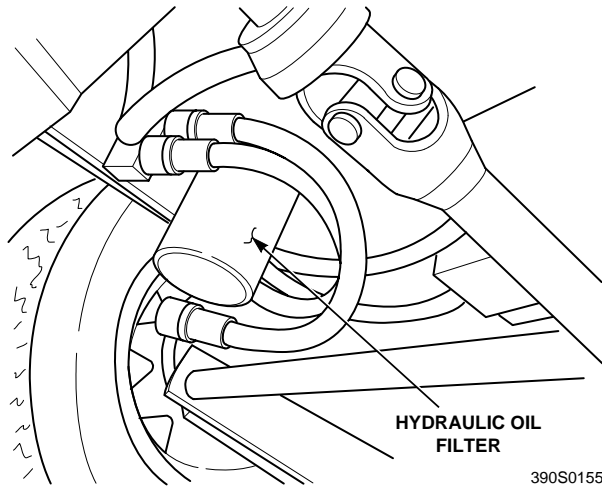


Figure 7-3 Hydraulic Oil Filter

The hydraulic oil filter should be changed after every 500 hours of operation or annually, whichever occurs first.

1. Remove the oil filter element (Figure 7-3) and properly discard it. Fill the new filter with clean oil and install the filter. Hand tighten only.
2. Run the engine at idle speed with the speed control lever in neutral for five minutes.
3. Check the oil level in the hydraulic tank. It must be 3-1/4" inches from the top of the filler neck. If necessary, add SAE 20W50 motor oil.

7.4 ENGINE OIL

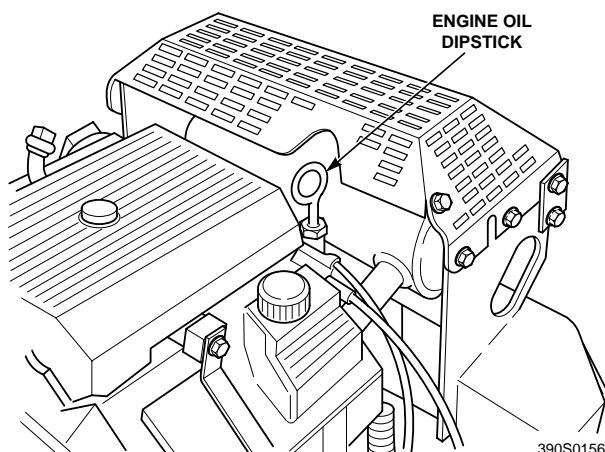


Figure 7-4 Engine Fill Stick

A. Checking Engine Crankcase Oil Level

The engine oil level should be checked after every 8 hours of operation or daily as instructed in the Engine Operator's Manual furnished with this mower.

B. Changing Engine Crankcase Oil

After the first 5 hours of operation, change the engine crankcase oil and replace the oil filter. Thereafter, change the engine crankcase oil after every 100 hours of operation or bi-weekly, whichever occurs first. Refer to the Engine Operator's Manual furnished with this mower for instructions.

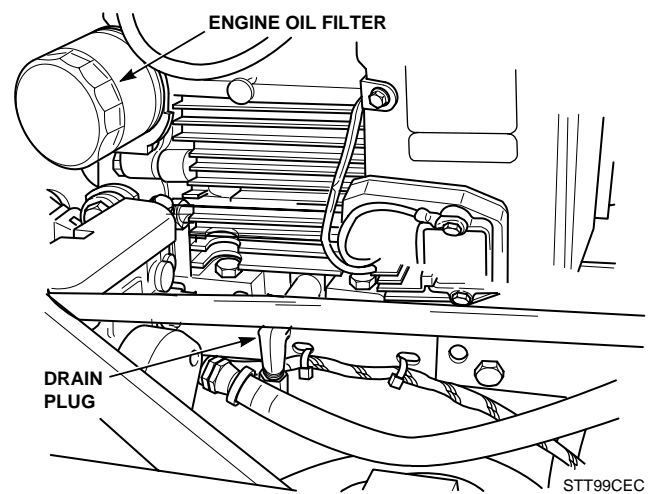


Figure 7-5 Drain Plug and Oil Filter Location

C. Changing Engine Oil Filter

After the first 5 hours of operation, replace the engine oil filter. Thereafter, replace the oil filter after every 200 hours of operation or every month, whichever occurs first. Refer to Engine Operator's Manual for instructions.

7.5 ENGINE FUEL SYSTEM

DANGER:

To avoid injury from burns, allow the mower to cool before removing the fuel tank cap and refueling.

A. Filling the Fuel Tank

Fill the fuel tank at the beginning of each operating day to within 1 inch below the filler neck. Do not overfill. Use clean, fresh unleaded gasoline with a minimum octane rating of 87.

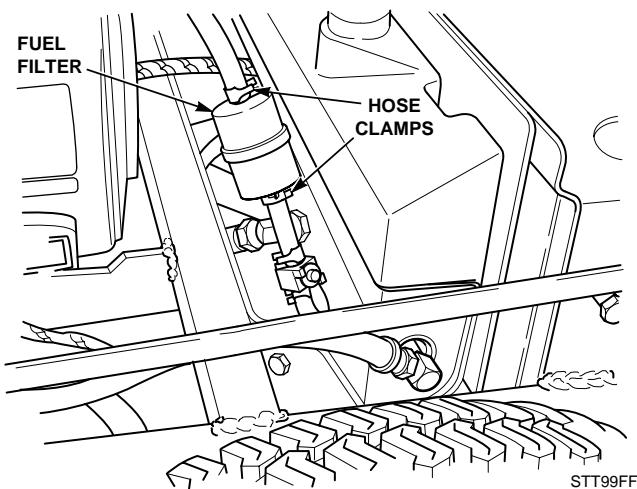


Figure 7-6 Fuel Filter

B. Replacing In-Line Fuel Filter Element

The in-line fuel filter (Figure 7-6) should be replaced after every 500 hours of operation or annually, whichever occurs first.

1. Close the shutoff valve. Remove the two clamps securing the fuel filter to the fuel hose. Remove the fuel filter.
2. Install a new fuel filter. Be sure it is installed in the proper direction. Secure to the fuel hose using the two clamps.

7.6 ENGINE AIR CLEANER

A. Cleaning and/or Replacing Air Cleaner Element

For any air cleaner, the operating environment dictates the air cleaner service periods. Inspect and clean the air cleaner element after every 100 hours of operation or bi-weekly, whichever occurs first and replace the element if required.

-NOTE-

In extremely dusty conditions it may be necessary to check the element once or twice daily to prevent engine damage.

1. Remove the wing nut securing the air cleaner cover to the engine. Remove the air cleaner cover and set aside.
2. Remove the air cleaner and inspect.
3. Clean or replace the air cleaner and foam pre-cleaner as recommended by the engine manufacturer.

Section 7

7.7 BATTERY

A. Checking Electrolyte Level and Cleaning Battery

After every 40 hours of operation or weekly, whichever occurs first, check the electrolyte level in the battery and clean the battery and connections. Dirt and fluid on the top of the battery can cause the battery to discharge. Corrosion of the battery terminals or loose connections will cause poor battery performance.

WARNING:

Lead-acid batteries produce flammable and explosive gases. To avoid personal injury when checking, testing or charging batteries, DO NOT use smoking materials near batteries. Keep arcs, sparks and flames away from batteries. Provide proper ventilation and wear safety glasses.

1. Loosen the two plastic wing nuts and then remove the battery cover.
 2. Remove the battery cell caps. Visually inspect electrolyte level in the cells. If electrolyte is below the bottom of vent well, fill with clean distilled water to the bottom of vent wells (1/4 to 1/2 inch above the plates). Install the battery cell caps.
- IMPORTANT-**
- Do not overfill the battery. Electrolyte will overflow through the vent tube onto parts of the machine, resulting in severe corrosion.*
3. Clean the cable ends and battery posts with steel wool. Use a solution of baking soda and water to clean the battery. Do not allow the solution to enter the battery cells.
 4. Tighten the cable connections securely and apply a light coat of silicone dielectric grease to the terminal connections to prevent corrosion.
 5. Install the battery cover.

WARNING:

Electric storage battery fluid contains sulfuric acid which is POISON and can cause SEVERE CHEMICAL BURNS. Avoid contact of fluid with eyes, skin, or clothing. Use proper protective gear when handling batteries. DO NOT tip any battery beyond 45° angle in any direction. If fluid contact does occur, follow first aid suggestions below.

BATTERY ELECTROLYTE FIRST AID

EXTERNAL CONTACT — Flush with water.

EYES — Flush with water for at least 15 minutes and get medical attention immediately.

INTERNAL — Drink large quantities of water. Follow with Milk Of Magnesia, beaten egg, or vegetable oil. Get medical attention immediately. In case of internal contact, DO NOT give fluids that would induce vomiting.

B. Charging the Battery

Refer to the battery charger's manual for specific instructions.

Under normal conditions the engine's alternator will have no problem keeping a charge on the battery. If the battery has been completely discharged for a long period of time, the alternator may not be able to recharge the battery, and a battery charger will be required.

DO NOT charge a frozen battery. It may explode and cause injury. Let the battery warm before attaching a charger.

Whenever possible, remove the battery from the mower before charging and make sure the electrolyte covers the plates in all cells.

WARNING:

BATTERIES PRODUCE EXPLOSIVE GASES. Charge the battery in a well ventilated space so gases produced while charging can dissipate.

Charging rates between 3 and 50 amperes are satisfactory if excessive gassing or spewing of electrolyte does not occur or the battery does not feel excessively hot (over 125°F). If spewing or gassing occurs or the temperature exceeds 125°F, the charging rate must be reduced or temporarily stopped to permit cooling.

C. Jump Starting

1. The booster battery must be a 12 volt type. If a vehicle is used for jump starting, it must have a negative ground system.
2. When connecting the jumper cables, connect the positive cable to the positive battery post, then connect the negative cable to the negative battery post.

7.8 DRIVE BELTS

All drive belts are spring loaded and self-tensioning, however after the first 2, 4, 8 and 10 hours of operation, the belts should be checked for proper alignment and wear. Thereafter, check the belts after every 40 hours of operation or weekly, whichever occurs first.

7.9 CUTTER BLADES

A. Blade Inspection

1. Remove the ignition key before servicing the blades.
2. Raise the mower deck to the highest position. Place the lanyard pin in the highest cutting height position to prevent the cutter deck from falling.

WARNING:

Always wear proper hand and eye protection when working with cutter blades.

3. Check the cutter blades for straightness. If the cutter blades appear bent, they will need to be replaced.

WARNING:

Do not attempt to straighten a bent blade, and never weld a broken or cracked blade. Always replace it with a new blade to assure safety.

4. If a blade cutting edge is dull or nicked, it should be sharpened. Remove the blades for sharpening. See "Blade Replacement."

-NOTE-

Keep the blades sharp. Cutting with dull blades not only yields a poor mowing job, but slows the cutting speed of the mower and causes extra wear on the engine and the blade drive.

B. Blade Sharpening

-NOTE-

If possible, use a file to sharpen the blade. Using a wheel grinder may burn the blade.

-NOTE-

DO NOT sharpen the blades beyond 1/3 of the width of the blade.

1. Sharpen the cutting edge at the same bevel as the original. See Figure 7-7. Sharpen only the top of the cutting edge to maintain sharpness.

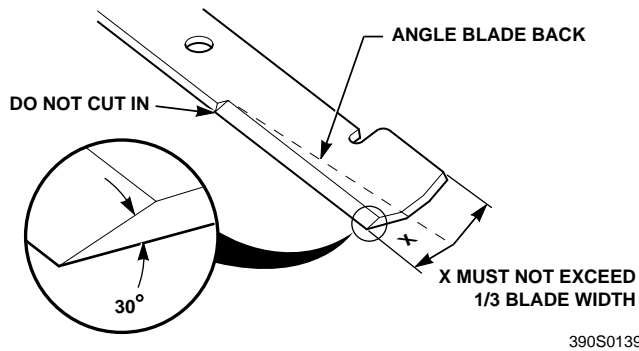


Figure 7-7 Blade Sharpening

2. Check the balance of the blade. If the blades are out of balance, vibration and premature wear can occur. See your authorized Scag dealer for blade balancing or special tools, if you choose to balance your own blades.

C. Blade Replacement



WARNING:

Always wear proper hand and eye protection when working with cutter blades.

1. Remove the ignition key before replacing the blades.
2. Raise the mower deck to the highest position. Place the lanyard pin in the highest cutting height position to prevent the cutter deck from falling.
3. Secure the cutter blades to prevent them from rotating, (use the optional Blade Buddy tool, P/N 9212, to assist in securing the cutter blades), remove the nut from the blade attaching bolt. Remove the cutter blade, bolt and spacer from the spindle shaft. (Figure 7-8).

-NOTE-

The front of the machine will have to be raised slightly to remove the blade bolt from the cutter spindle.

4. To install the new cutter blade, put the flat washer onto the blade bolt and slide the bolt into the hole in the cutter blade.

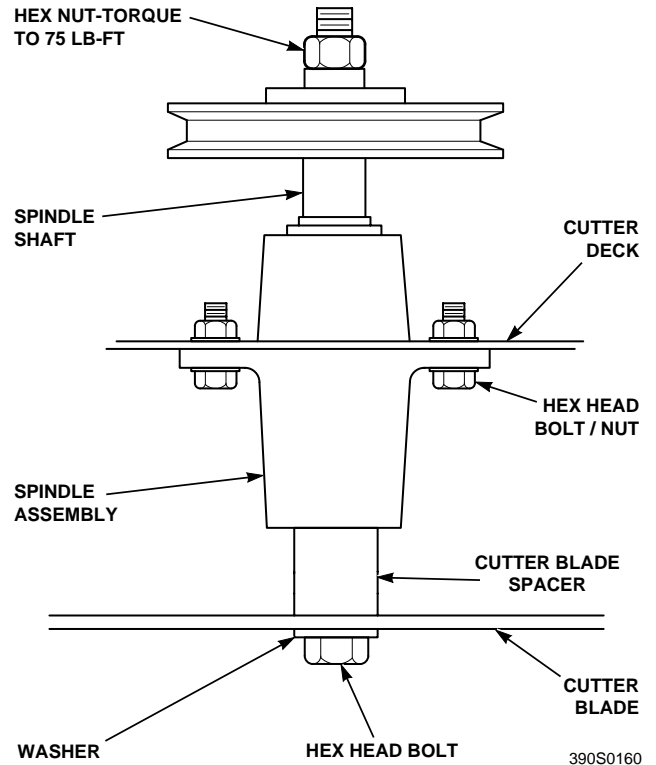


Figure 7-8 Blade Replacement

-NOTE-

Be sure that the blade is installed with the lift wing toward the top.

5. Install the spacer onto the blade bolt and insert the bolt into the cutter spindle shaft.
6. Install the hex nut to the blade bolt at the top of the cutter spindle. Secure the blades from rotating and torque to 75 ft-lbs. (See Figure 7-8)

7.10 TIRES

Check the tire pressures after every 8 hours of operation or daily.

Caster Wheels	25 PSI
Drive Wheels	12 PSI

7.11 CUTTER DECK GEARBOX

A. Checking Lubricant Level

CAUTION:

The cutter deck gearbox can reach high operating temperatures. Allow the cutter deck gearbox to cool before servicing.

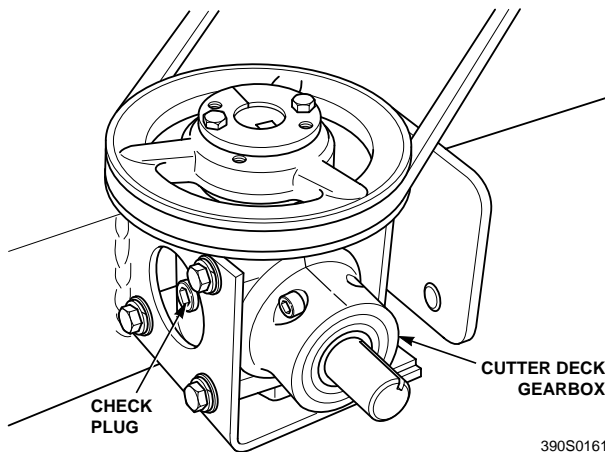


Figure 7-9 Cutter Deck Gearbox

The fluid level in the cutter deck gearbox (Figure 7-9) should be checked after every 100 hours of operation or bi-weekly, whichever occurs first.

1. Lower the cutter deck to its lowest position to gain access to the cutter deck gearbox.
2. Clean and remove the check plug from the side of the gearbox (See Figure 7-9). Visually check that the lubricant level is up to the bottom edge of the check plug hole. If lubricant is low, add SAE 80W90 lubricant through the check plug hole in the gearbox until it is level with the bottom of the check plug hole. Install the check plug and tighten securely.

B. Changing Lubricant

The lubricant in the cutter deck gearbox should be changed after every 500 hours of operation or yearly, whichever occurs first.

1. Place a suitable container beneath the cutter deck gearbox and locate the gearbox drain plug.

2. Remove the drain plug, drain the lubricant into the container and properly discard it.
3. Re-install the drain plug and add SAE 80W90 lubricant through the check plug hole in the gearbox until it is level with the bottom of the check plug hole. Install the check plug and tighten securely.

7.12 KAWASAKI COOLING SYSTEM

WARNING:

To avoid burns, always allow the engine to cool before removing the radiator cap.

A. Checking Coolant Level

The coolant level should be checked before each day of operation.

1. Remove the radiator cap by turning it slowly counterclockwise to the first stop and allow any pressure to be released. Push down on the cap and turn counterclockwise to remove.
2. Visually check the coolant level. The coolant level should be up to the bottom of the filler neck as shown in figure 7-9. Add a mixture of coolant and soft water as needed.

-NOTE-

Refer to the coolant manufacturer's instructions for the proper coolant mixture ratio.

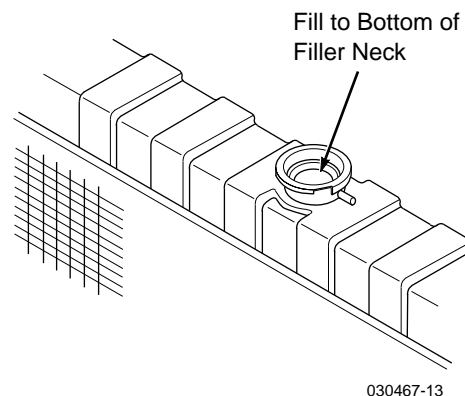


Figure 7-9 Cutter Deck Gearbox

Section 7

3. Replace the radiator cap. Push down on the cap and turn clockwise until it stops.

-NOTE-

The cooling system should be flushed and the coolant replaced every 500 hours of operation or annually. See your Scag dealer for proper coolant replacement.

B. Cleaning the Radiator Debris Screen

After each day of operation, remove and clean the radiator debris screen.



CAUTION:
To avoid personal injury, always wear safety glasses when using compressed air.

1. Pull the debris screen up to remove.
2. Clean the debris screen with compressed air or a water hose.

-NOTE-

Check the radiator for excessive debris and clean with compressed air. Never spray a hot engine with water; use only compressed air to remove debris.

3. Re-install the debris screen to the radiator.

C. Checking The Fan Belt Tension

Periodically check the fan belt tension. The belt should deflect 1/2" with 10 pounds of pressure. See your Scag dealer if the belt is in need of adjustment or replacement.


7.13 BODY, DECK, AND UPHOLSTERY



CAUTION:
Do not wash any portion of the equipment while it is hot. Do not wash the engine; use compressed air.

1. After each use, wash the mower and cutter deck. Use cold water and automotive cleaners. Do not use pressure cleaners.
2. Do not spray electrical components.
3. Use a mild soap solution or a vinyl/rubber cleaner to clean the seat.
4. Repair damaged metal surfaces using Scag touch-up paint available from your authorized Scag dealer. Wax the mower for maximum paint protection.

52A & 61A CUTTER DECKS

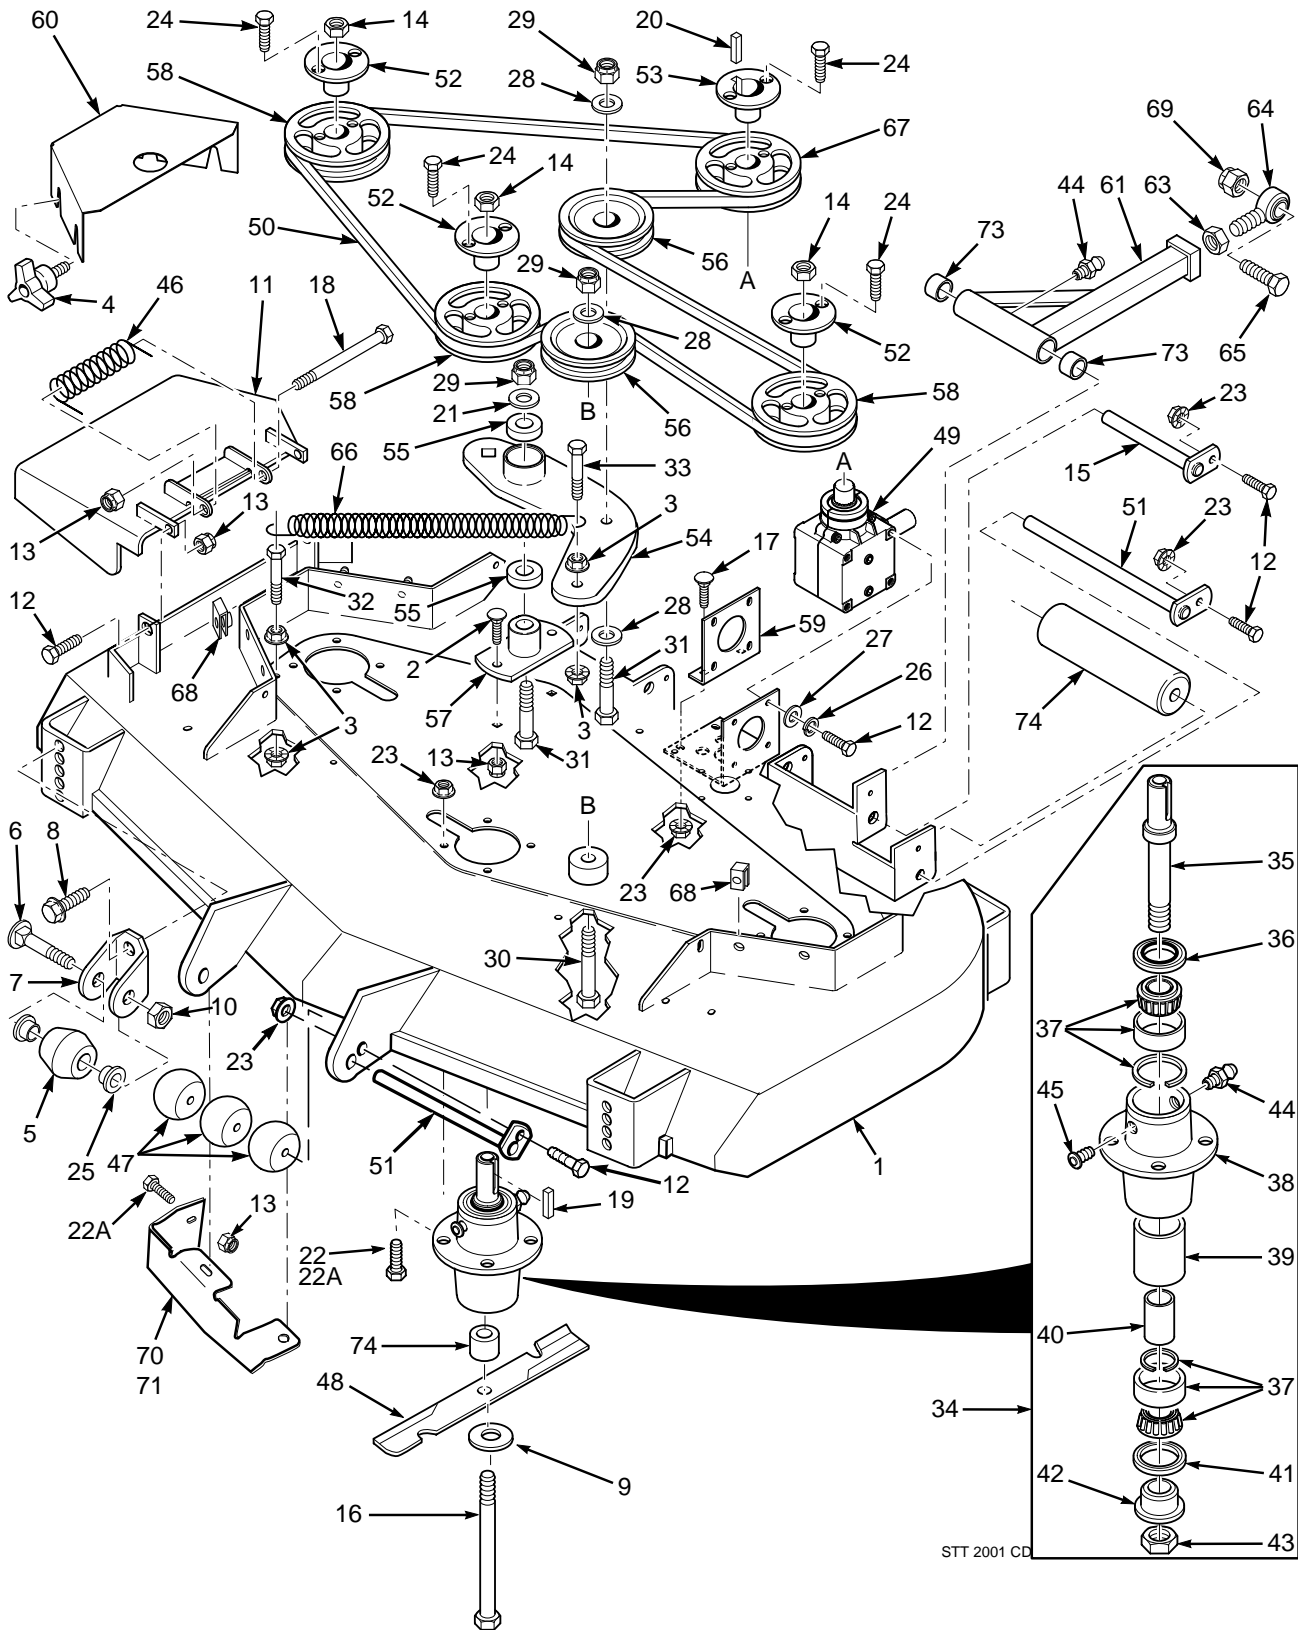


52A & 61A CUTTER DECKS

Ref. Part No. No.	Description	52 61	Ref. Part No. No.	Description	52 61
1	461377 Cutter Deck Advantage	x	39	43312 Spacer, Outside	x x
	461382 Cutter Deck Advantage	x	40	43296 Spacer, Inside	x x
2	04003-04 Bolt, Carriage 5/16-18 x 1"	x x	41	481025 Seal, Bottom	x x
3	04019-04 Nut, Hex Serrated Flange 3/8-16	x x	42	43297 Spindle Bushing, Bottom	x x
4	481625-01 Wing nut, 3/8-16	x x	43	481035 Nut, Special 1 - 1/16-18	x x
5	481632 Anti-Scalp Wheel	x x	44	48114-04 Grease Fitting	x x
6	04003-26 Bolt, Carriage 3/8-16 x 4"	x x	45	48677 Relief Fitting, Tapered Spindle	x x
7	422478 Anti-Scalp Wheel Bracket	x x	46	482245 Spring, Discharge Chute	x x
8	04017-27 Bolt, Hex Serrated Flange 3/8-16 x 1"	x x	47	482295 Wheel, Anti-Scalp	x x
9	04040-10 Flatwasher, 5/8" (.688 x 1.75 x .134)	x x	48	481707 Cutter Blade, 18"	x
10	04021-05 Locknut, 3/8-16 Center Lock	x x		481708 Cutter Blade, 21"	x
11	461295 Discharge Chute Advantage - Small	x	49	481516 Gearbox Assembly, Deck Drive	x x
	461296 Discharge Chute Advantage - Large	x	50	482281 Belt, Cutter Deck Drive	x
12	04001-11 Bolt, Hex Head 5/16-18 x 1-3/4" - Front	x x		481558 Belt, Cutter Deck Drive	x
	04001-12 Bolt, Hex Head 5/16-18 x 1-1/2" - Rear	x x	51	45944 Roller Shaft	x x
13	04021-10 Nut, Hex Elastic Stop 5/16-18	x x	52	48926 Tapered Hub, 1-1/8" Bore	x x
14	04020-09 Nut, 5/8-11 UNC	x x	53	48141 Tapered Hub, 1" Bore	x x
15	451240 Push Arm Shaft	x x	54	461075 Idler Arm, Cutter Deck	x x
16	04001-41 Bolt, Hex Head 5/8-11 x 9-1/2"	x x	55	48224 Bearings, Ball	x x
17	04003-12 Bolt, Carriage 5/16-18 x 3/4"	x x	56	48269 Pulley, Idler	x x
18	04001-108 Bolt, Hex Head 5/16-18 x 4-1/2"	x x	57	422713 Pivot, Idler	x x
19	04063-08 Key, 1/4 x 1/4 x 2"	x x	58	48753 Pulley, 6.35 O.D.	x x
20	04063-01 Key, 1/4 x 1/4 x 1-1/4"	x x	59	422426 Mounting Plate, Gearbox	x x
21	04043-04 Flatwasher, 3/8-.39 x .938 x .105 HD	x x	60	422412 Belt, Cover	x
22	04001-10 Bolt, Hex Head 5/16-18 x 1-1/4"	x x		422413 Belt, Cover	x
22A	04001-11 Bolt, Hex Head 5/16-18 x 1-1/2"	x x	61	461036 Pusharm (includes items 44, 62, 63 & 64)	x x
23	04019-03 Nut, Hex Serrated Flange 5/16-18	x x	62	43309 Spacer	x x
24	04001-01 Bolt, Hex Head 1/2-20 x 3/4"	x x	63	04020-16 Nut, Hex Head 5/8-18 UNF	x x
25	48100-15 Bushing, .376 I.D. Oilite	x x	64	48763 Rod End, 5/8" Male RH Thread	x x
26	04030-03 Lockwasher, 5/16"	x x	65	04001-79 Bolt, Hex Head 5/8-11 x 4-1/2"	x x
27	04040-15 Flatwasher, 5/16" (.375 x .875 x .083)	x x	66	481597 Spring, Cutter Deck	x x
28	04041-07 Flatwasher, 3/8" (.391 x .938 x .105)	x x	67	48967 Pulley, 6.95 O.D.	x
29	04021-09 Nut, Hex Elastic Stop 3/8-16	x x		48753 Pulley, 6.35 O.D.	x
30	04001-62 Bolt, Hex Head 3/8-16 x 3-1/4"	x x	68	04110-03 U-Nut, 3/8-16	x x
31	04001-31 Bolt, Hex Head 3/8-16 x 2-1/2"	x x	69	04021-13 Nut, Hex Elastic Stop 5/8-11	x x
32	04001-20 Bolt, Hex Head 3/8-16 x 1-1/2"	x x	70	422600 Discharge Baffle 52"	x
33	04001-136 Bolt, Hex Head 3/8-16 x 1-1/2" Grade 8	x x	71	422601 Discharge Baffle 61"	
34	46631 Spindle Assembly	x x	72	43503 Pivot, Idler - Short	x x
35	43298 Spindle Shaft	x x	73	48100-06 Bushing	x x
36	481024 Seal, Top	x x	74	48038 Guide, Roller	x x
37	481022 Bearing Assembly	x x			
38	43294 Spindle Housing	x x			

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

72A CUTTER DECK

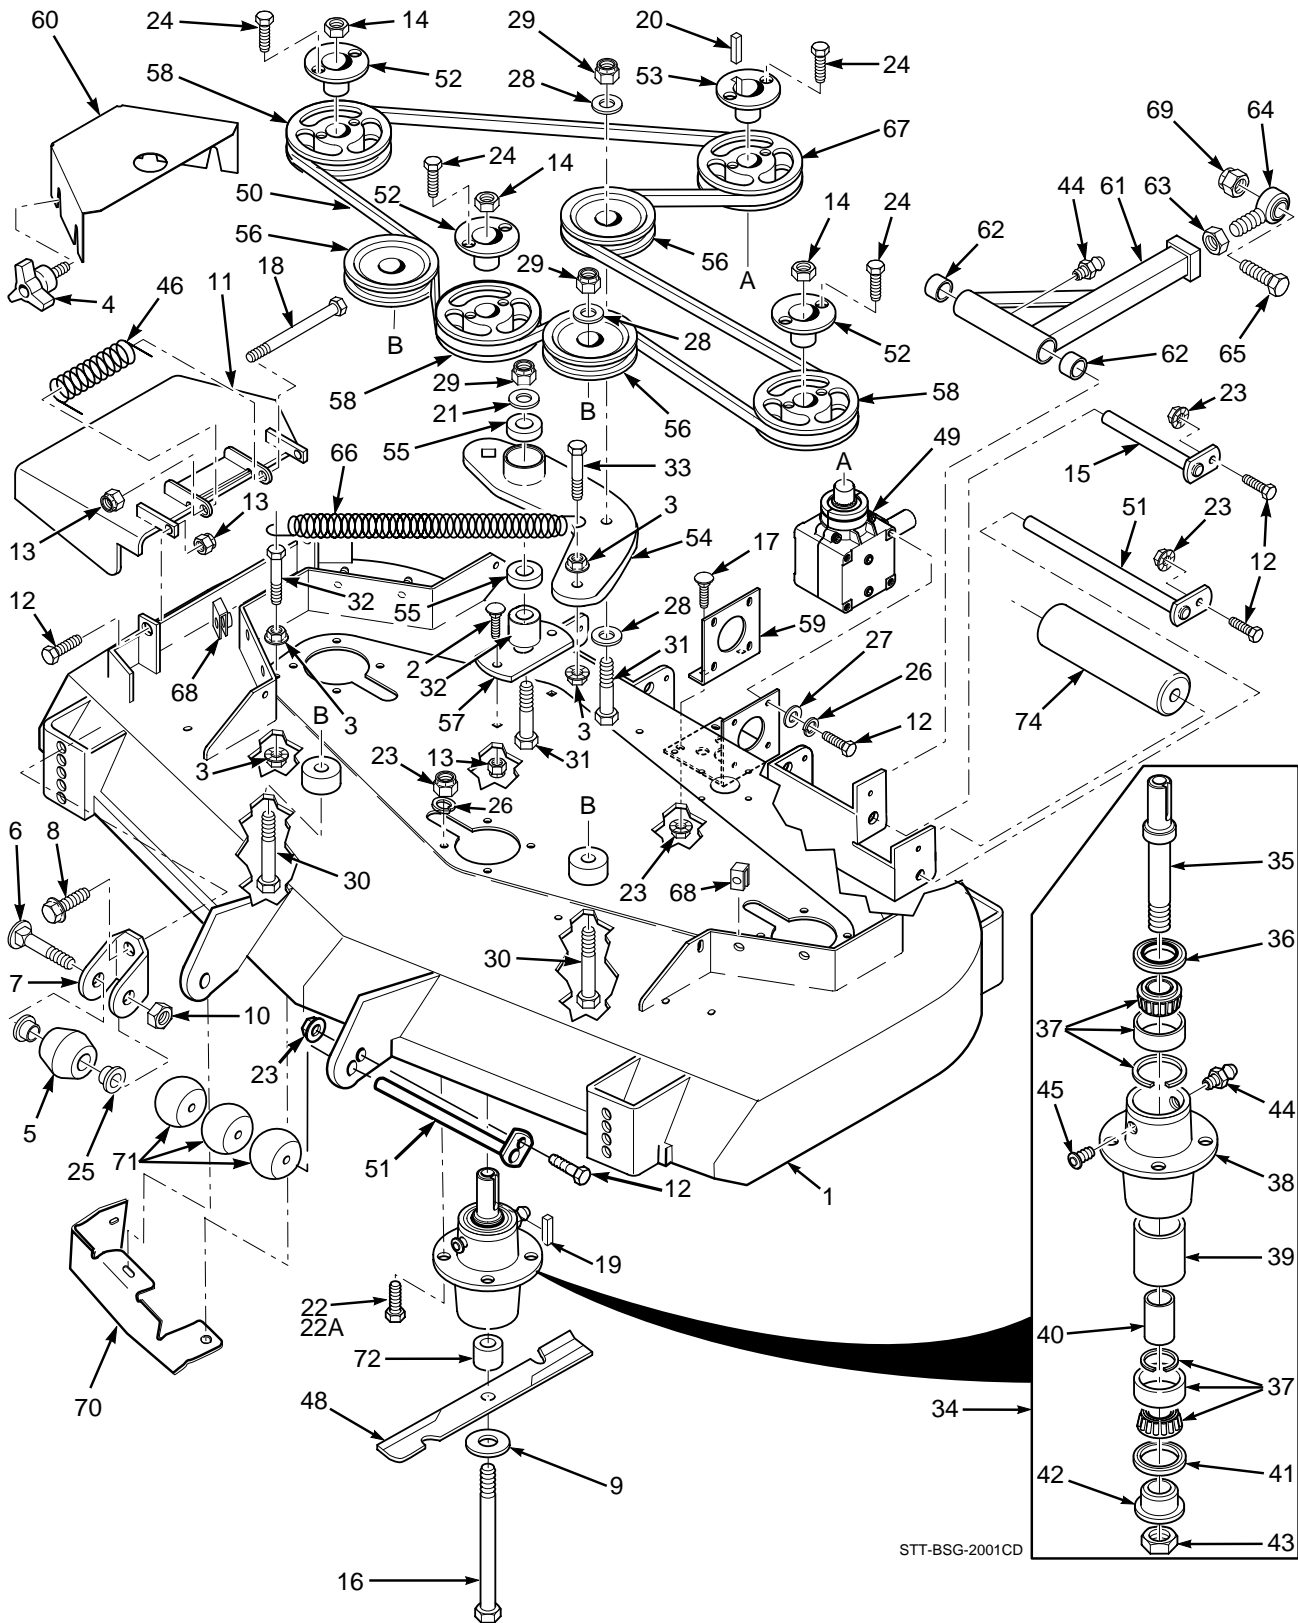


STT-BSG-2001CD

72A CUTTER DECK

Ref. Part No. No.	Description	Ref. Part No. No.	Description		
1	461384	Cutter Deck, 72" Advantage (Includes Decals)	41	481025	Seal, Bottom
2	04003-04	Bolt, Carriage 5/16-18 x 1"	42	43297	Spindle Bushing, Bottom
3	04019-04	Nut, Hex Serrated Flange 3/8-16	43	481035	Nut, Special 1 - 1/16-18
4	481625-01	Wing nut, 3/8-16	44	48114-04	Grease Fitting
5	481632	Anti-Scalp Wheel	45	48677	Relief Fitting, Tapered Spindle
6	04003-26	Bolt, Carriage 3/8-16 x 4"	46	482245	Spring, Discharge Chute
7	422478	Anti-Scalp Wheel Bracket	47	48038	Guide, Roller
8	04017-27	Bolt, Hex Serrated Flange 3/8-16 x 1"	48	482002	Cutter Blade, 24.5" 72"
9	04040-10	Flatwasher, 5/8" (.688 x 1.75 x .134)	49	481516	Gearbox Assembly, Deck Drive
10	04021-05	Locknut, 3/8-16 Center Lock	50	481980	Belt, Cutter Deck Drive, 72"
11	461296	Discharge Chute, 61" & 72" Adv.	51	45944	Roller Shaft
12	04001-12	Bolt, Hex Head 5/16-18 x 1.75" (Front)	52	48926	Tapered Hub, 1-1/8" Bore
	04001.11	Bolt, Hex Head 5/16-18 x 1.50" (Rear)	53	48141	Tapered Hub, 1" Bore
13	04021-10	Nut, Hex Elastic Stop 5/16-18	54	461174	Idler Arm, Cutter Deck
14	04020-09	Nut, 5/8-11 UNC	55	48224	Bearings, Ball
15	451240	Push Arm Shaft	56	48269	Pulley, Idler
16	04001-41	Bolt, Hex Head 5/8-11 x 9.50"	57	422713	Base, Idler Pivot
17	04003-12	Bolt, Carriage 5/16-18 x .75"	58	48753	Pulley, 6.35 O.D. - 61"
18	04001-154	Bolt, Hex Head 5/16-18 x 4.75"		48967	Pulley, 6.95 O.D. - 72"
19	04063-08	Key, 1/4 x 1/4 x 2"	59	422426	Mounting Plate, Gearbox
20	04063-01	Key, 1/4 x 1/4 x 1.25"	60	422677	Belt Cover, LH - 72"
21	04043-04	Flatwasher, 3/8-.39 x .938 x .105 HD		422708	Belt Cover, RH - 72"
22	04001-11	Bolt, Hex Head 5/16-18 x 1.50"	61	461036	Pusharm (includes items 44, 62, 63 & 64)
22A	04001-12	Bolt, Hex Head 5/16-18 x 1.75"	62	48100-06	Spacer
23	04021-10	Nut, Hex Serrated Flange 5/16-18	63	04020-16	Nut, Hex Head 5/8-18 UNF
24	04001-01	Bolt, Hex Head 1/2-20 x .75"	64	48763	Rod End, 5/8" Male RH Thread
25	48100-15	Bushing, .376 I.D. Oilite	65	04001-79	Bolt, Hex Head 5/8-11 x 4-1/2"
26	04030-03	Lockwasher, 5/16"	66	481597	Spring, Cutter Deck
27	04040-15	Flatwasher, 5/16" (.375 x .875 x .083)	67	48924	Pulley, 5.75 O.D. - 72"
28	04041-07	Flatwasher, 3/8" (.391 x .938 x .105)	68	04110-03	U-Nut, 3/8-16
29	04021-09	Nut, Hex Elastic Stop 3/8-16	69	04021-13	Nut, Hex Elastic Stop 5/8-11
30	04001-62	Bolt, Hex Head 3/8-16 x 3.25"	70	422602	Discharge Baffle 72"
31	04001-31	Bolt, Hex Head 3/8-16 x 2.50"	71	482295	Guide Roller
32	43503	Pivot, Idler - Short	72	43309	Spacer, Spindle
33	04001-136	Bolt, Hex Head 3/8-16 x 1.50" Grade 8			
34	46631	Spindle Assembly			
35	43298	Spindle Shaft			
36	481024	Seal, Top			
37	481022	Bearing Assembly			
38	43294	Spindle Housing			
39	43312	Spacer, Outside			
40	43296	Spacer, Inside			

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

CUTTER DECK CONTROLS

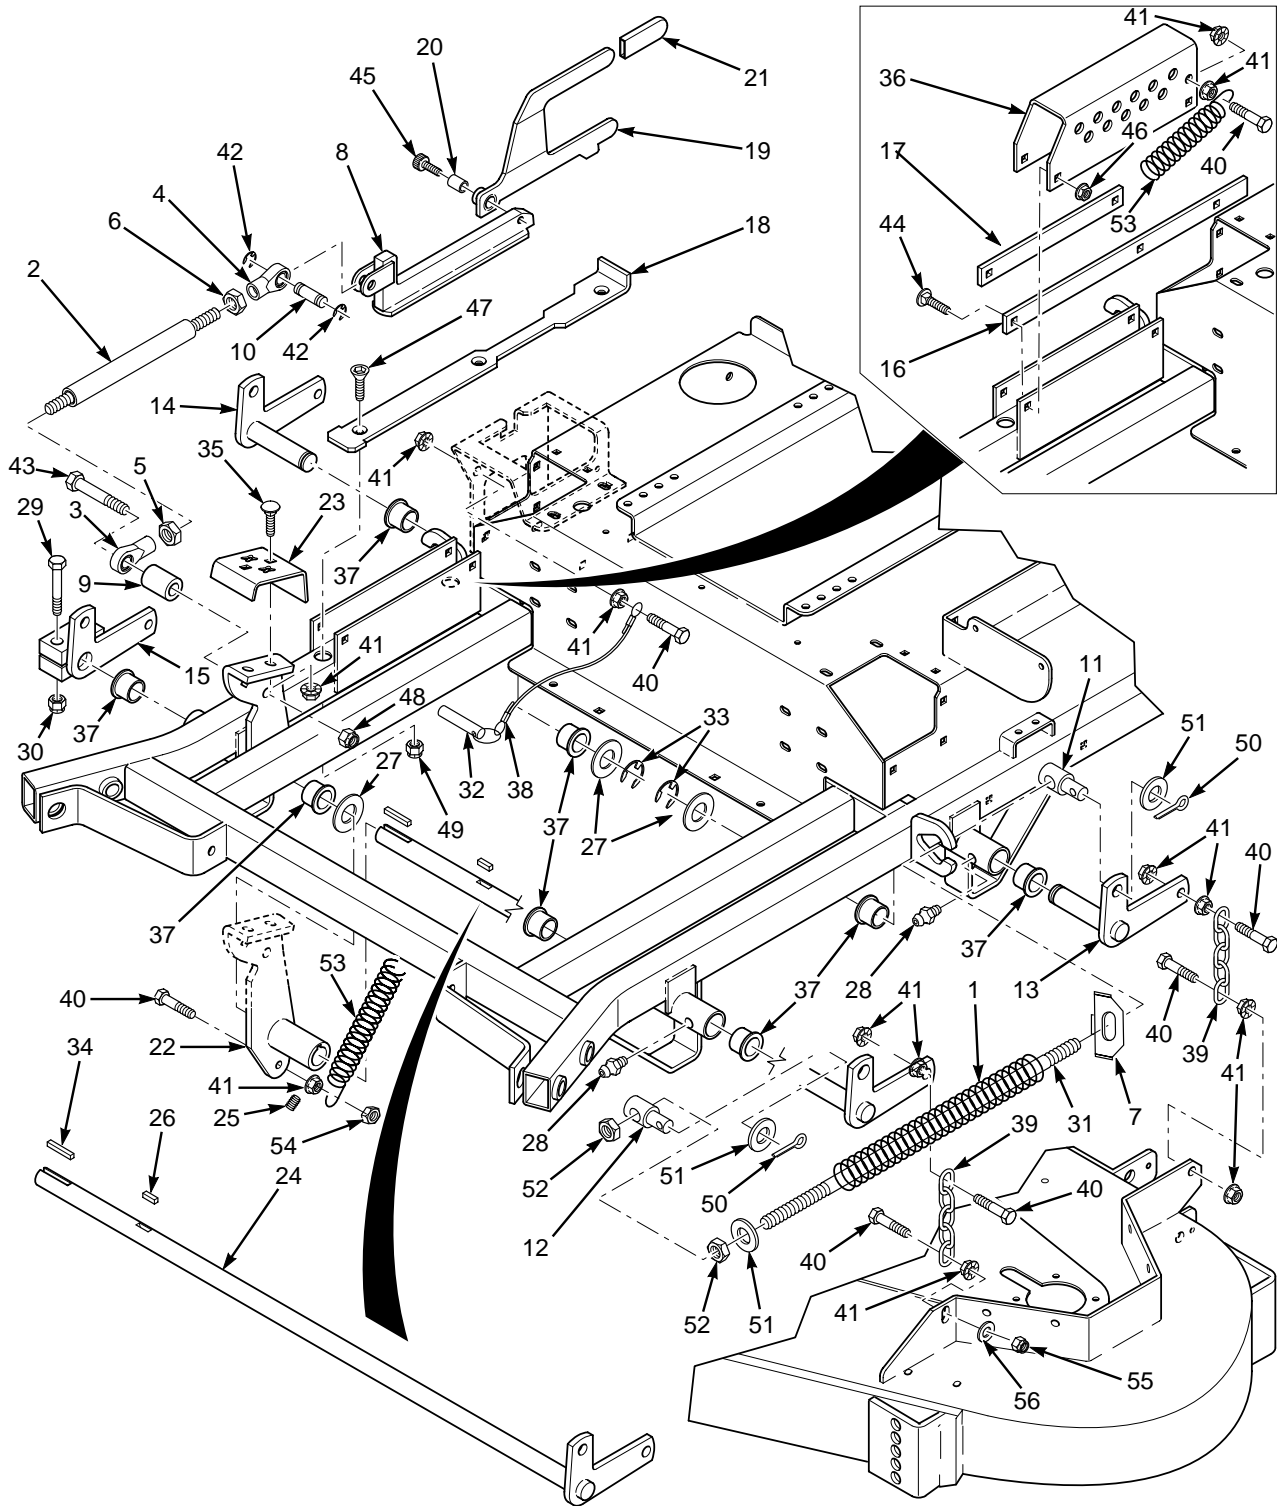

CUTTER DECK


STT99CDC

CUTTER DECK CONTROLS

Ref. No.	Part No.	Description
1	481549	Spring, Deck Lift
2	481764	Link, Deck Lift
3	481765	Rod End, Female - 1/2-20 RH
4	481766	Rod End, Female - 1/2-20 LH
5	04020-27	Nut, Jam 1/2-20 RH
6	04020-28	Nut, Jam 1/2-20 LH
7	422800	Flatwasher, Spring Stop
8	481560	Slide Weldment, Height Adjustment
9	43391	Spacer, Decklift Pedal
10	43487	Pin, Decklift
11	43526	Swivel Joint, LH
12	43527	Swivel Joint, RH
13	45904	Bellcrank Weldment, LH Rear
14	45905	Bellcrank Weldment, RH Rear
15	45907	Bellcrank Weldment, RH Front
16	422381	Guide, Short
17	422380	Guide, Long
18	422346	Lockplate, Decklift
19	46975	Deck Latch (Includes items 20& 21)
20	48100-14	Bushing, .502 ID.
21	481428	Grip, Deck Latch
22	45945	Footplate Weldment, Decklift
23	422451	Footplate, Height Adjustment
24	45906	Bellcrank Weldment, LH Front
25	04012-09	Set Screw, 5/16-18 x 1/2" Sq. Head
26	04063-23	Key, 1/4 x 1/4 x 3-1/4"
27	04041-14	Flatwasher, 1" (1.062 x 1.50 x .048)
28	48114-04	Grease Fitting
29	04001-91	Bolt, Hex Head 7/16-14 x 2-1/2"
30	04021-11	Nut, Hex Elastic Stop 7/16-14
31	04004-33	Stud, 5/8-11 x 22.0"
32	04067-05	Ring Pin, 1/2 x 3.30"
33	04050-08	Ring, Retaining 1" External "E"
34	04063-01	Key, 1/4 x 1/4 x 1-1/4"
35	04003-11	Bolt, Carriage 3/8-16 x 1-1/4"
36	422403	Bracket, Cutting Height Adjustment
37	48100-08	Bushing, 1.003 ID.
38	481547	Lanyard, Deck Height Pin
39	48540	Chain
40	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
41	04019-04	Nut, Hex Serrated Flange 3/8-16
42	04050-10	Ring, Retaining 1/2" External "E"
43	04001-74	Bolt, Hex Head 1/2-13 x 3"
44	04003-04	Bolt, Carriage 5/16-18 x 1"
45	04009-02	Bolt, Shoulder 1/2 x 3/4"
46	04019-03	Nut, Hex Serrated Flange 5/16-18
47	04014-03	Screw, Cap 5/16-18 x 3" FHHS
48	04021-07	Nut, Hex Elastic Stop 1/2-13
49	04021-10	Nut, Hex Elastic Stop 5/16-18
50	04061-07	Cotter Pin, 3/16 x 1"
51	04040-09	Flatwasher, 5/8" (.656 x 1.312 x .095)
52	04020-09	Nut, Hex 5/8-11
53	481522	Spring, Helper (61" & 72" Cutter Decks Only)
54	04021-05	Locknut, 3/8-16 Center Lock
55	04021-09	Nut, 3/8-16 Elastic Stop
56	04041-07	Flatwasher, 3/8"

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

SHEET METAL COMPONENTS

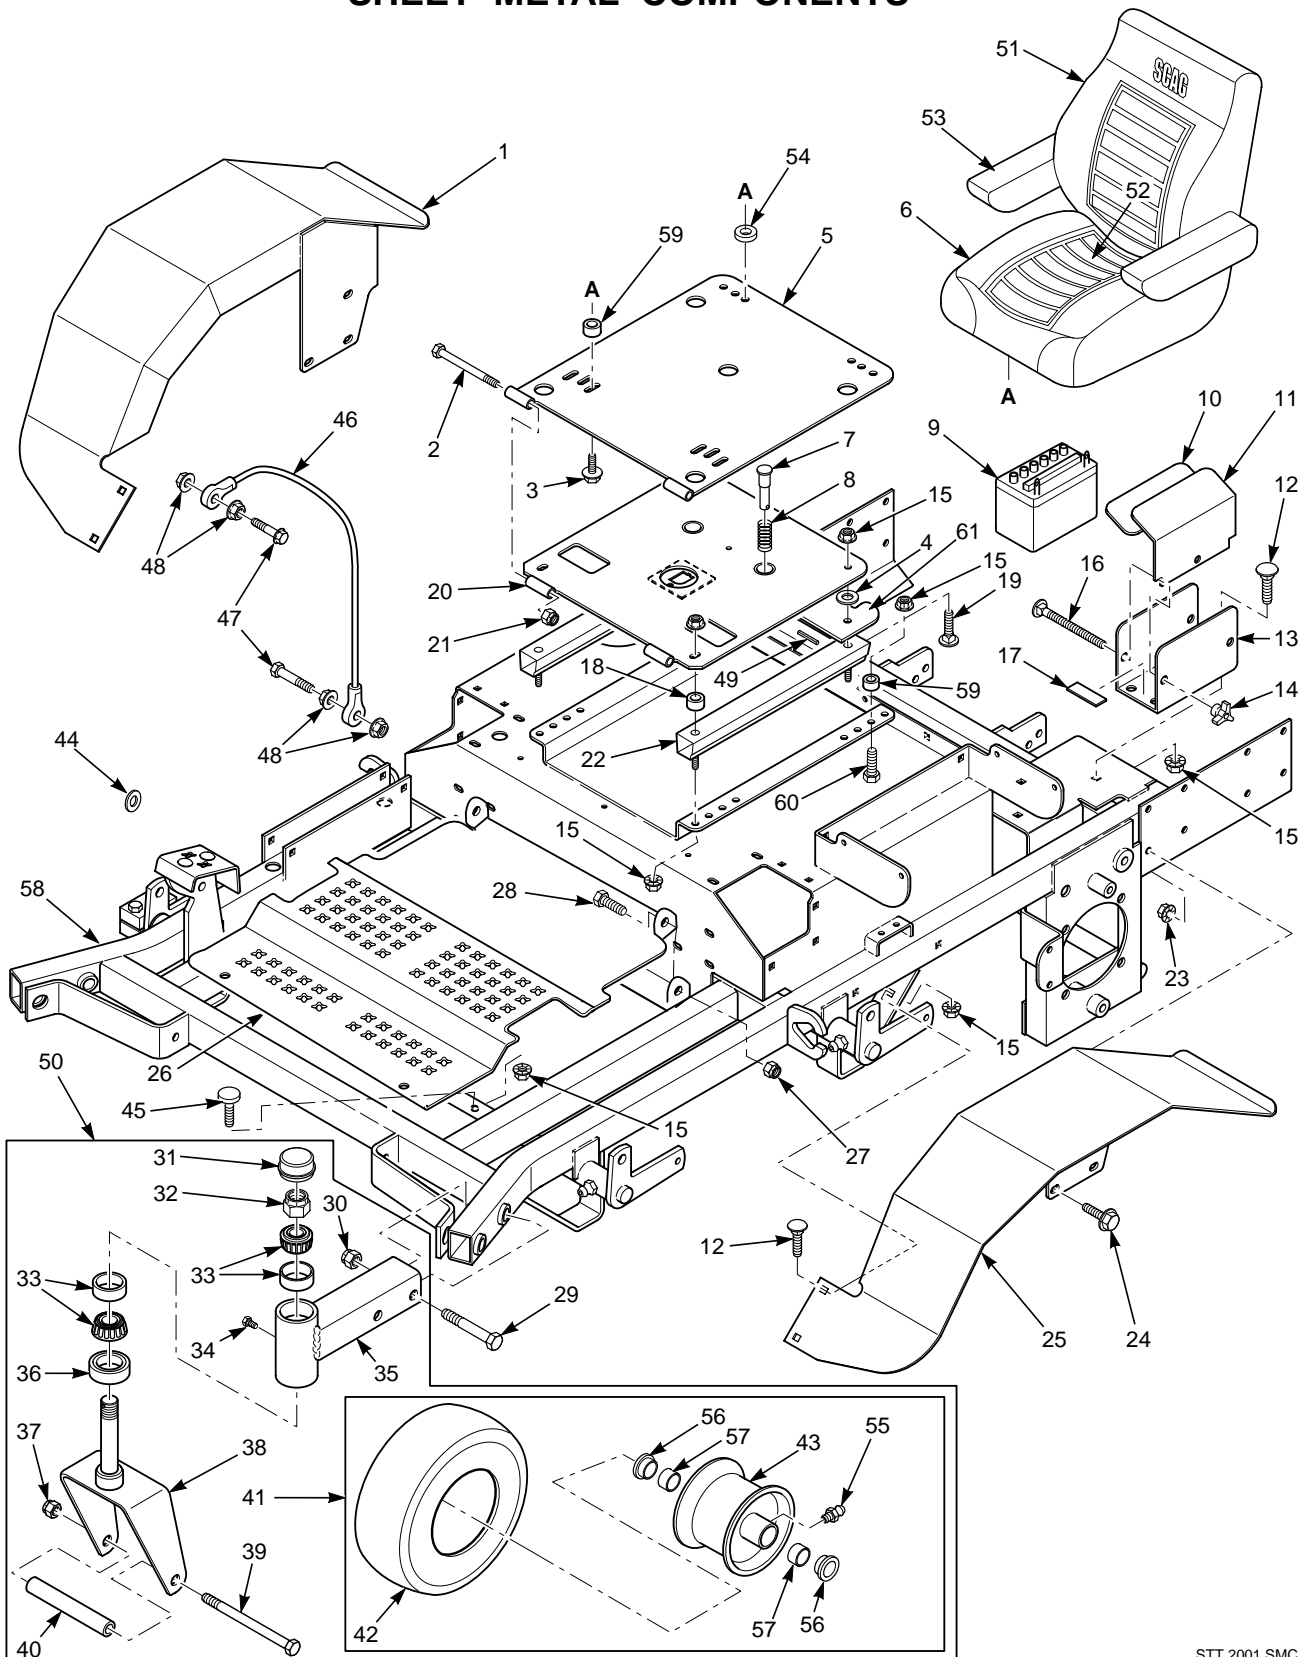


SHEET METAL COMPONENTS

Ref. Part No.	Part No.	Description	Ref. Part No.	Part No.	Description
1	451079	Fender Weldment, RH	36	481025	Seal, 2.00 OD. x 1.625 Bore
2	04001-63	Bolt, Hex Head 5/16-18 x 3-1/2"	37	04021-07	Nut, Hex Elastic Stop 1/2-13
3	04017-16	Screw, Hex Serrated Flange 5/16-18 x 3/4"	38	45934	Yoke Weldment, Caster
4	04041-11	Flatwasher, 3/8" (.406 x 1.50 x .179)	39	04001-134	Bolt, Hex Head 1/2-13 x 7-1/2"
5	45926	Seat Plate Weldment, Upper	40	43430	Sleeve
6	482147	Seat Assembly w/armrest	41	481551	Wheel Assy (Inc.items 42,43 & 55 thru 57)
7	43462	Pin Retainer, Spring	42	481613	Tire
8	481389	Spring, Seat	43	481612	Rim Assembly (Includes item 55)
9	48015	Battery	44	04041-07	Washer, 3/8"
10	48903	Pad, Battery Cover	45	481284	Bumper, Rubber
11	421274	Cover, Battery	46	48566	Cable, Seat Stop
12	04003-12	Bolt, Carriage 5/16-18 x 3/4"	47	04001-59	Bolt, Hex Head 1/4-20 x 1-1/4"
13	421703	Plate, Battery Box	48	04019-02	Nut, Hex Serrated Flange 1/4-20
14	04029-01	Wing Nut, 1/4-20 x 3/4"	49	04060-01	Roll Pin, Spring 5/32 x 3/4"
15	04019-03	Nut, Hex Serrated Flange 5/16-18	50	46986	Caster Wheel Assy (Inc. 31 thru 47)
16	04003-01	Bolt, Carriage 1/4-20 x 6"		46985	Caster Wheel Assy (Inc. 31 thru 47)
17	48657	Rubber Pad			52A (RH) & 61A (LH &RH)
18	43336	Spacer			Caster Wheel Assy (Inc. 31 thru 47)
19	04003-04	Bolt, Carriage 5/16-18 x 1"		46988	Caster Wheel Assy (Inc. 31 thru 47)
20	45925	Seat Plate Weldment, Lower			72A (LH)
21	04021-10	Nut, Hex Elastic Stop 5/16-18		461189	Caster Wheel Assy (Inc. 31 thru 47)
22	461232	Seat Adjustment, Track Set			72A (RH)
23	04019-04	Nut, Hex Serrated Flange 3/8-16	51	482341	Back Cushion Cover
24	04017-27	Screw, Hex Serrated Flange 3/8-16 x 1"	52	482342	Seat Cushion Cover
25	451078	Fender Weldment, LH	53	482344	Arm Rest, Both Sides
26	422567	Foot Plate		482343	Arm Rest Cover
27	04021-09	Nut, Hex Elastic Stop 3/8-16	54	43077	Spacer
28	04001-19	Bolt, Hex Head 3/8-16 x 1-1/4"	55	48114-06	Grease Fitting
29	04001-125	Bolt, Hex Head 5/8-11 x 4"	56	481770	Bearing, Oilite
30	04021-13	Nut, Hex Elastic Stop 5/8-11	57	481846	Roller Bearing
31	481559	Cap, Grease	58	461392	Main Frame
32	04021-20	Nut, Hex Elastic Stop 1.0-14	59	43535	Spacer, Seat
33	481657	Bearing W/Race	60	04001-12	Bolt, Hex Head 5/16-18 x 1-3/4" (KA only)
34	482028-01	Plug, 1/4-28 THD Form	61	423346	Stop, Seat (KA only)
35	45936	Extention Weldment, Caster 52A (LH)			
	45937	Extention Weldment, Caster 52A (RH) & 61A (LH &RH)			
	45939	Extention Weldment, Caster 72A (LH)			
	451128	Extention Weldment, Caster 72A (RH)			

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

DECK DRIVE COMPONENTS

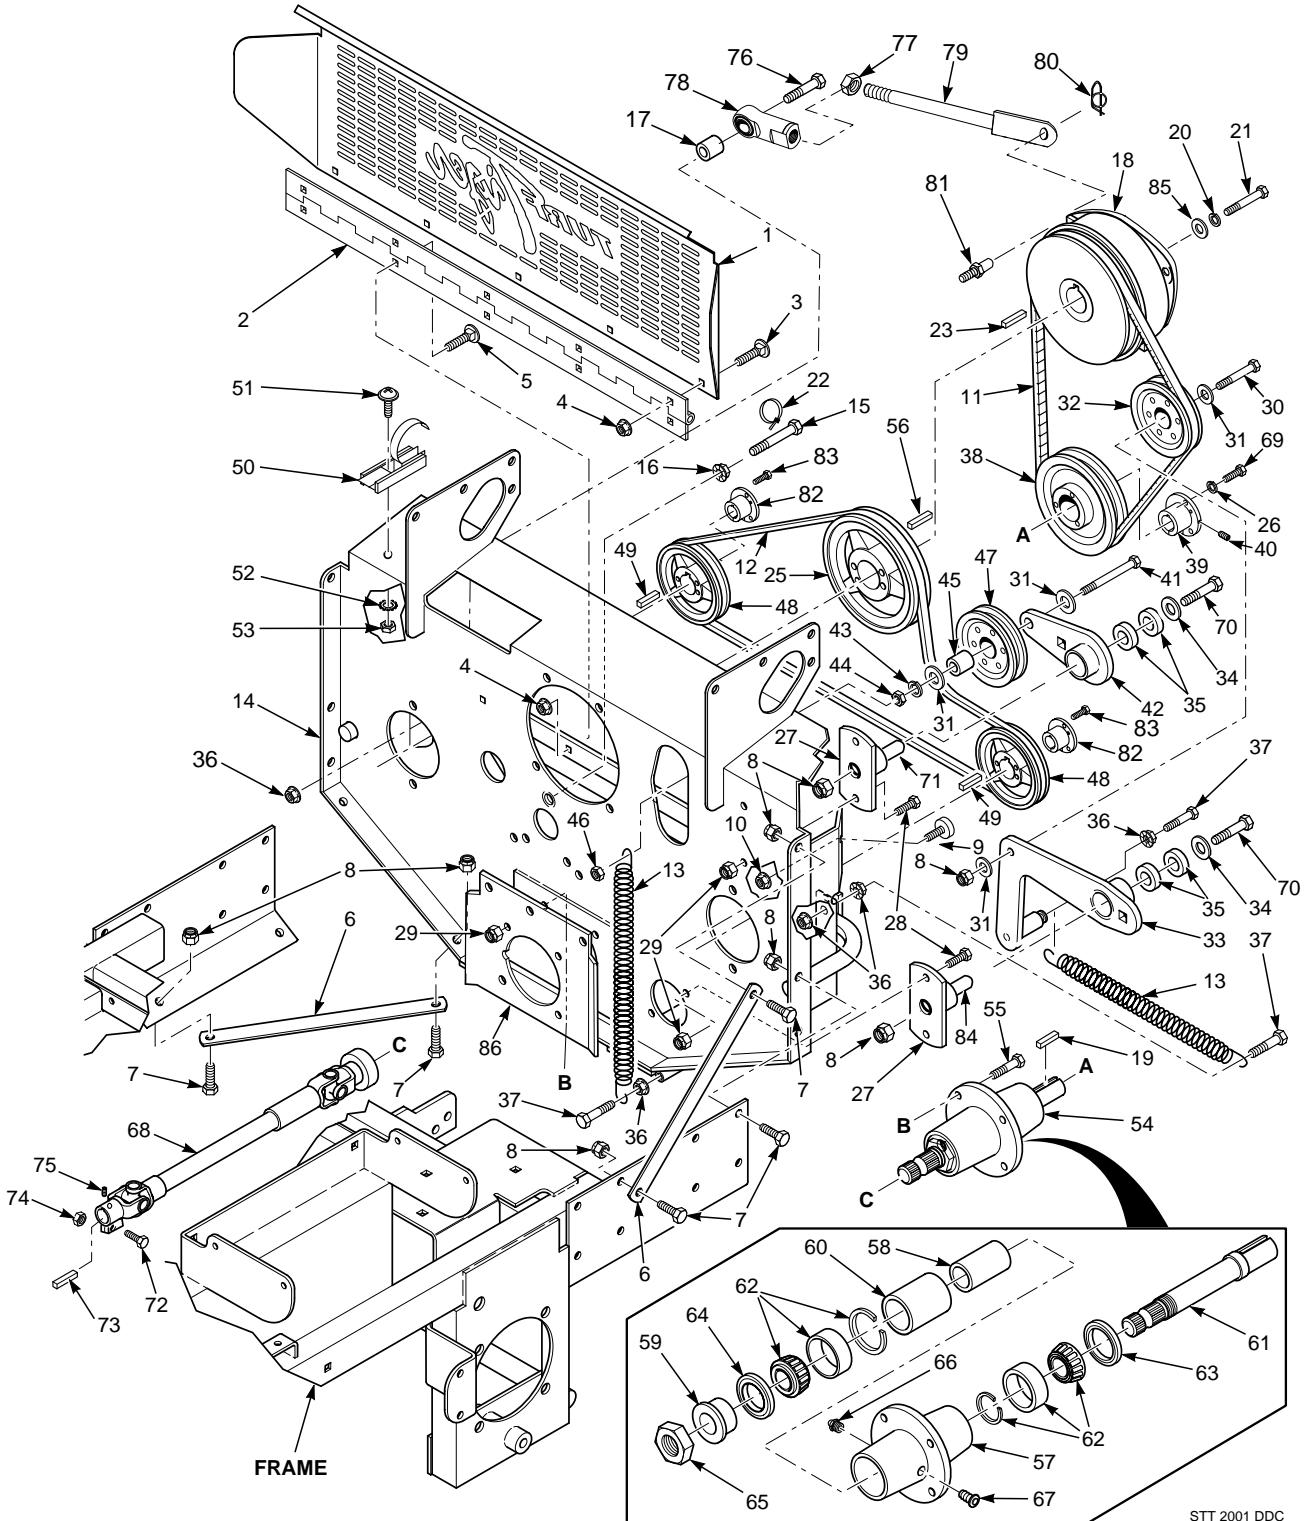


DECK DRIVE COMPONENTS

Ref. Part No. No.	Description	Ref. Part No. No.	Description
1 422594	Belt Guard	50 481309	Latch, Hood
2 481531	Hinge, Belt Guard	51 04010-01	Screw, Phillips Washer Head #10-32 x 1/2"
3 04003-07	Bolt, Carriage 1/4-20 x 1/2"	52 04031-01	Lockwasher, #10-32 External Tooth
4 04019-02	Nut, Hex Serrated Flange 1/4-20	53 04020-01	Nut, Hex #10-32
5 04003-02	Bolt, Carriage 1/4-20 x 3/4"	54 46977	Spindle Assembly (Includes items 57 thru 67)
6 422386	Brace, Engine Mounting	55 04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
7 04001-19	Bolt, Hex Head 3/8-16 x 1"	56 04063-20	Key, 1/4 x 1/4 x 1"
8 04021-09	Nut, Hex Elastic Stop 3/8-16	57 43294	Spindle Housing
9 481284	Bumper, Rubber	58 43296	Spacer, Inside
10 04019-03	Nut, Hex Serrated Flange 5/16-18	59 43297	Spindle Bushing, Bottom
11 481460	Belt, Deck Drive	60 43312	Spacer, Outside
12 482171	Belt, Pump Drive	61 43321	Shaft, PTO Deck Drive
13 481522	Spring, Main Drive	62 481022	Roller Bearing Assembly
14 451021	Pump Mounting Weldment	63 481024	Seal, 2.00 OD. x 1.50 Bore
15 43531	Base, Clutch Anti-Rotation	64 481025	Seal, 2.00 OD. x 1.625 Bore
16 04019-05	Nut, Hex Serrated Flange 7/16-14	65 481035	Nut, 1.06-18
17 43277	Spacer	66 48114-04	Grease Fitting 1/4-28 Self Tap
18 461398	Electric Clutch (52" & 61" Only)	67 48677	Relief Fitting
461399	Electric Clutch (72" Only)	68 482424	Drive Shaft
19 04063-06	Key, 1/4 x 1/4 x 1-1/2"	69 04001-109	Bolt, Hex Head 1/4-20 x 1-3/8" Full Thread
20 04030-05	Lockwasher, 7/16"	70 04001-31	Bolt, Hex Head 3/8-16 x 2.50"
21 04001-101	Bolt, Hex Head 7/16-20 x 2-1/2"	71 43504	Pivot, Idler - Short
22 48030-09	Clamp, Cable 1/2" ID.	72 04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
23 04030-03	Lockwasher, 5/16"	73 04063-20	Key, 1/4 x 1/4 x 1"
24 04020-03	Nut, Hex 5/16-18	74 04021-05	Nut, Center Lock 3/8-16
25 482169	Pulley, 5.45 OD. 1.125 Bore	75 04012-08	Screw, Set 3/8-16 x 3/8"
26 04030-02	Lockwasher, 1/4"	76 04001-45	Bolt, Hex Head 3/8-16 x 2.00"
27 422714	Base, Idler Arm	77 04020-25	Nut, 3/8-24 Right Hand Jam
28 04001-09	Bolt, Hex Head 5/16-18 x 1"	78 48464	Rod End, 3/8-24 Right Hand
29 04021-10	Nut, Hex Elastic Stop 5/16-18	79 451084	Rod Weldment, Clutch Anti-Rotation
30 04001-46	Bolt, Hex Head 3/8-16 x 2-1/4"	451377	Rod Weldment, Clutch Anti-Rot. (72" Only)
31 04041-07	Flatwasher, 3/8" (.391 x .938 x .105)	80 04069-01	Rue Pin Cotter, 3/8"
32 48181	Pulley, Idler	81 43531	Stud, Anti-Rotation
33 461079	Idler Arm W/Bearings (Includes Item 35)	82 482085	Tapered Hub, 15 MM Bore
34 04043-04	Flatwasher, 3/8 Grade 8 Special	83 04001-01	Bolt, Hex Head 1/4-20 x .75"
35 48224	Ball Bearings	84 43575	Pivot, Idler
36 04019-04	Nut, Hex Serrated Flange 3/8-16	85 04041-28	Washer
37 04001-136	Bolt, Hex Head 3/8-16 x 1-1/2"	86 423462	Reinforcement Plate
38 481398	Pulley, 6.35 Dia. Taper Bore		
39 481536	Tapered Hub, 1.00 Bore		
40 04012-05	Setscrew, Hex Socket 1/4-20 x 1/2"		
41 04001-138	Bolt, Hex Head 3/8-16 x 3-3/4"		
42 461091	Idler Arm Assembly (Includes item 35)		
43 04030-04	Lockwasher, 3/8"		
44 04020-04	Nut, Hex 3/8-16		
45 43277	Spacer		
46 04021-05	Locknut, Hex Center Lock 3/8-16		
47 48198	Pulley, Idler 5.00 Dia.		
48 481882	Pulley		
49 04063-14	Key, 5 x 5 x 25 mm		

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

ENGINE AND ATTACHING PARTS - KOHLER

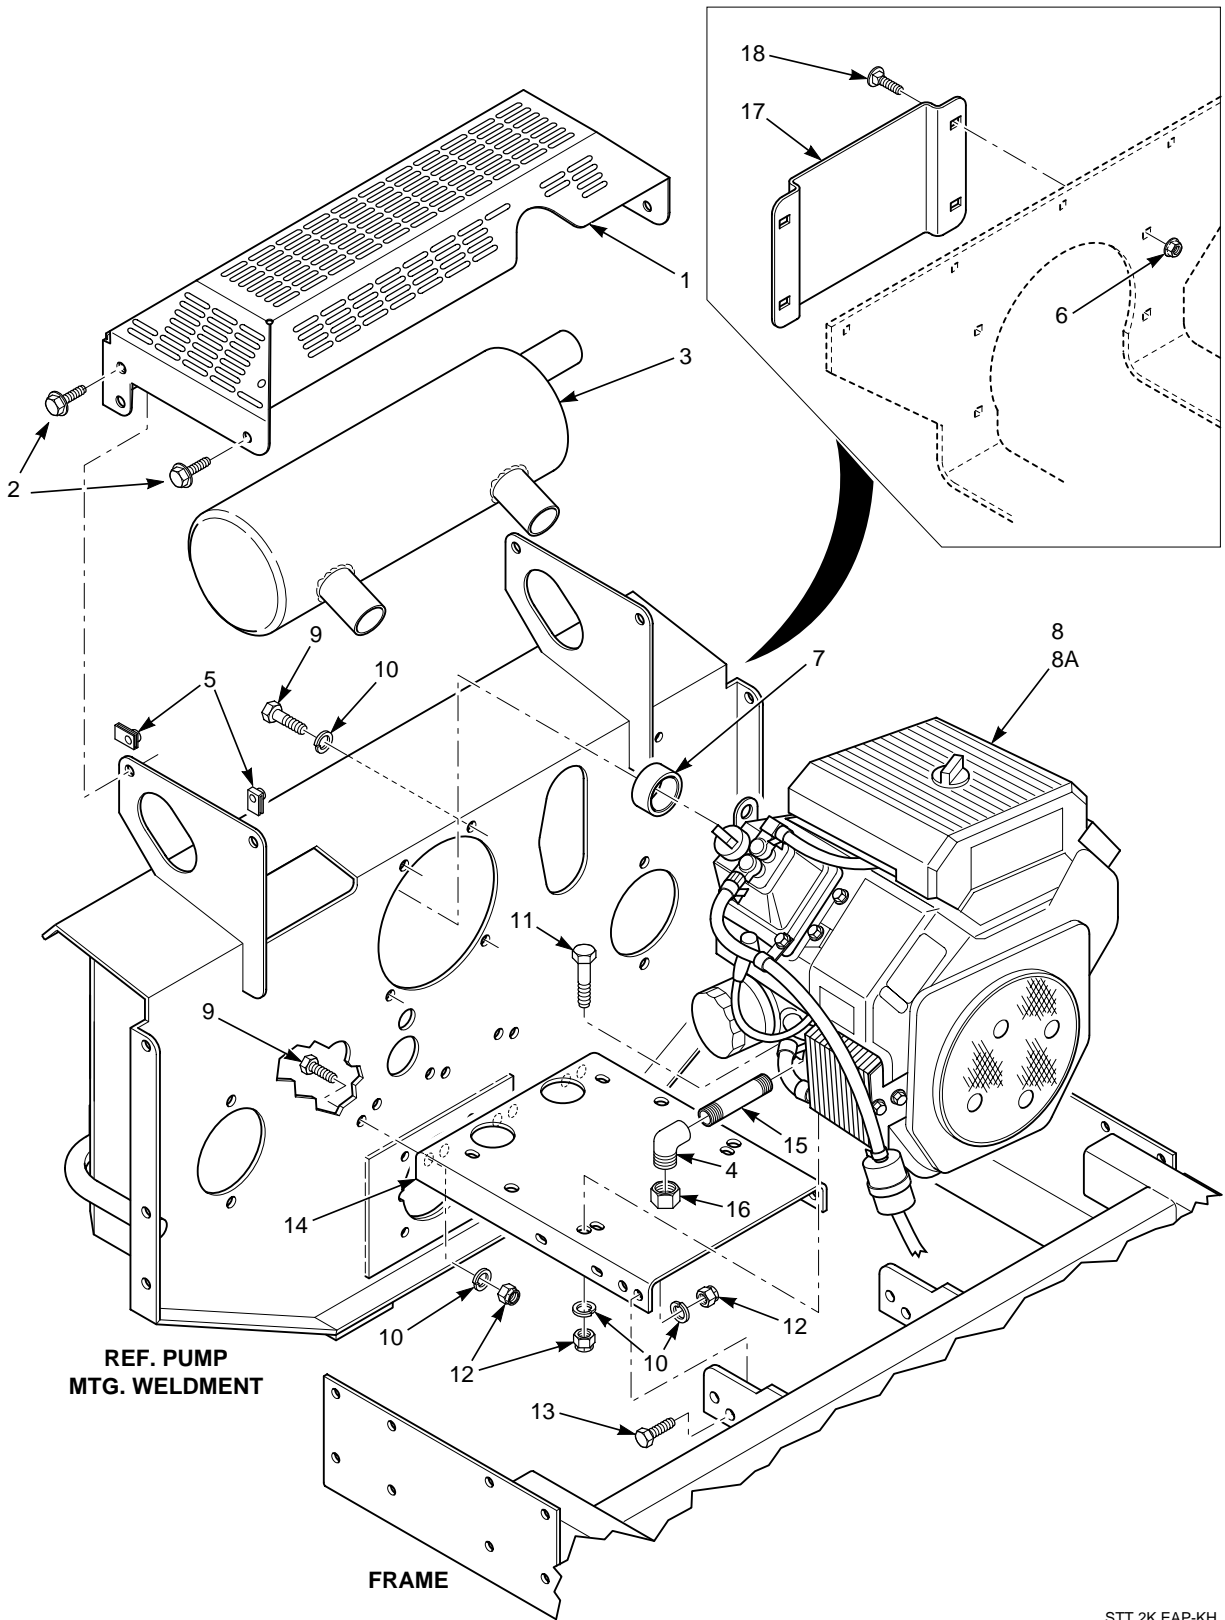


STT 2K EAP-KH

ENGINE AND ATTACHING PARTS - KOHLER

Ref. No.	Part No.	Description
1	422593	Muffler Guard
2	04017-05	Screw, Hex Serrated Flange 1/4-20 x 3/4"
3	*	Muffler, Part Of Engine (Available only through Kohler)
4	04011-09	Screw, #10-16 x 1/2"
5	04110-01	U-Nut, 1/4-20
6	481584	Exhaust Elbow
7	43421	Spacer, Engine (Kohler)
8	481758	Engine, Kohler 22CH (Available only through Kohler, Eng. Spec. PS 76510)
	481759	Engine, Kohler 25 CH (Available only through Kohler, Eng. Spec. PS 68613)
9	04001-19	Bolt, Hex Head 3/8-16 x 1"
10	04030-04	Lockwasher, 3/8" Spring
11	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
12	04021-09	Nut, Hex Elastic Stop 3/8-16
13	04001-32	Bolt, Hex Head 3/8-16 x 1-1/4"
14	422396	Plate, Engine Mounting
15	48402-01	Extension, Oil Drain 2"
16	48257	Pipe Cap, Hex 3/8"
17	422475	Rear Cover
18	04003-12	Bolt, Carriage 5/16-18 x 3/4"
19	04019-03	Nut, Hex Serrated Flange 5/16-18
20	48600-01	Street Elbow, 3/8" NPT

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

ENGINE AND ATTACHING PARTS - 22HP KAWASAKI

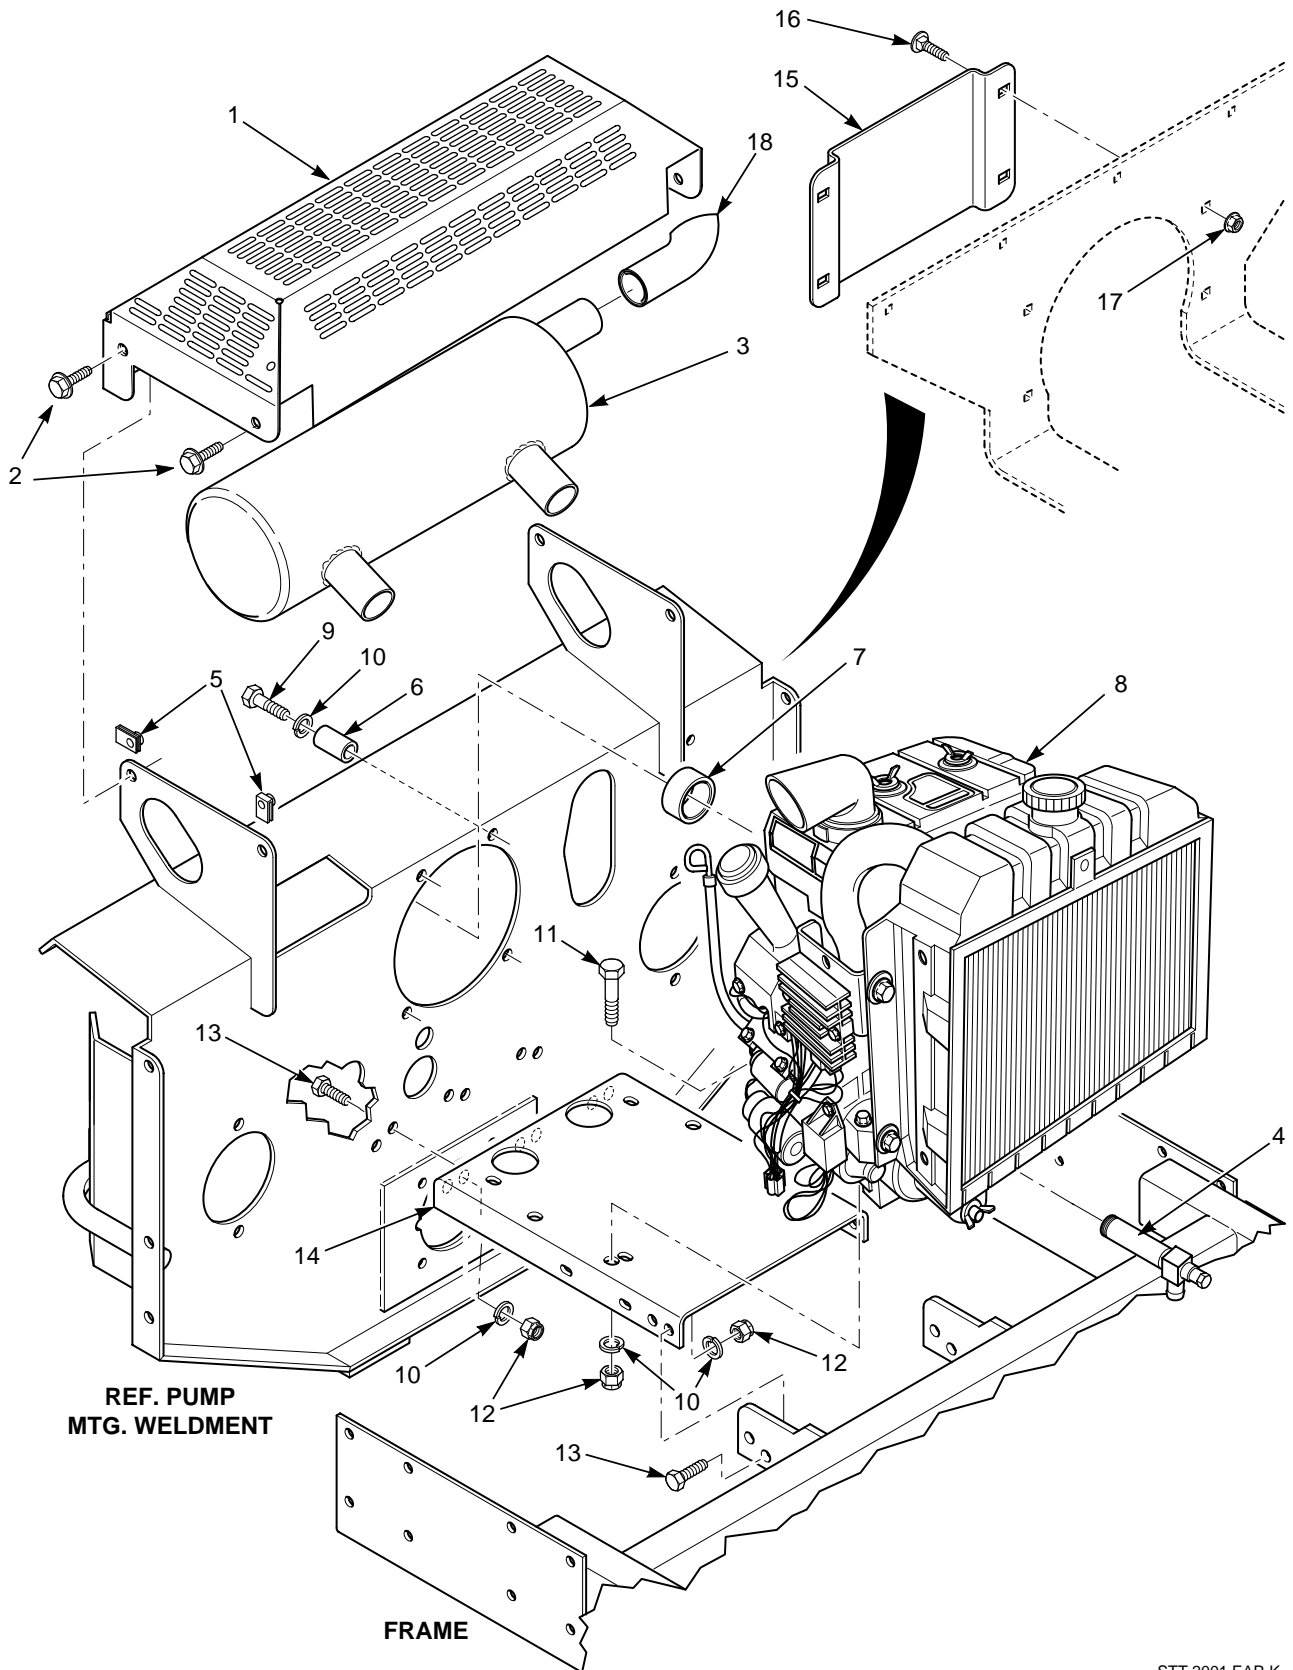


STT 2001 EAP-K

ENGINE AND ATTACHING PARTS - 22HP KAWASAKI

Ref. No.	Part No.	Description
1	451127	Muffler Guard
2	04017-05	Screw, Hex Serrated Flange 1/4-20 x 3/4"
3	481982	Muffler
4	482346	Extension, Oil Drain
5	04110-01	U-Nut, 1/4-20
6	43498	Spacer, Engine Bolt
7	43420	Spacer, Engine (Kawasaki)
8	481574	Engine, Kawasaki 22KA (Available only through Kawasaki)
9	04002-03	Bolt, M8-1.25 x 25 Grade 8.8
10	04030-04	Lockwasher, 3/8" Spring
11	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
12	04021-09	Nut, Hex Elastic Stop 3/8-16
13	04001-32	Bolt, Hex Head 3/8-16 x 1-1/4"
14	422396	Plate, Engine Mounting
15	422475	Rear Cover
16	04003-12	Bolt, Carriage 5/16-18 x 3/4"
17	04019-03	Nut, Hex Serrated Flange 5/16-18
18	481584	Exhaust Elbow

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

ENGINE AND ATTACHING PARTS - 23HP & 27HP KAWASAKI

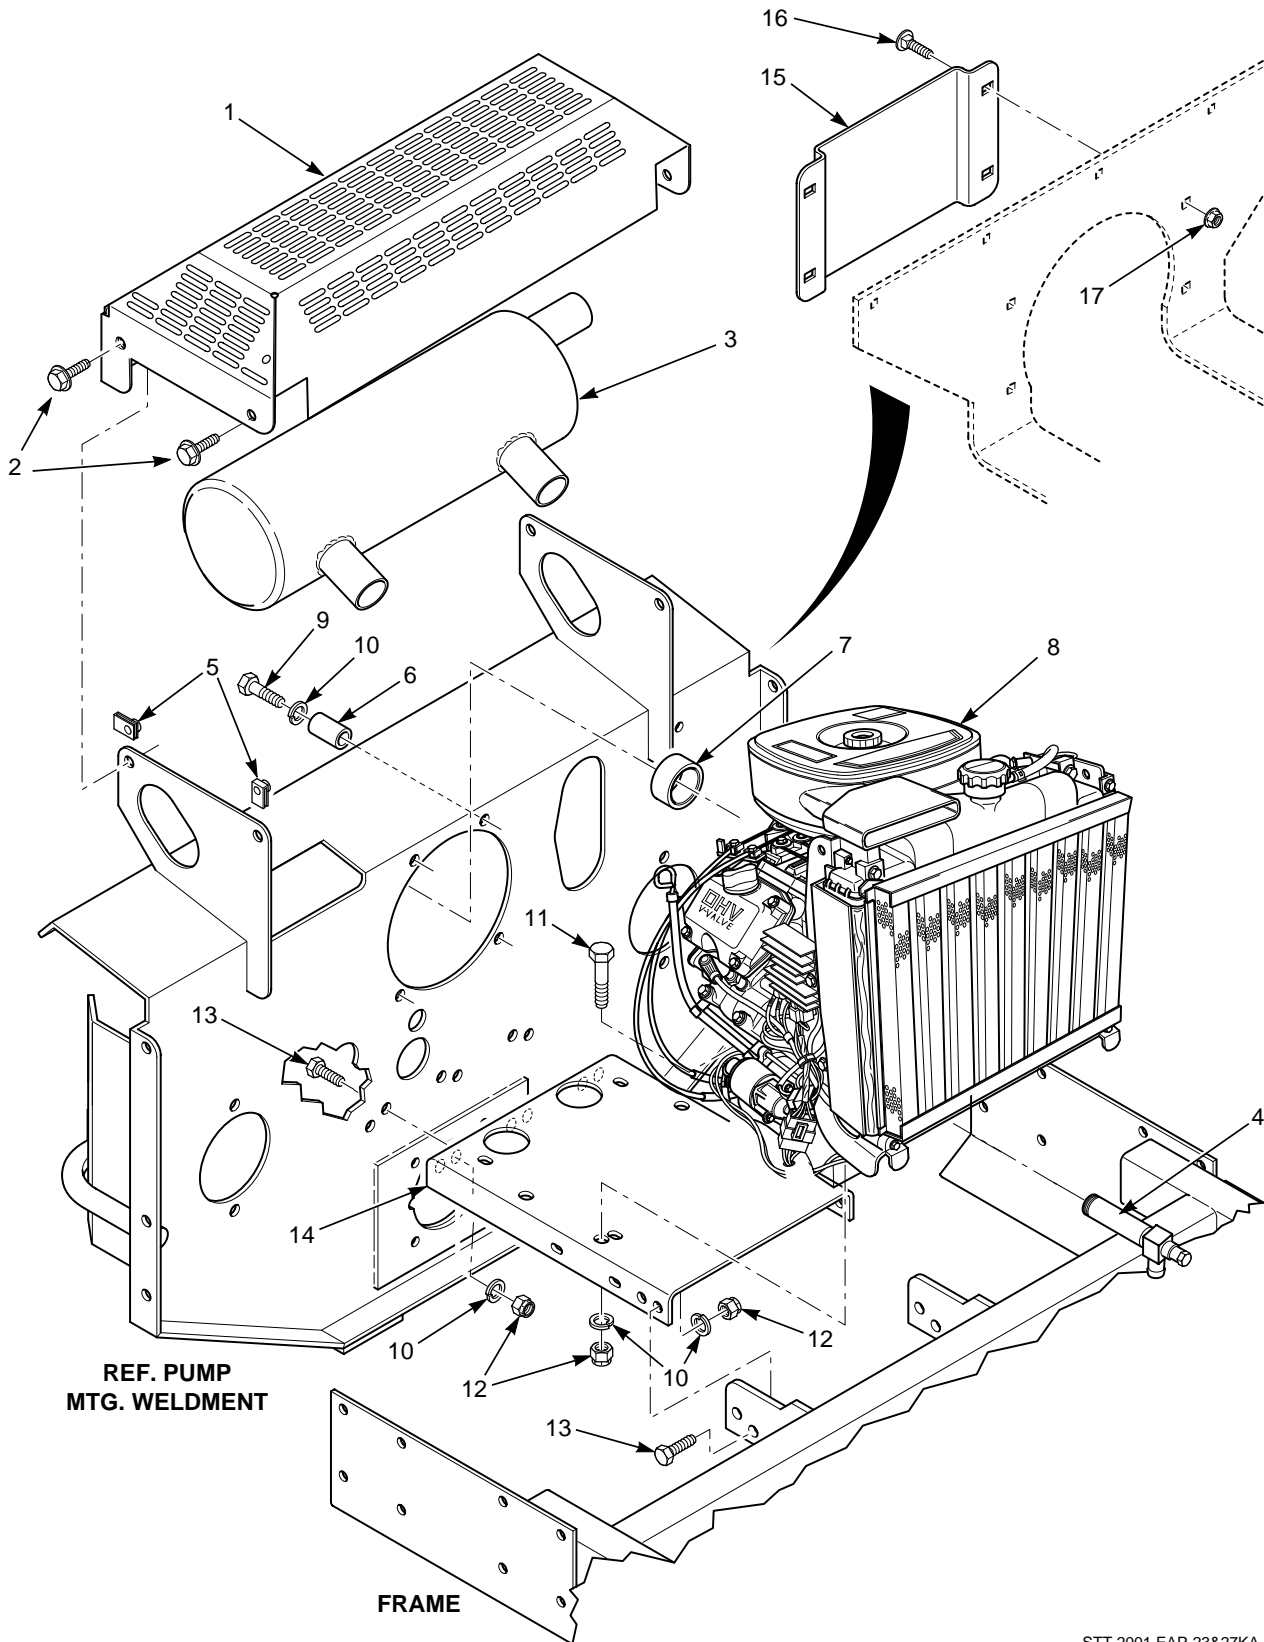


STT 2001 EAP-23&27KA

ENGINE AND ATTACHING PARTS - 23HP & 27HP KAWASAKI

Ref. No.	Part No.	Description
1	451378	Muffler Guard
2	04017-05	Screw, Hex Serrated Flange 1/4-20 x 3/4"
3	482310	Muffler
4	482351	Extension, Oil Drain
5	04110-01	U-Nut, 1/4-20
6	43498	Spacer, Engine Bolt
7	43420	Spacer, Engine (Kawasaki)
8	482410	Engine, Kawasaki 23KA (Available only through Kawasaki)
8	482271	Engine, Kawasaki 27KA (Available only through Kawasaki)
9	04002-03	Bolt, M8-1.25 x 25 Grade 8.8
10	04030-04	Lockwasher, 3/8" Spring
11	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
12	04021-09	Nut, Hex Elastic Stop 3/8-16
13	04001-32	Bolt, Hex Head 3/8-16 x 1-1/4"
14	422396	Plate, Engine Mounting
15	422475	Rear Cover
16	04003-12	Bolt, Carriage 5/16-18 x 3/4"
17	04019-03	Nut, Hex Serrated Flange 5/16-18

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

BRAKE AND STEERING COMPONENTS

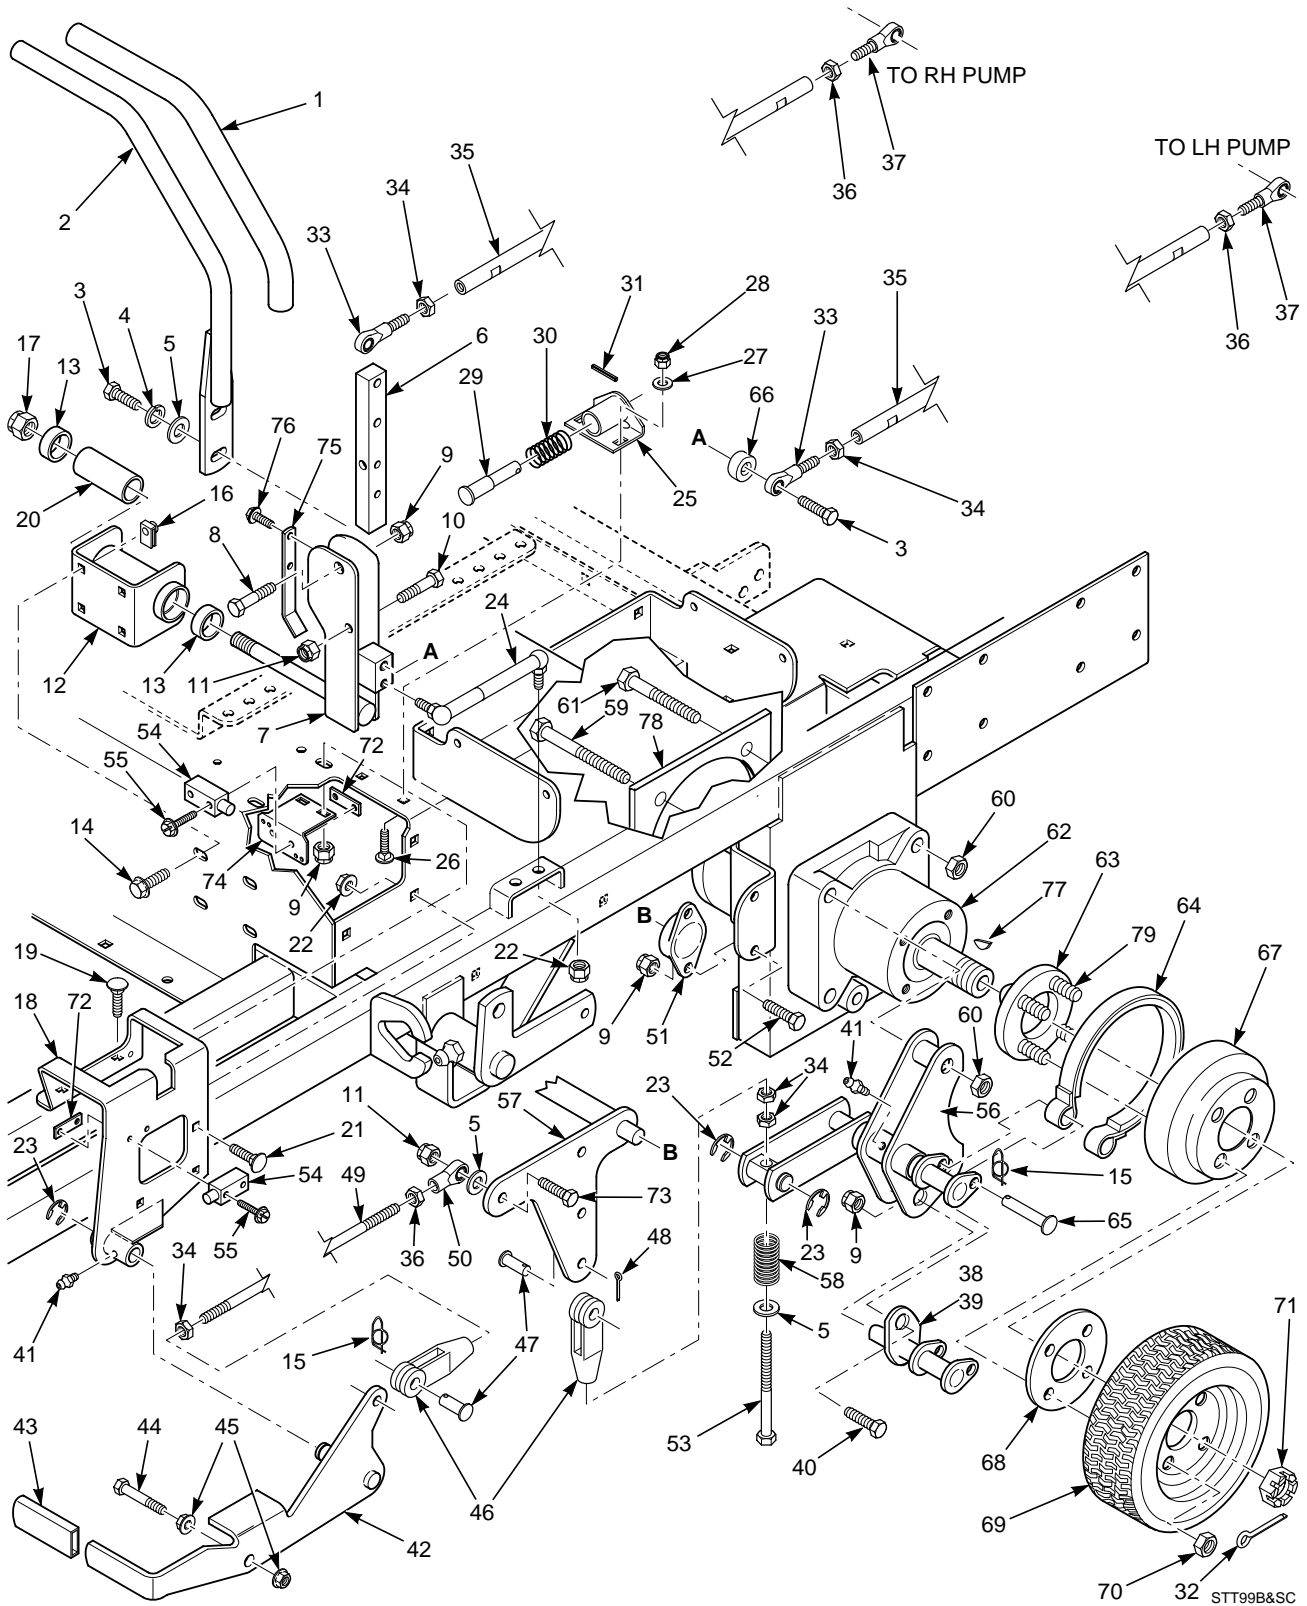


BRAKE AND STEERING COMPONENTS

Ref. Part No. No.	Description	Ref. Part No. No.	Description		
1	481599	Grip, Handle Bar	51	48796	Bushing, Self Align
2	461037	Handle Bar (Includes item 1)	52	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
3	04001-32	Bolt, Hex Head 3/8-16 x 1-1/4"	53	04001-147	Bolt, Hex Head 3/8-24 x 5-1/4", 2-3/4" Thread
4	04030-04	Lockwasher, 3/8"	54	481637	Switch
5	04041-07	Flatwasher. 3/8" (.391 x .938 x .105)	55	04010-12	Screw, Hex SLTD WSHR Head #10-32 x 3/4"
6	422372	Bar, Control Lever	56	45978	Brake Linkage, LH
7	45915	Control Lever		45979	Brake Linkage, RH
8	04001-17	Bolt, Hex Head 5/16-18 x 2"	57	45953	Bellcrank, Brake Actuator
9	04021-10	Nut, Hex Elastic Stop 5/16-18	58	48807	Spring
10	04001-45	Bolt, Hex Head 3/8-16 x 2"	59	04001-145	Bolt, Hex Head 1/2-13 x 3-1/2"
11	04021-09	Nut, Hex Elastic Stop	60	04021-19	Locknut, Hex 1/2-13 Center Lock
12	461080	Bracket, Control (Includes items 13 & 20)	61	04001-52	Bolt, Hex Head 1/2-13 x 2-1/2"
13	48224	Ball Bearings, Neutral Return	62	481529	Wheel Motor, Ross
14	04001-10	Bolt, Hex Head 5/16-18 x 1-1/4"	63	46929	Wheel Hub Assembly
15	04069-01	Pin, Rue Cotter 3/8 Dia.	64	481601	Brake Band Assembly
16	04110-02	U-Nut, 5/16-18	65	04064-03	Pin, Clevis 3/8" Dia. x 2"
17	04021-13	Nut, Hex Elastic Stop 5/8-11	66	43063	Spacer
18	45973	Bracket, Control Lever LH	67	48513	Brake Drum
	422362	Bracket, Control Lever RH	68	422487	Spacer, Wheel
19	04003-04	Bolt, Carriage 5/16-18 x 1"	69	481552	Wheel Assembly 23 x 10.5-12 (52" Only)
20	43465	Spacer, Bearing		481659	Rim W/Valve Stem (52" Only)
21	04003-12	Bolt, Carriage 5/16-18 x 3/4"		481660	Tire, 23 x 10.5-12 (52" Only)
22	04019-03	Nut, Hex Serrated Flange 5/16-18		481850	Wheel Assembly 24 x 12-12 Turf Master
23	04050-01	Ring, Retaining 5/8" External "E"		481851	Rim W/Valve Stem
24	461090	Gas Damper (Includes Ball Stud & Spring Clip)		481852	Tire, 24 x 12-12 Turf Master
	481356	Ball Stud, Gas Spring (Not Shown)	70	04028-02	Lug Nut, 1/2-20
	481357	Spring Clip, Gas Spring (Not Shown)	71	48680	Nut, Hex Castle
25	45918	Bracket, Neutral Return	72	422373	Plate, Threaded
26	04003-02	Bolt, Carriage 1/4-20 x 3/4"	73	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
27	04040-14	Flatwasher, 1/4" (.312 x .750 x .065)	74	422494	Bracket, Switch Mounting
28	04021-08	Nut, Hex Elastic Stop 1/4-20	75	422493	Bracket, Switch Actuator
29	43477	Pin, Retaining Spring	76	04017-16	Bolt, Hex Serrated Flange 5/16-18 x 3/4"
30	481389	Spring	77	04063-25	Key, Woodruff 5/16 x 1"
31	04060-01	Roll Pin, Spring 5/32 x 3/4"	78	423279	Plate Weldment, Motor Backing
32	04061-06	Pin, Cotter 9/16 x 1-1/2"	79	04008-03	Lug Bolt, 1/2-20 x 1.938"
33	481539	Rod End, Male 3/8-24 RH Thread			
34	04020-25	Nut, 3/8-24 RH Thread			
35	43463	Tube, Control Link			
36	04020-26	Nut, Hex 3/8-24 LH Thread			
37	481538	Rod End, Male 3/8-24 LH Thread			
38	451073	Brake Linkage Weldment LH			
39	451074	Brake Linkage Weldment RH			
40	04001-09	Bolt, Hex Head 5/16-18 x 1"			
41	48114-04	Grease Fitting			
42	461082	Lever, Parking Brake (Includes item43)			
43	481548	Grip, Parking Brake			
44	04001-22	Bolt, Hex Head 3/8-16 x 2-3/4"			
45	04019-04	Nut, Hex Serrated Flange 3/8-16			
46	48343-04	Clevis, Traction Control			
47	04064-02	Pin, Clevis 3/8-16 x 1-1/16"			
48	04061-02	Pin, Cotter 3/32 x .75			
49	04004-34	Rod, Parking Brake			
50	48544	Rod End, LH Thread			

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

KOHLER & KAWASAKI (52" & 61") FUEL AND HYDRAULIC SYSTEM

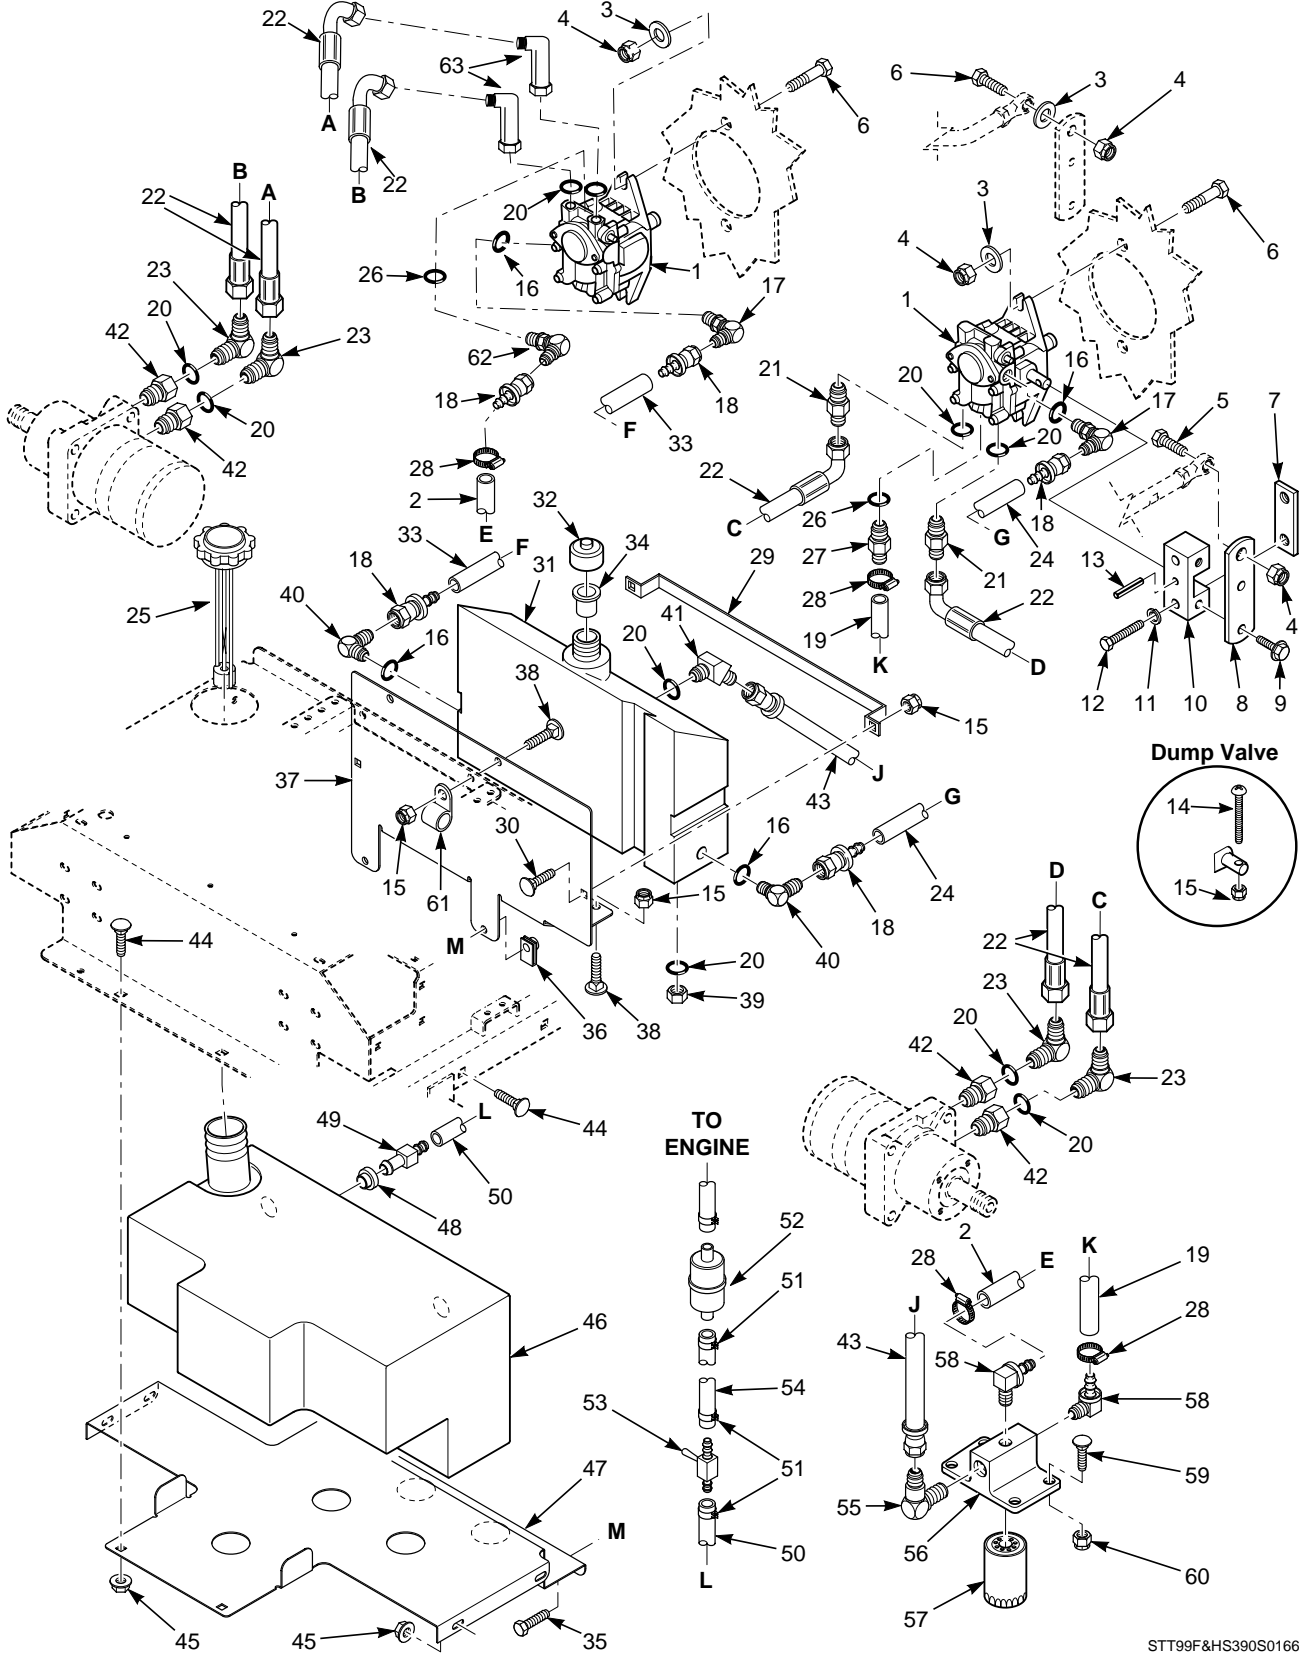

STT99F&HS390S0166


KOHLER & KAWASAKI (52" & 61") FUEL AND HYDRAULIC SYSTEM

Ref. Part No. No.	Description	Ref. Part No. No.	Description
1	48551 Pump, Sunstrand BDP-10L117	33	48811 Hose, 3/8" ID. Pushlock-16.0" (order by inch)
2	48811 Hose, 3/8" ID. Pushlock-38.0" (order by the inch)	34	481507 Insert, Filler Neck
3	04043-04 Flatwasher, 3/8" (.391 x .938 x .105) Grade 8	35	04001-01 Bolt, Hex Head 1/4-20 x 3/4"
4	04021-09 Nut, Hex Elastic Stop 3/8-16	36	04110-01 U-Nut, 1/4-20
5	04001-32 Bolt, Hex Head 3/8-16 x 1-1/4"	37	422354 Support Bracket, Hydraulic Tank
6	04001-20 Bolt, Hex Head 3/8-16 x 1-1/2"	38	04003-02 Bolt, Carriage 1/4-20 x 3/4"
7	421203 Clamp Plate, Pump Control	39	48604-02 Plug, 3/4-16 "O" Ring
8	422379 Lever, Control	40	48350-09 Elbow, 90 Degree 9/16-18 JIC x 9/16 O-Ring
9	04017-05 Screw, Hex Serrated Flange 1/4-20 x 3/4"	41	48573-02 Elbow, 45 Degree 3/4-16 JIC x 3/4-16 O-Ring
10	48829 Block, Pump Control	42	48938-02 Bushing, 7/8-14 JIC x 3/4-16 O-Ring
11	04030-02 Lockwasher, 1/4" Spring	43	482088 Hose Assembly, 1/2" ID
12	04001-59 Bolt, Hex Head 1/4-20 x 1-1/4"	44	04003-12 Bolt, Carriage 5/16-18 x 3/4"
13	04060-06 Roll Pin, Spring 3/16 x 3/4"	45	04019-03 Nut, Hex Serrated Flange 5/16-18
14	04010-10 Screw, Phillips RD. Head 1/4-20 x 2"	46	46974 Fuel Tank Assembly (Includes items 48 & 49)
15	04021-08 Nut, Hex Elastic Stop 1/4-20	47	422353 Support Bracket, Fuel Tank
16	48603-06 O-Ring	48	48309 Bushing
17	48350-09 Elbow, 90 Degree	49	481602 Hose Fitting
18	48353-06 Coupling	50	48058 Fuel Hose, 1/4" ID.-10" (order by the inch)
19	48811 Hose, 3/8" ID Push Lock	51	48059-01 Clamp, Fuel Hose
20	48603-02 O-Ring	52	** Fuel Filter
21	48572-04 Union, 3/4-16 JIC x 3/4-16 O-Ring	53	48568 Valve, Shutoff
22	481611 Hose Assembly, Pump	54	48058 Fuel Hose, 1/4" ID.-2" (order by the inch)
23	48350-02 Elbow, 90 Degree 3/4-16 JIC x 3/4-16 O-Ring	55	48573-02 Elbow, 45 Degree-1/2 NPT x 3/4 JIC
24	48811 Hose, 3/8" ID. Pushlock-19.0" (order by the inch)	56	48471-02 Oil Filter Base
25	481661 Cap, Fuel Tank W/Gauge	57	48758 Oil Filter
26	48603-03 O-Ring	58	481301-03 Elbow, 90 Degree-1/4 NPT x 3/8 Hose
27	481467-01 Connector, 7/16" O-Ring x Hose Barb	59	04003-04 Bolt, Carriage 5/16-18 x 1"
28	48136-07 Clamp, Hose 1/2"	60	04021-10 Nut, Hex Elastic Stop 5/16-18
29	421208 Strap, Hydraulic Tank	61	48030-09 Hose Clamp
30	04003-06 Bolt, Carriage 1/4-20 x 1"	62	48350-10 Elbow, 90 degree - 9/16x7/16 o-ring
31	46978 Oil Reservoir Assembly	63	481761-01 Elbow, 90 degree LG - 3/4-16 o-ring
32	481164 Cap, Hydraulic Tank		

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

** Available through the individual engine manufacturer.

27KA - 72" CUTTER DECK, FUEL AND HYDRAULIC SYSTEM

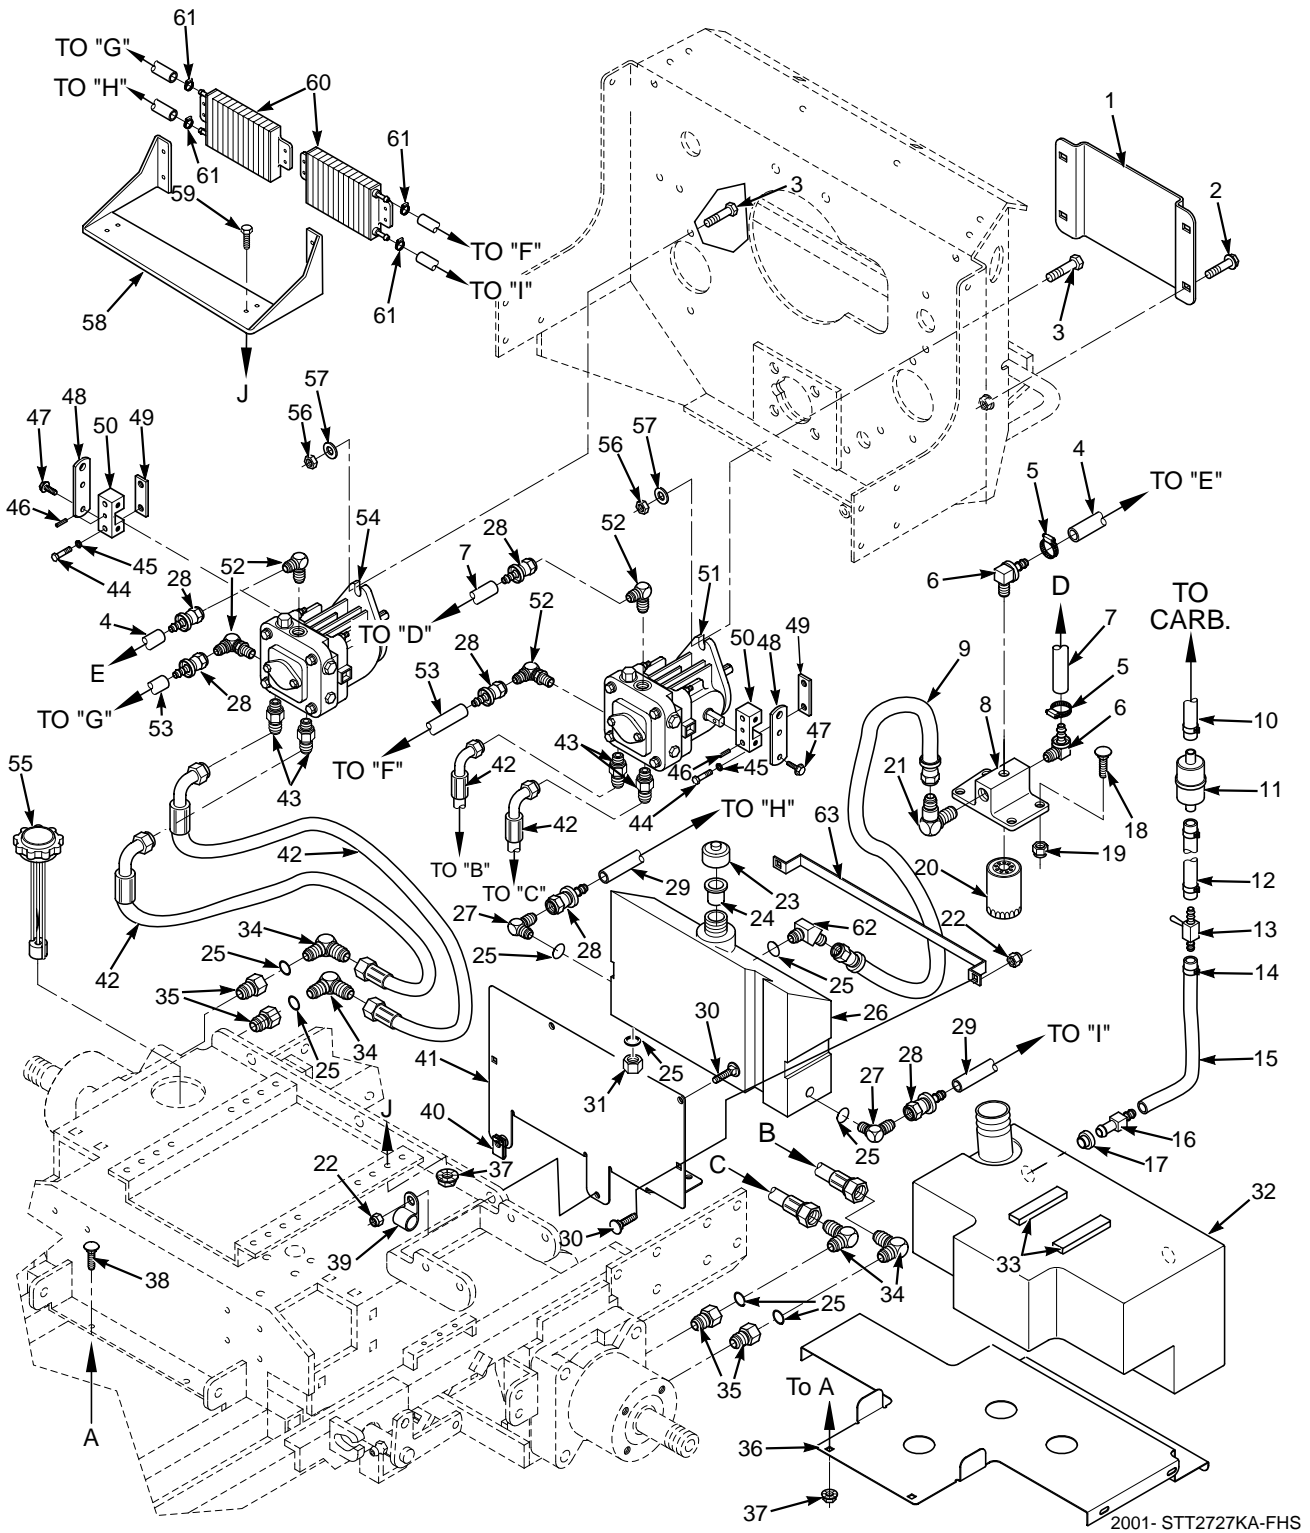


27KA - 72" CUTTER DECK, FUEL AND HYDRAULIC SYSTEM

Ref. Part No. No.	Description	Ref. Part No. No.	Description
1	422475 Rear Cover	33	48657 Pad, Rubber
2	04003-12 Bolt, Carraige 5/16-18 x .75"	34	48350-05 Elbow, 90 Degree, 7/8-14 THD
3	04001-03 Bolt, Hex Head 1/4-20 x 2.0"	35	48938-02 Bushing, 7/8-14 JIC x 3/4-16 O-Ring
4	48811 Hose, 3/8" ID Pushlock - 38.0" (order by inch)	36	422353 Support Bracket, Fuel Tank
5	48136-07 Clamp, Hose 1/2"	37	04019-03 Nut, 5/16-18 Serrated Flange
6	481301-03 Elbow, 90 Degree - 1/4 NPT x 3/8 Hose	38	04003-12 Bolt, Carraige 5/16-18 x 3/4"
7	48811 Hose, 3/8" ID Pushlock - 10.25" (order by inch)	39	48030-09 Hose Clamp
8	48471-02 Oil Filter Base	40	04110-01 U-Nut, 1/4-20
9	482088 Hose Assembly (Hydro Tank to Filter Base)	41	422354 Support Bracket, Hydraulic Tank
10	** Fuel Hose to Carb.	42	481611 Hose Assembly, Pump
11	** Fuel Filter	43	48572-04 Union, 3/4-16 JIC x 3/4-16 O-Ring
12	48058 Fuel Hose, 1/4" ID. - 2" (order by inch)	44	04001-59 Bolt, Hex Head 1/4-20 x 1-1/4"
13	48568 Valve, Shutoff	45	04030-02 Lockwasher, 1/4" Spring
14	48059-01 Clamp, Fuel Hose	46	04060-06 Roll Pin, Spring 3/16 x 3/4"
15	48058 Fuel Hose, 1/4" ID. - 10" (order by inch)	47	04017-05 Bolt, Hex Serrated Flange 1/4-20 x 3/4"
16	481602 Hose Fitting	48	422379 Lever, Control
17	48309 Bushing	49	421203 Clamp Plate, Pump Control
18	04003-04 Bolt, Carraige 5/16-18 x 1.0"	50	48829 Block, Pump Control
19	04021-10 Nut, Hex Elastic Stop 5/16-18	51	482325 Pump, Left Hand, BDP-10A 464
20	48758 Oil Filter	52	48350-09 Elbow, 90 Degree
21	48573-02 Elbow, 45 Degree 1/2NPT x 3/4 JIC	53	48811 Hose, 3/8" ID. Pushlock - 25.0" (order by inch)
22	04021-08 Nut, Hex Elastic Stop 1/4-20	54	482326 Pump, Right Hand, BDP 110A 464
23	481164 Cap, Hydraulic Tank	55	481661 Cap, Fuel Tank W/Guage
24	481507 Insert, Filler Neck	56	04021-09 Nut, Hex Elastic Stop 3/8-16
25	48603-02 O-Ring	57	04043-04 Flatwasher, 3/8" (.391 x .938 x .105) Grade 8
26	46978 Oil Reservoir Assembly	58	423399 Mounting Bracket, Oil Cooler
27	48350-09 Elbow, 90 Degree, 9/16-18 JIC x 9/16 O-Ring	59	04001-08 Bolt, Hex Head 5/16-18 x 3/4"
28	48353-07 Coupling, 3/4-16 THD	60	482025 Cooler, Oil
29	48811 Hose, 3/8 ID. Pushlock - 14.50" (order by inch)	61	48136-13 Clamp, .69 Dia.
30	04003-06 Bolt, Carraige 1/4-20 x 1.0"	62	48573-02 Elbow, 45 Degree 3/4-16 JIC x 3/4-16 O Ring
31	48604-02 Plug, 3/4-16 O-Ring	63	421208 Strap, Hydraulic Tank
32	46974 Fuel Tank Assembly (includes items 23 & 24)		

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

** Available through the individual engine manufacturer.

ELECTRICAL SYSTEM (KOHLER)

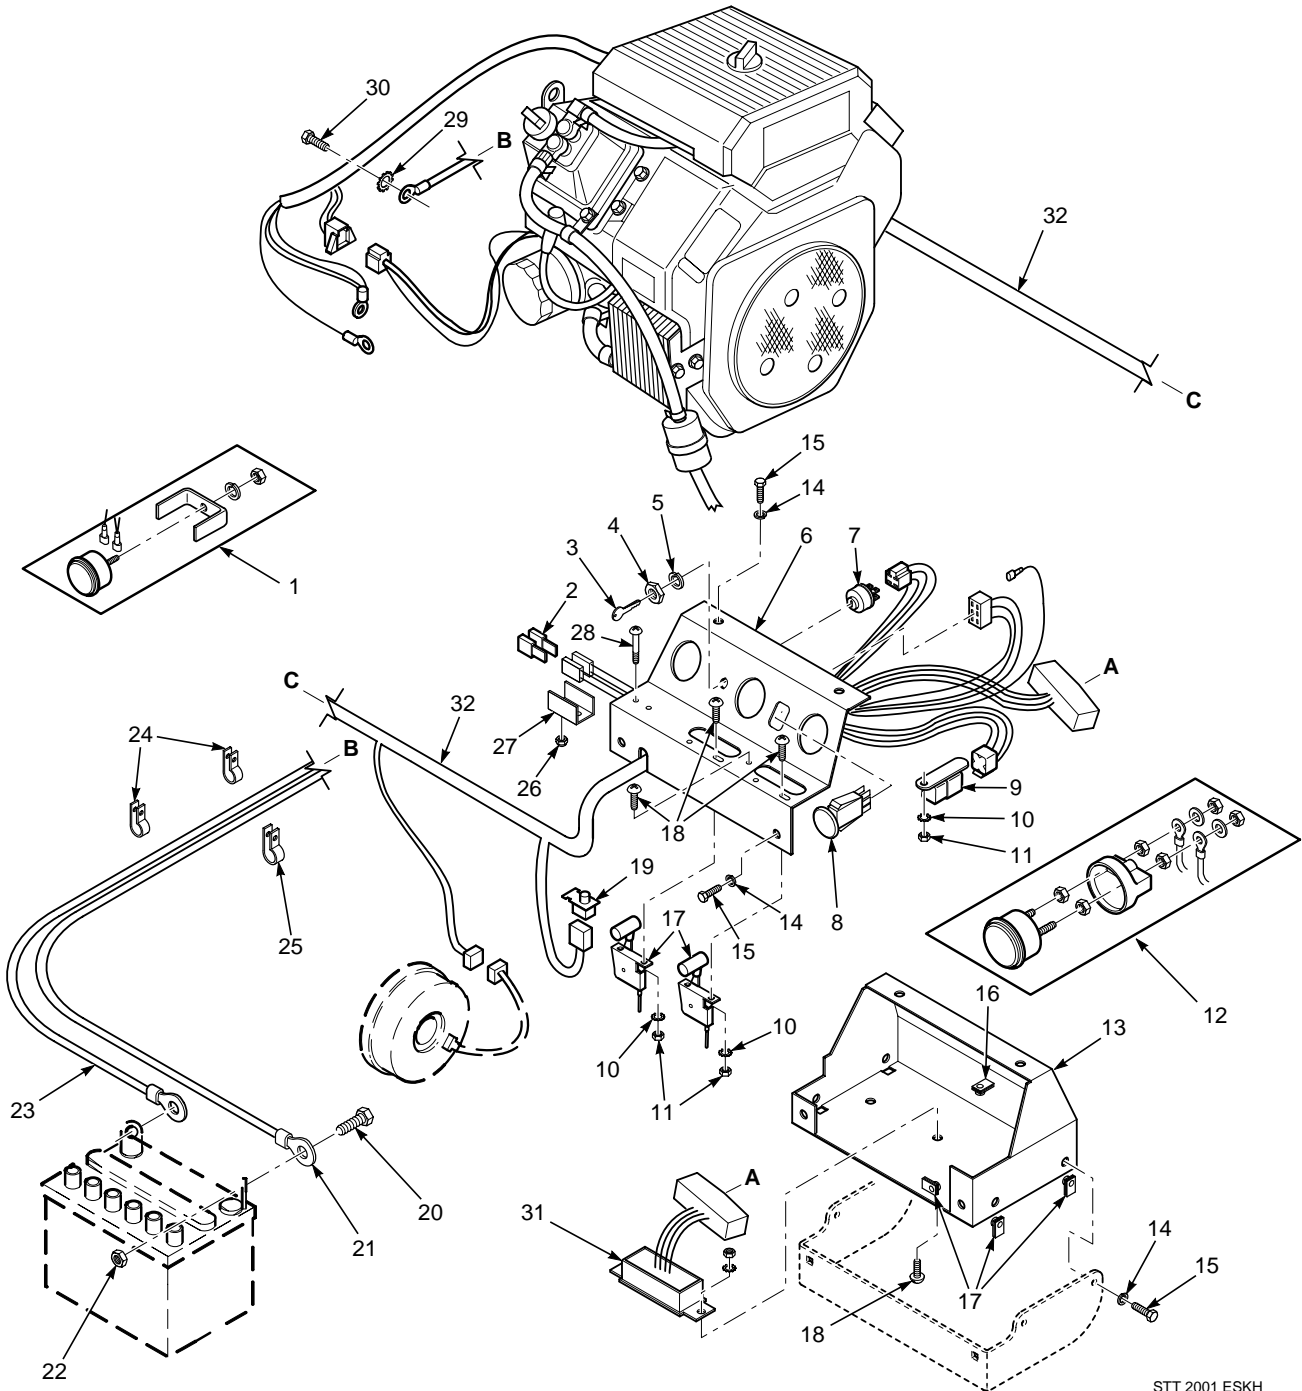


STT 2001 ESKH

ELECTRICAL SYSTEM (KOHLER)

Ref. No.	Part No.	Description
1	48023	Hour Meter
2	48298	Fuse, 20 AMP
3	48017-02	Key & Ring Assembly
4	48017-04	Nut, Hex 5/8-32
5	48017-03	Lockwasher, 5/8" Internal
6	461393	Instrument Panel, Top W/Decals
7	48798	Key Switch
8	481687	Switch, PTO
9	48788	Relay
10	04031-01	Lockwasher, #10 External Tooth
11	04020-01	Nut, Hex #10-32
12	481755	Ammeter
13	451081	Base, Instrument Panel
14	04030-02	Lockwasher, 1/4"
15	04001-01	Bolt, Hex Head 1/4-20 x 3/4"
16	04110-01	U-Nut, 1/4-20
17	481544	Throttle And Choke Controls
18	04010-01	Screw, Phillips Washer Head #10-32 x 1/2"
19	481638	Switch, Interlock-Seat
20	04001-44	Bolt, Hex Head 1/4-20 x 1/2"
21	48029-18	Cable, Battery - Red 20"
22	04020-02	Nut, Hex 1/4-20
23	48029-07	Cable, Battery - Black
24	48030-09	Clamp, Cable 1/2" ID.
25	48030-10	Clamp, Cable 3/4" ID.
26	04021-01	Nut, Hex Elastic Stop #10-32
27	42413	Bracket, Fuse Holder
28	04010-11	Screw, Phillips Washer Head #10-32 x 1-1/2"
29	04031-03	Lockwasher, 5/16" External Tooth
30	04002-12	Bolt, Hex Head M8-1.25 x 20
31	482313	Electronic Module
32	481751	Wire Harness, STT

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

ELECTRICAL SYSTEM (22HP KAWASAKI)

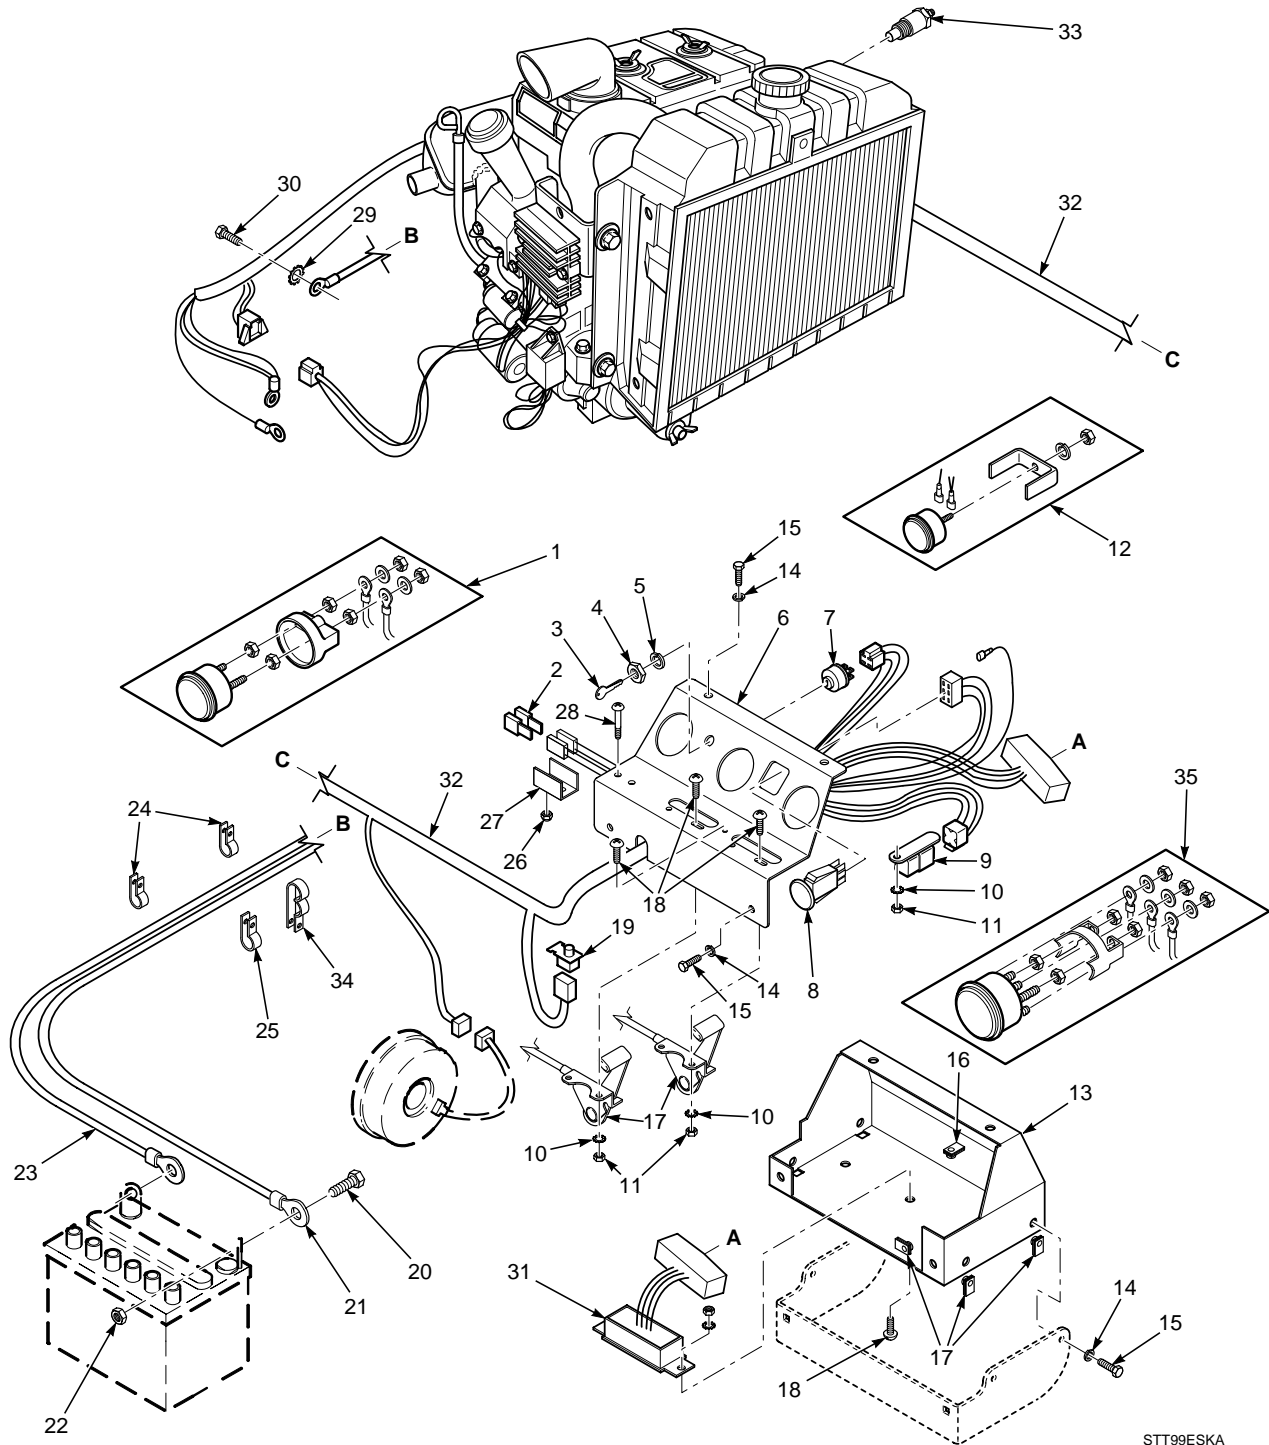


STT99ESKA

ELECTRICAL SYSTEM (22HP KAWASAKI)

Ref. No.	Part No.	Description
1	48023	Hour Meter
2	48298	Fuse, 20 AMP
3	48017-02	Key & Ring Assembly
4	48017-04	Nut, Hex 5/8-32
5	48017-03	Lockwasher, 5/8" Internal
6	461393	Instrument Panel, Top W/Decals
7	48798	Key Switch
8	481687	Switch, PTO
9	48788	Relay
10	04031-01	Lockwasher, #10 External Tooth
11	04020-01	Nut, Hex #10-32
12	481755	Ammeter
13	45981	Base, Instrument Panel
14	04030-02	Lockwasher, 1/4"
15	04001-01	Bolt, Hex Head 1/4-20 x 3/4"
16	04110-01	U-Nut, 1/4-20
17	481662	Throttle And Choke Controls
18	04010-01	Screw, Phillips Washer Head #10-32 x 1/2"
19	481638	Switch, Interlock-Seat
20	04001-44	Bolt, Hex Head 1/4-20 x 1/2"
21	48029-12	Cable, Battery - Red 36"
22	04020-02	Nut, Hex 1/4-20
23	48029-07	Cable, Battery - Black
24	48030-09	Clamp, Cable 1/2" ID.
25	48030-10	Clamp, Cable 3/4" ID.
26	04021-01	Nut, Hex Elastic Stop #10-32
27	42413	Bracket, Fuse Holder
28	04010-11	Screw, Phillips Washer Head #10-32 x 1-1/2"
29	04031-03	Lockwasher, 5/16" External Tooth
30	04002-12	Bolt, Hex Head M8-1.25 x 20
31	481668	Electronic Module
32	481752	Wire Harness, STT-KA
33	481670	Sending Unit, Water Temp.
34	48030-11	Clamp, Cable
35	481183	Water Temp. Gauge (STT - KA Only)

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

ELECTRICAL SYSTEM (23HP & 27HP KAWASAKI)

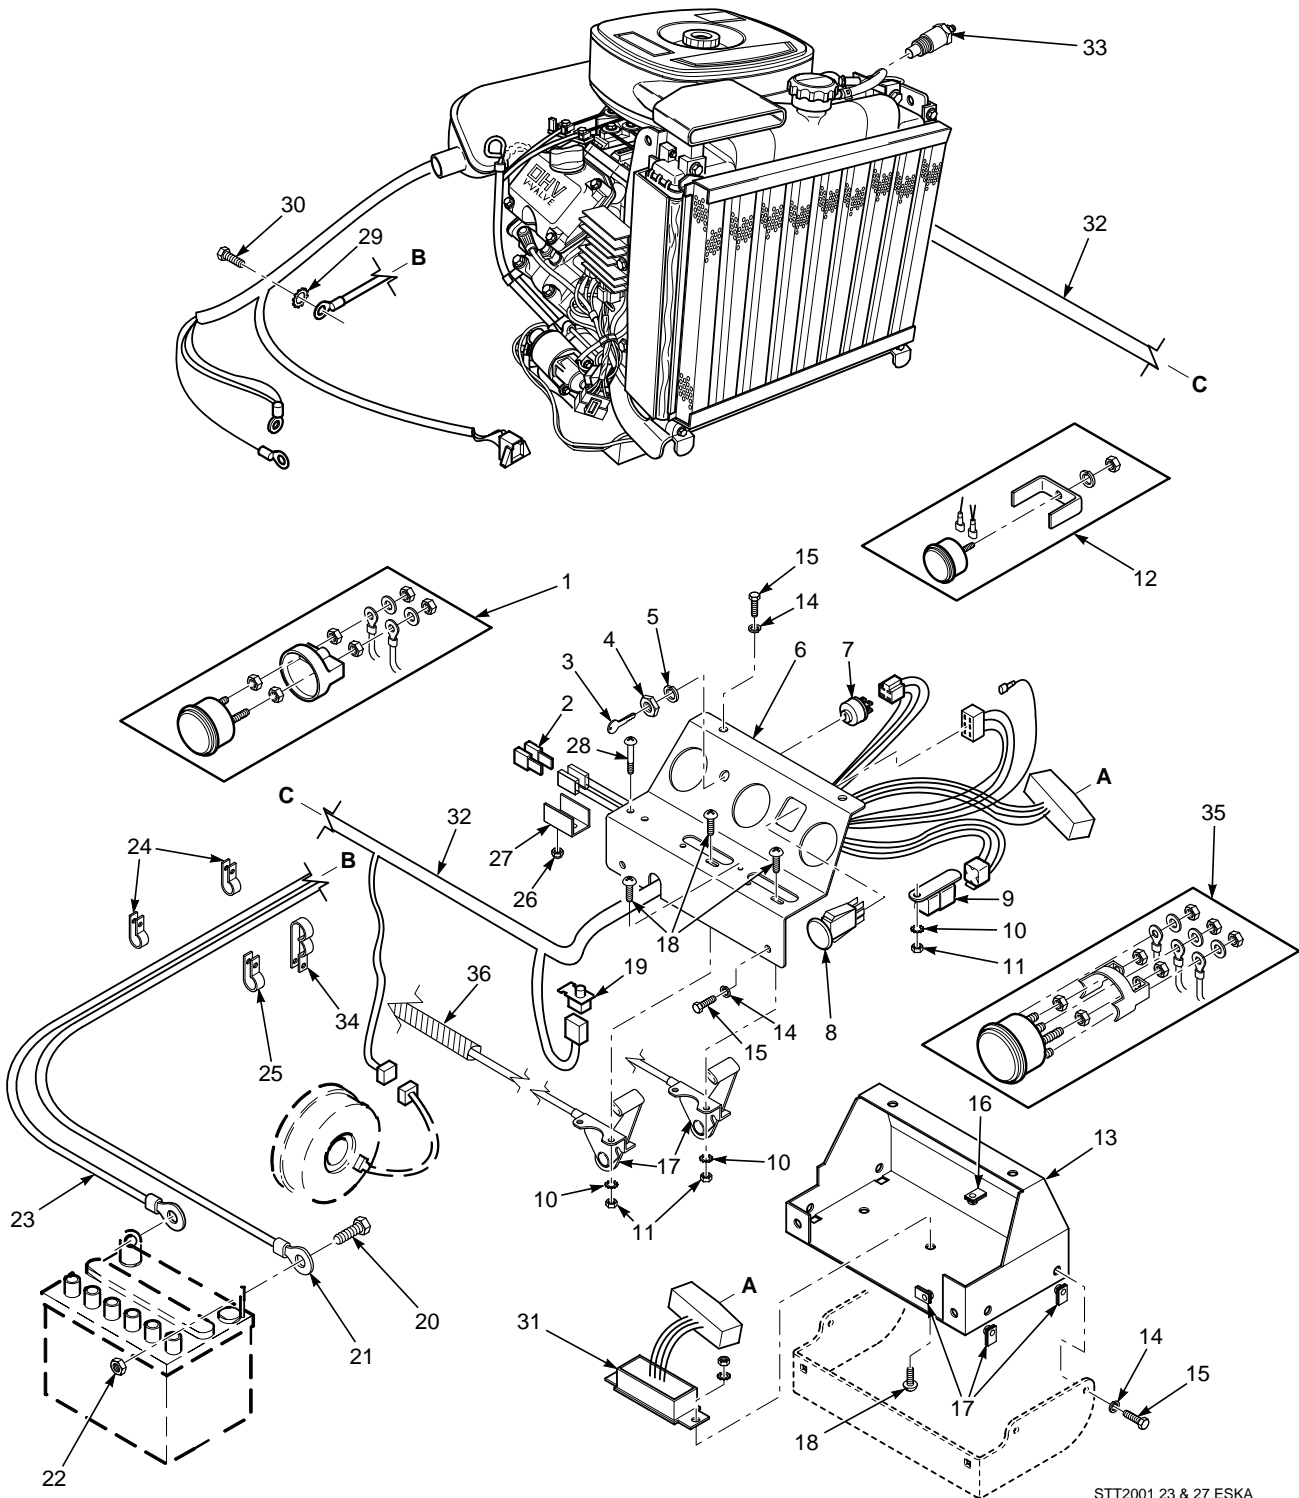


STT2001 23 & 27 ESKA

ELECTRICAL SYSTEM (23HP &27HP KAWASAKI)

Ref. No.	Part No.	Description
1	48023	Hour Meter
2	48298	Fuse, 20 AMP
3	48017-02	Key & Ring Assembly
4	48017-04	Nut, Hex 5/8-32
5	48017-03	Lockwasher, 5/8" Internal
6	461393	Instrument Panel, Top W/Decals
7	48798	Key Switch
8	481687	Switch, PTO
9	48788	Relay
10	04031-01	Lockwasher, #10 External Tooth
11	04020-01	Nut, Hex #10-32
12	481755	Ammeter
13	451081	Base, Instrument Panel
14	04030-02	Lockwasher, 1/4"
15	04001-01	Bolt, Hex Head 1/4-20 x 3/4"
16	04110-01	U-Nut, 1/4-20
17	481662	Throttle And Choke Controls
18	04010-01	Screw, Phillips Washer Head #10-32 x 1/2"
19	481638	Switch, Interlock-Seat
20	04001-44	Bolt, Hex Head 1/4-20 x 1/2"
21	48029-12	Cable, Battery - Red 36"
22	04020-02	Nut, Hex 1/4-20
23	48029-07	Cable, Battery - Black
24	48030-09	Clamp, Cable 1/2" ID.
25	48030-10	Clamp, Cable 3/4" ID.
26	04021-01	Nut, Hex Elastic Stop #10-32
27	42413	Bracket, Fuse Holder
28	04010-11	Screw, Phillips Washer Head #10-32 x 1-1/2"
29	04031-03	Lockwasher, 5/16" External Tooth
30	04002-12	Bolt, Hex Head M8-1.25 x 20
31	482313	Electronic Module
32	482309	Wire Harness, STT-23KA & 27KA Only
33	481670	Sending Unit, Water Temp.
34	48030-11	Clamp, Cable
35	481183	Water Temp. Gauge (STT - KA Only)

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.

BDP-10L HYDRAULIC PUMP ASSEMBLY FOR STT-22KA, STT-23CH, STT-23KA, STT-25CH, STT61A-27KA

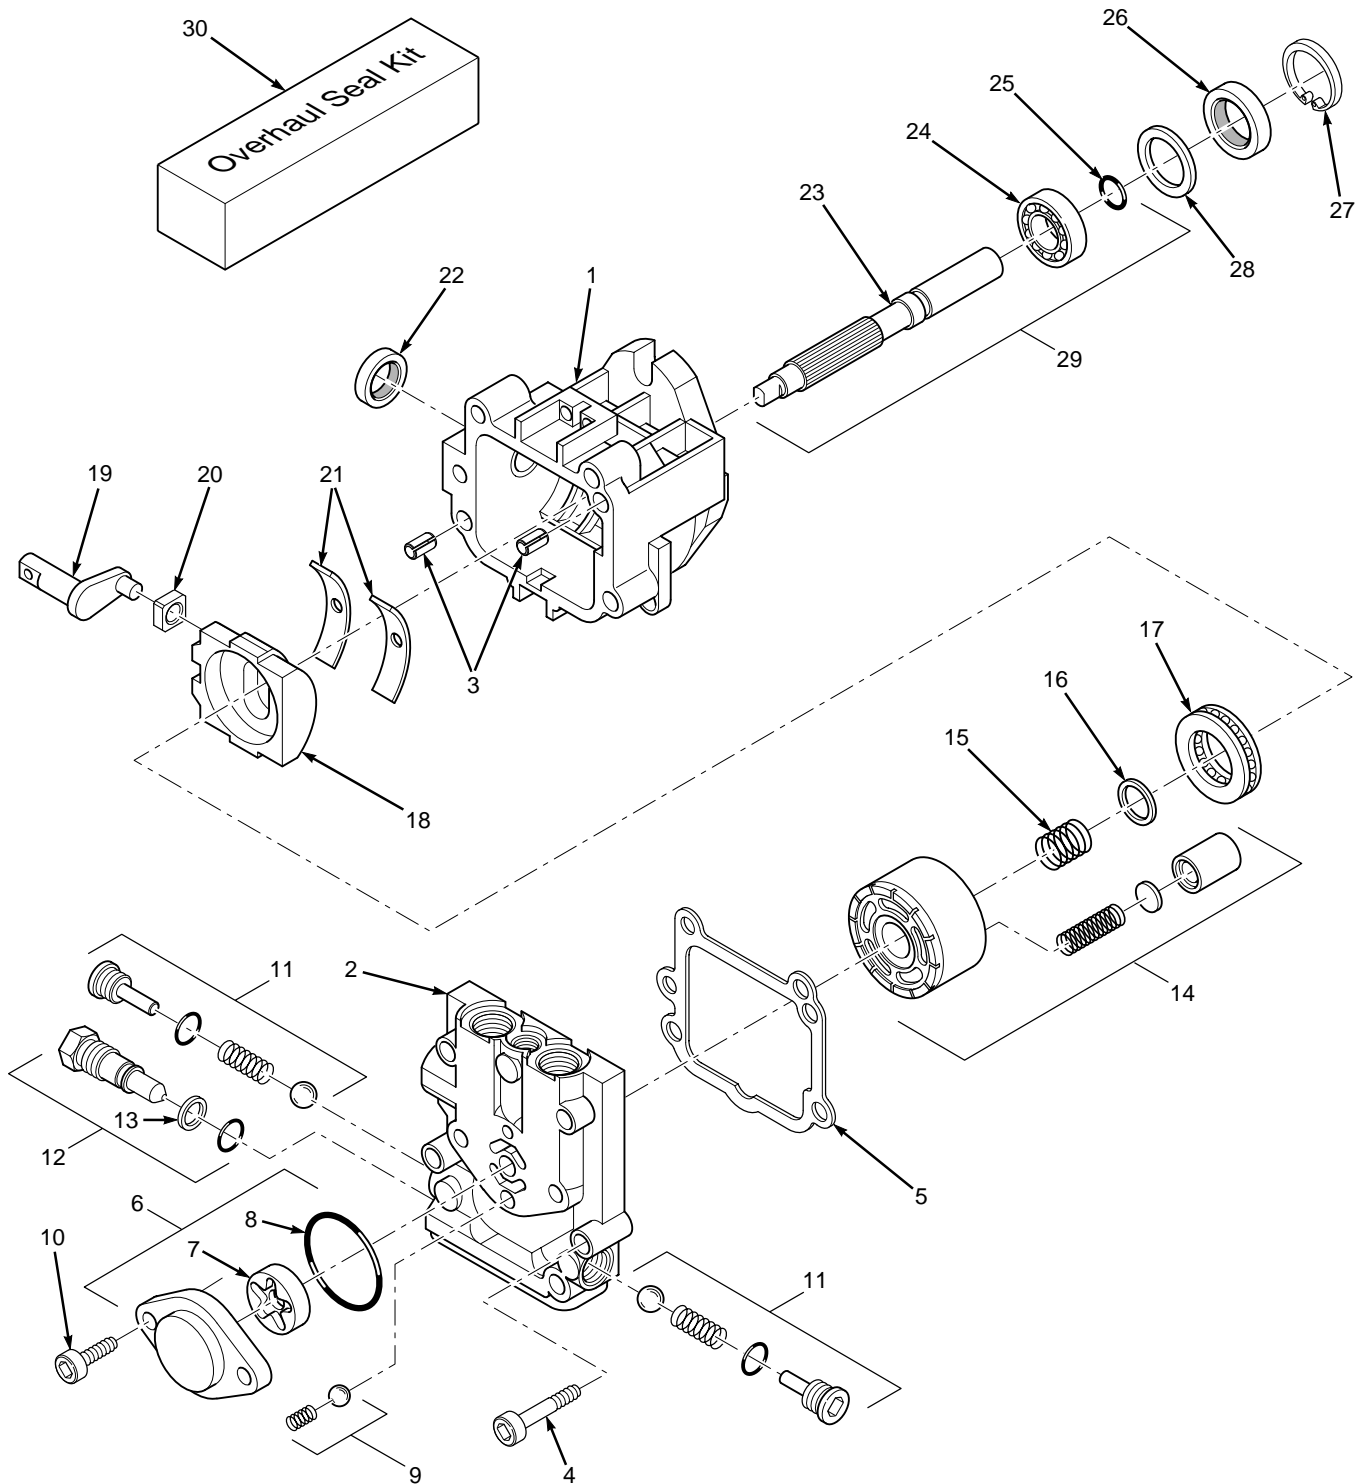

**BDP-10L HYDRAULIC PUMP ASSEMBLY FOR
STT-22KA, STT-23CH, STT-23KA, STT-25CH, STT61A-27KA**


Ref. No.	Part No.	Description
1	HG 2513017	Housing Kit (Includes Housing, Journal Bearing)
2	HG 2513016	End Cap
3	HG 9004800-2506	Straight Headless Pin
4	HG 9007314	Hex Head Screw 5/16-18x1.0
5	HG 2003067	End Cap Gasket
6	HG 2513027	Charge Pump Kit (Includes Charge Cover, Gerotor Assy., O-Ring)
7	HG 50273	Gerotor Assembly
8	HG 9004101-1340	O-Ring, Charge Pump Cover
9	HG 2510064	Charge Relief Valve Kit
10	HG 50095	Socket Head Screw
11	HG 2510027	Check Valve Kit (Includes Check Plug, Spring, O-Ring, Orifice Check Valve)
12	HG 2513030	Bypass Valve Kit (Includes Bypass Valve, O-Ring, Back-up Ring)
13	HG 9006110-0120	Backup Ring
14	HG 70079	Cylinder Block Kit
15	HG 2003014	Block Spring
16	HG 2003017	Block Thrust Washer
17	HG 2003044	Roller Thrust Bearing
18	HG 2003087	Swash Plate
19	HG 2003005	Trunnion Arm
20	HG 2000015	Guide Slot
21	HG 2003023	Cradle Bearing
22	HG 9008000-0126	Lip Seal
23	HG 2003020	Pump Shaft
24	HG 2003043	Ball Bearing
25	HG 2003016	Retaining Ring
26	HG 9008000-0128	Lip Seal
27	HG 2003052	Retaining Ring
28	HG 2003018	Spacer
29	HG 2513038	Shaft Kit (Includes Pump Shaft, Ball Bearing, Retaining Ring)
30	HG 2513018	Overhaul Seal Kit (Includes Gasket, Trunnion Seal, Input Shaft Seal, Charge Pump O-Ring)

* Common hardware which should be purchased locally. All bolts Grade 5 plated, all other fasteners zinc plated.


REPLACEMENT DECALS AND INFORMATION PLATES




1

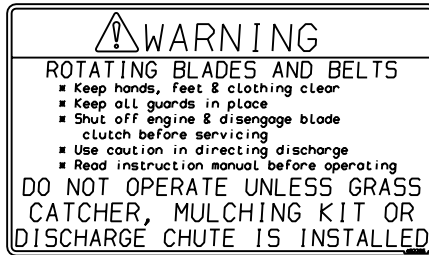

2

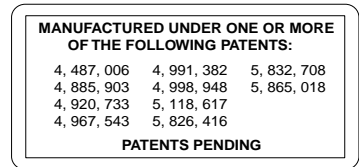


5

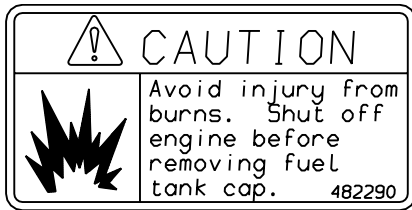

4



 3



6




7




8



9

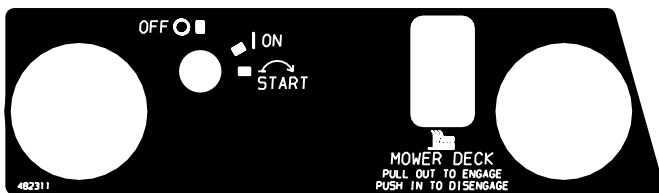


10

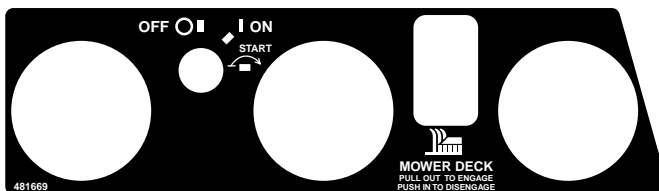


11



12

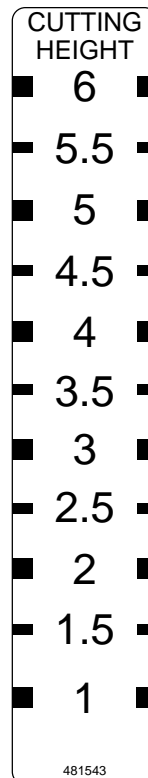

13

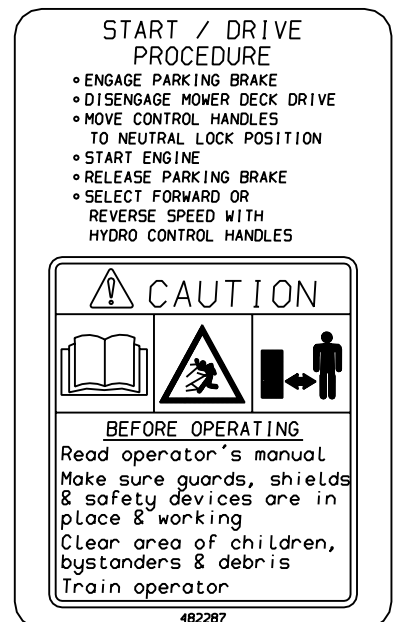


14

REPLACEMENT DECALS AND INFORMATION PLATES

Ref. No.	Part No.	Description
1	482285	Decal, Danger-Spining Blades
2	482286	Decal, Warning-Rotating Blades
3	481954	Decal, 52 Advantage
	481955	Decal, 61 Advantage
	481956	Decal, 72 Advantage
4	482290	Decal, Fuel Tank
5	48656	Decal, Patents
6	481568	Decal, Traction Control
7	48072	Decal, Heavy Duty Commercial
8	48404	Decal, MetalCraft-Made In USA
9	481039	Decal, Belt Cover
10	482311	Decal, Instrument Panel-Upper
11	481669	Decal, Instrument Panel-Upper (Kawasaki)
12	481348	Decal, Instrument Panel-Lower
13	481543	Decal, Cutting Height
14	482287	Decal, Start/Drive Procedure
15	481588	Decal, Seat Support
16	481569	Decal, Turf Tiger
17	481570	Decal, Turf Tiger
18	481664	Decal, Stripes-RH
19	481663	Decal, Stripes-LH
20	481694	Decal, Tiger

IMPORTANT ADJUSTMENT PROCEDURES
READ OPERATOR'S MANUAL FOR MORE DETAILS
 Check tire pressure-
 (Drive tires - 12 psi,
 Caster tires - 25 psi)

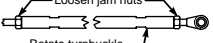NEUTRAL ADJUSTMENT
 Loosen jam nuts

 Rotate turnbuckle
 With an operator in the seat, engine running, control levers in neutral and the parking brake disengaged - adjust control linkage. Loosen jam nuts. If wheel rotates forward, adjust turnbuckle CCW. If wheel rotates rearward, adjust turnbuckle CW. Adjust until drive wheel stops turning. Tighten jam nuts. Repeat for opposite side.

TRACKING ADJUSTMENT
 If the machine pulls to the right, adjust LH control linkage CCW to slow left wheel. If the machine pulls to the left, adjust RH control linkage CCW to slow right wheel. Readjust neutral if necessary.


Gearbox lubricant:
 SAE 80W90 gear oil

FREE WHEEL OPERATION
 To move machine without running the engine, rotate both dump valve levers located at the LH side of the pumps CCW 1/2 turn to "freewheel" positions. Return levers to original position to operate the mower.

HYDRAULIC TANK FLUID LEVEL
 Check hydraulic fluid level daily while fluid is cool. Fluid level should be 3-1/4" below top of filler neck. Fill with SAE 20W50 motor oil only.

IMPORTANT!
 Do not overfill. Room for hot fluid expansion must be allowed or resulting expansion may cause leaks in the system.

481588

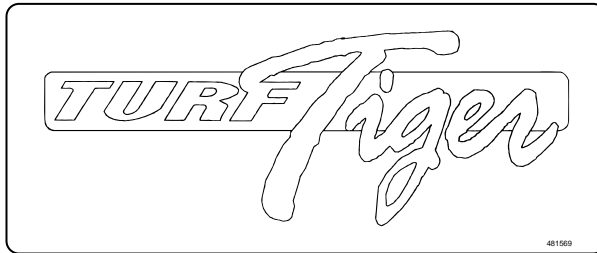

16




17




20

15

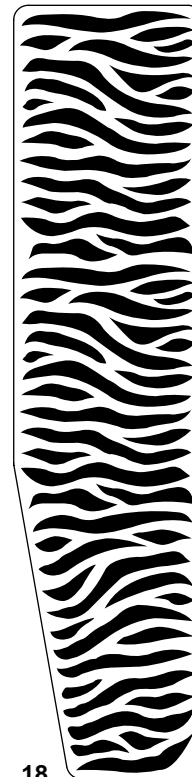


18

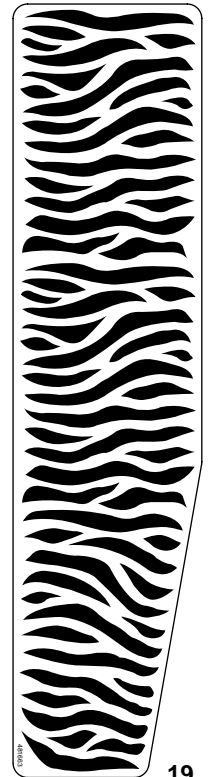


19

ELECTRICAL SCHEMATIC (KOHLER)

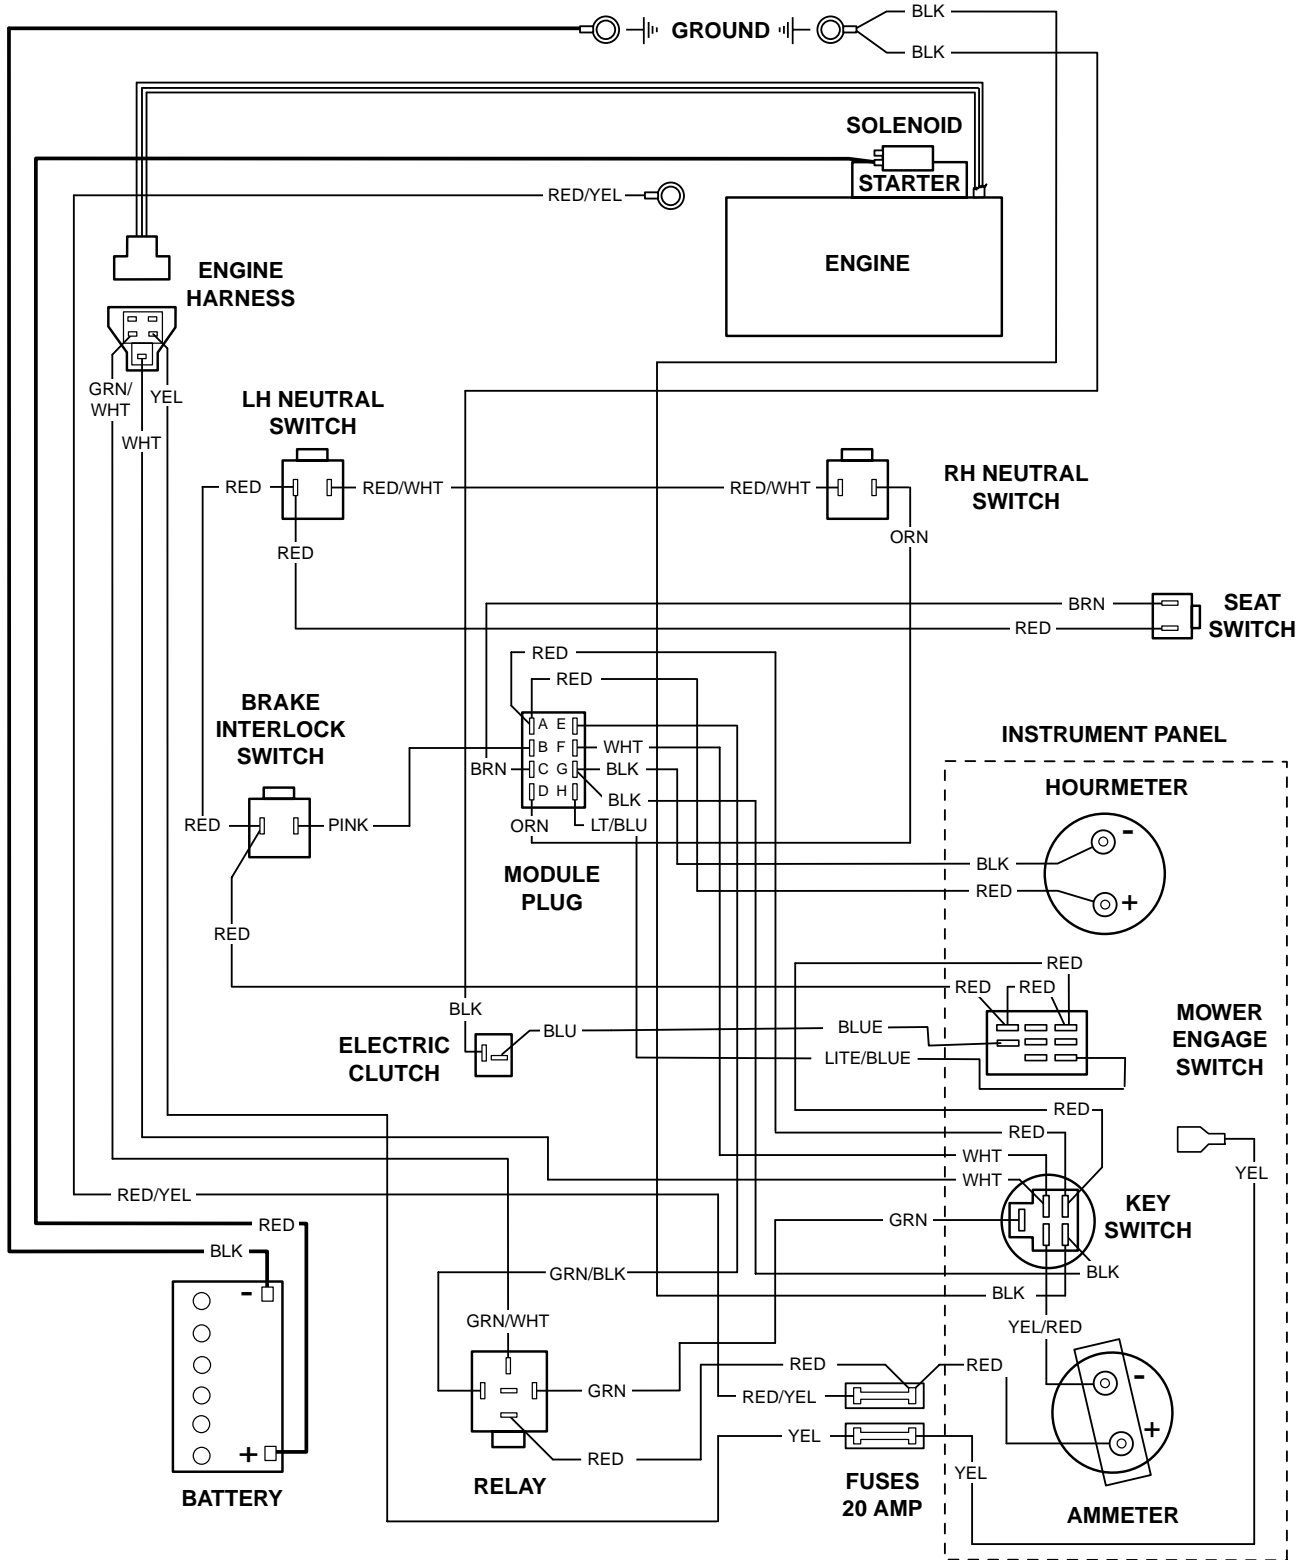


STT99SKH

ELECTRICAL SCHEMATIC (22HP KAWASAKI)

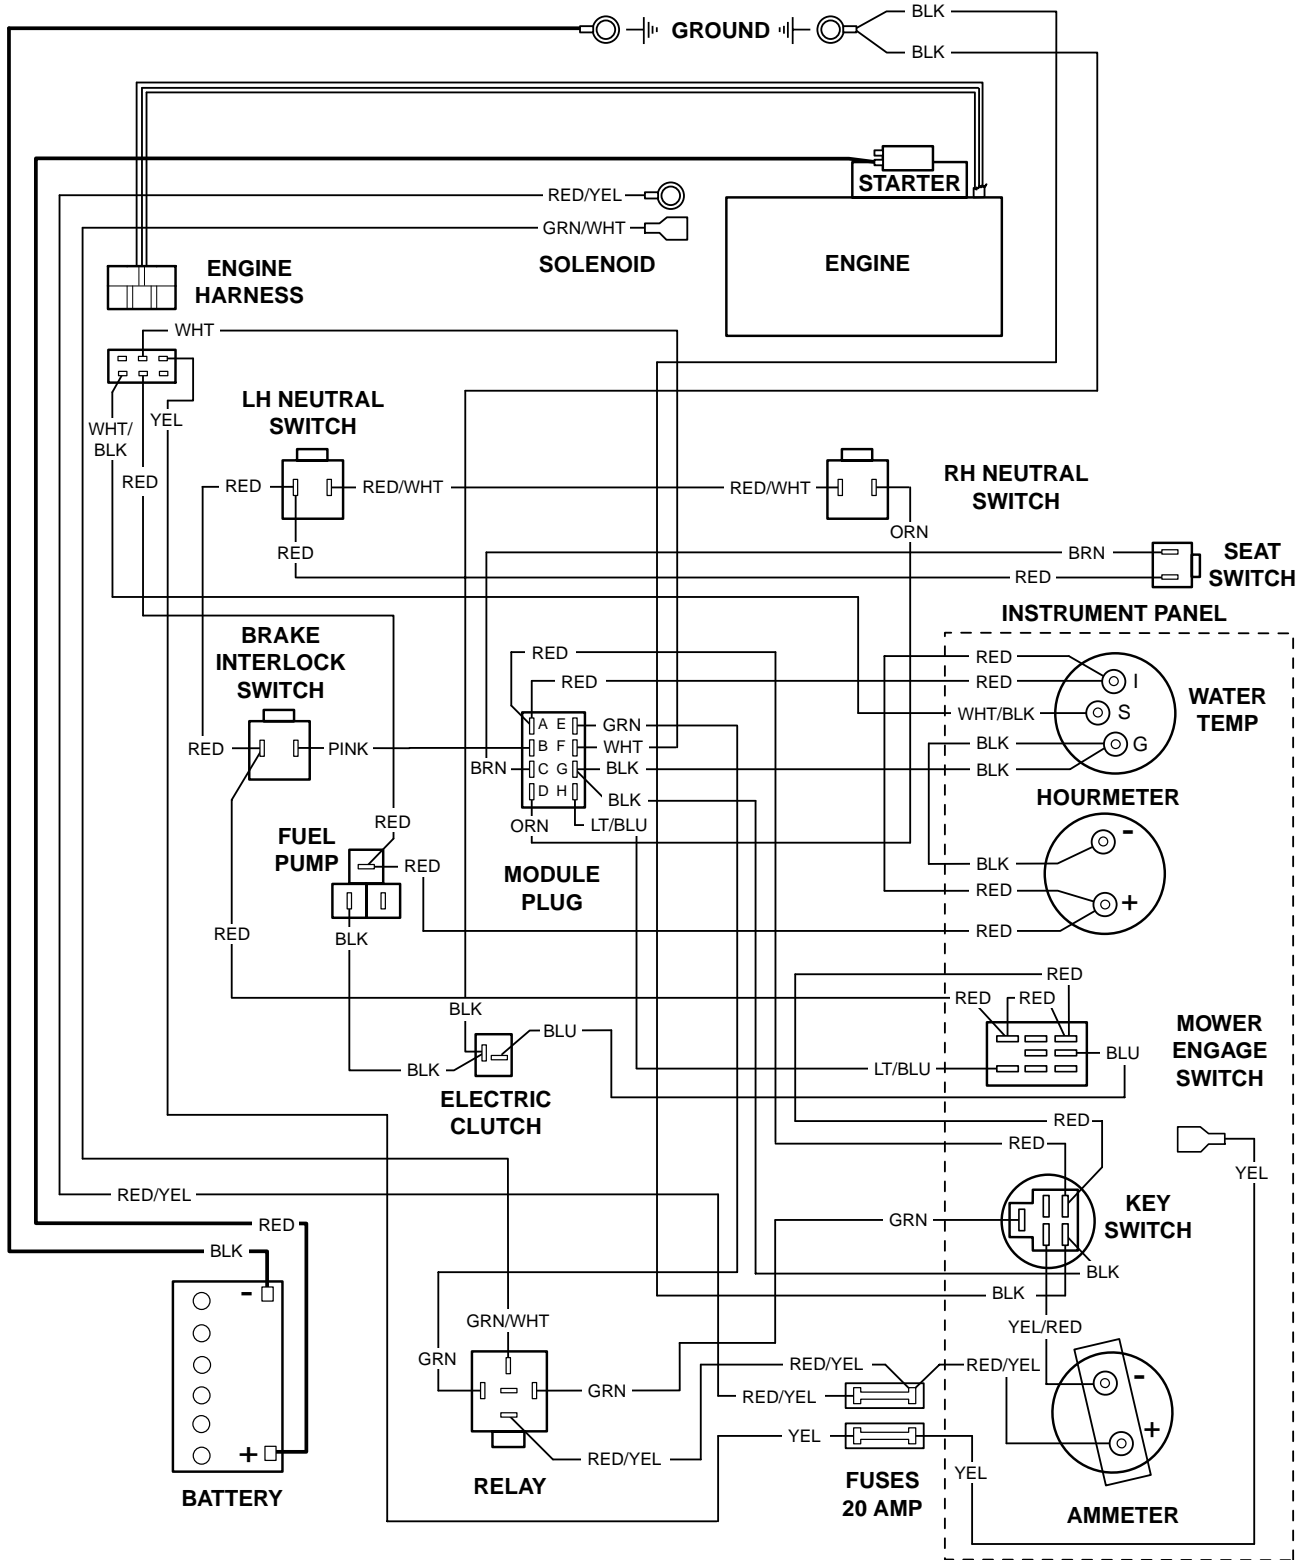

STT99SKA

ELECTRICAL SCHEMATIC (23HP & 27HP KAWASAKI)

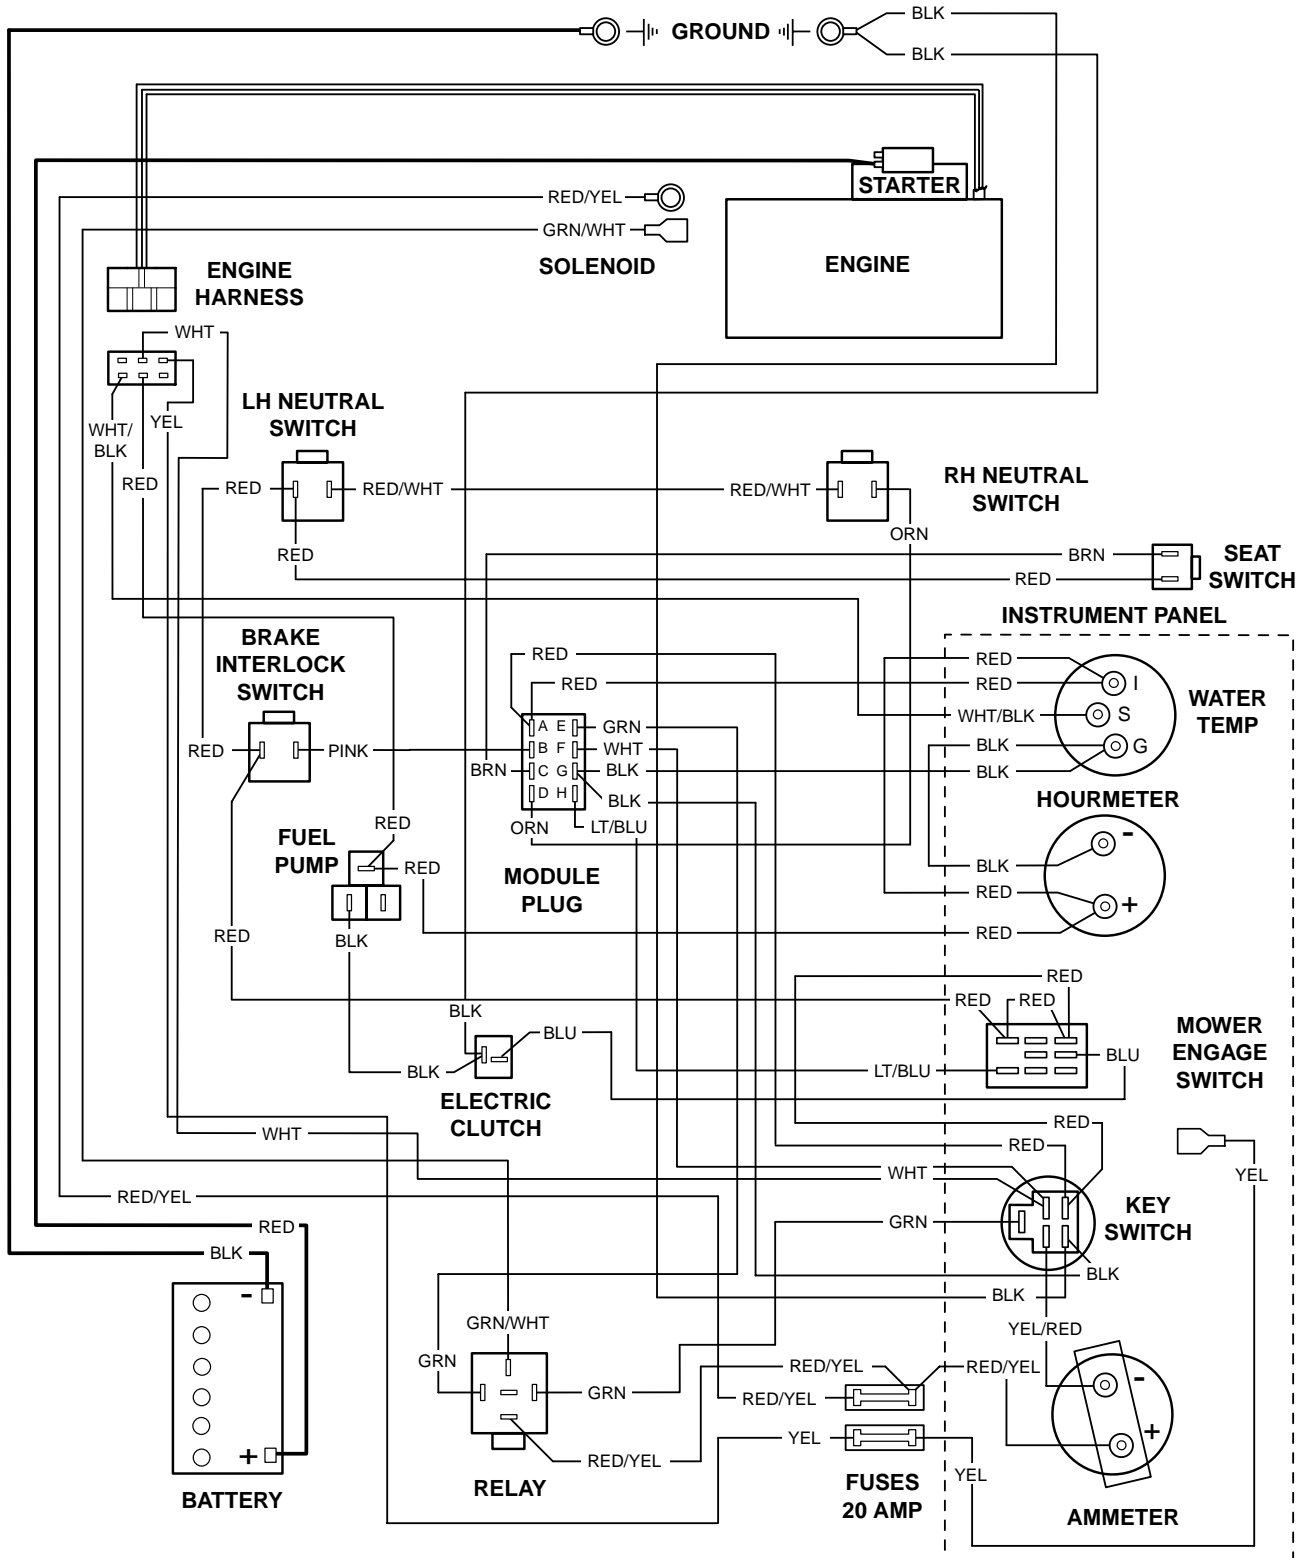

STT2001 23&27HP SKA

NOTES

LIMITED WARRANTY - COMMERCIAL EQUIPMENT

Any part of the Scag commercial mower manufactured by Scag Power Equipment and found, in the reasonable judgment of Scag, to be defective in materials or workmanship, will be repaired or replaced by an Authorized Scag Service Dealer without charge for parts and labor. This warranty is limited to the original purchaser and is not transferable. Proof of purchase will be required by the dealer to substantiate any warranty claims. All warranty work must be performed by an Authorized Scag Service Dealer.

This warranty is limited to the following specified periods from the date of the original retail purchase for defects in materials or workmanship:

- * Wear items including drive belts, blades, hydraulic hoses and tires are warranted for ninety (90) days.
- * Batteries are covered for ninety (90) days.
- * Frame and structural components including oil reservoir, fittings, and oil coolers are warranted for 1 year.
- * Cutter decks are warranted against cracking for a period of three (3) years. (Parts and labor 1st year; Parts only 2nd and 3rd year) The repair or replacement of the cutter deck will be at the option of Scag Power Equipment. We reserve the right to request components for evaluation. This warranty does not cover any mower that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual.
- * Engines and electric starters are covered by the engine manufacturer's warranty period.
- * Major drive system components (hydraulic pumps and hydraulic motors only) are warranted for two (2) years by Scag Power Equipment. (Parts and labor 1st year; Parts only 2nd year) (Two year warranty excludes fittings, hoses, cooling system, oil reservoir, drive belts, transaxles). The repair or replacement of the hydraulic pump or hydraulic motor will be at the option of Scag Power Equipment. This warranty does not cover any mower that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual.
- * Electric clutches have a Limited Warranty for 2 year (Parts and labor 1st year; Parts only 2nd year).
- * Cutter Spindle Assemblies 46631 have a Limited Warranty for three years (Parts and labor 1st year; Parts only 2nd and 3rd year).
- * Any Scag product used for rental purposes is covered by a 90 day warranty.

The Scag mower, including any defective part must be returned to an Authorized Scag Service Dealer within the warranty period. The expense of delivering the mower to the dealer for warranty work and the expense of returning it to the owner after repair will be paid for by the owner. Scag's responsibility is limited to making the required repairs and no claim of breach of warranty shall be cause for cancellation or rescission of the contract of sale of any Scag mower.

This warranty does not cover any mower that has been subject to misuse, neglect, negligence, or accident, or that has been operated in any way contrary to the operating instructions as specified in the Operator's Manual. The warranty does not apply to any damage to the mower that is the result of improper maintenance, or to any mower or parts that have not been assembled or installed as specified in the Operator's Manual and Assembly Manual. The warranty does not cover any mower that has been altered or modified, changing performance or durability. In addition, the warranty does not extend to repairs made necessary by normal wear, or by the use of parts or accessories which, in the reasonable judgment of Scag, are either incompatible with the Scag mower or adversely affect its operation, performance or durability.

Scag Power Equipment reserves the right to change or improve the design of any mower without assuming any obligation to modify any mower previously manufactured. All other implied warranties are limited in duration to the one (1) year warranty period or ninety (90) days for mowers used for rental purpose. Accordingly, any such implied warranties including merchantability, fitness for a particular purpose, or otherwise, are disclaimed in their entirety after the expiration of the appropriate one year or ninety day warranty period. Scag's obligation under this warranty is strictly and exclusively limited to the repair or replacement of defective parts and Scag does not assume or authorize anyone to assume for them any other obligation. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Scag assumes no responsibility for incidental, consequential or other damages including, but not limited to, expense for gasoline, expense of delivering the mower to an Authorized Scag Service Dealer and expense of returning it to the owner, mechanic's travel time, telephone or telegram charges, rental of a like product during the time warranty repairs are being performed, travel, loss or damage to personal property, loss of revenue, loss of use of the mower, loss of time or inconvenience. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

© 2000
SCAG POWER EQUIPMENT
DIVISION OF METALCRAFT OF MAYVILLE, INC.

PART NO. 03092
PRINTED 7/00
PRINTED IN USA